
GasEye

Symphony

User Manual

A I R O P T I C TM

GasEye Symphony



Manufacturer:	Airoptic Sp. z o.o.
Adress:	ul. Rubiez 46B, 61-612 Poznan, Poland
Phone number:	+48 61 6272 128
E-mail address:	info@airoptic.pl
Web address:	www.airoptic.pl
Product information:	Gas analyzer
Application:	Extractive analyzer
Brand name:	GasEye Symphony GasEye Symphony Ex2

TABLE OF CONTENTS

1.	INTRODUCTION.....	10
1.1.	GENERAL INFORMATION.....	10
1.2.	WARRANTY CONDITIONS.....	10
1.3.	DELIVERY INFORMATION	10
1.4.	ANALYZER DESCRIPTION	10
1.5.	CALIBRATION INFORMATION.....	10
2.	OPERATING PRINCIPLE	11
2.1.	INFLUENCES ON THE MEASUREMENT	12
3.	GASEYE SYMPHONY – GENERAL PURPOSE	13
3.1.	BASIC REQUIREMENTS AND SAFE USE.....	13
3.2.	TECHNICAL SPECIFICATION.....	14
3.3.	COMPONENTS SPECIFICATION	17
4.	GASEYE SYMPHONY EX2 – HAZARDOUS AREAS	19
4.1.	IECEX MARKING	19
➤	PURGING SYSTEM CONTROLLER WITH VENT.....	20
➤	MANIFOLD	20
4.2.	BASIC REQUIREMENTS AND SAFE USE.....	21
4.3.	TECHNICAL SPECIFICATION.....	23
4.4.	COMPONENTS SPECIFICATION	26
4.5.	OVERVIEW OF THE 2/22 ZONE PURGING SYSTEM FOR THE GASEYE SYMPHONY EX2.....	28
4.6.	FIRST START OF THE PURGE SYSTEM	30
4.7.	ZONE 2/22 PURGING SYSTEM ADJUSTMENT POSSIBILITIES.....	31
4.8.	SYSTEM PRESSURIZATION FAILURE ALARM	32
4.9.	SYSTEM ELECTRICAL CONNECTIONS – INTRINSIC SAFETY WARNINGS	33
4.10.	SYSTEM CONSERVATION FOR ZONE 2 AND 22	34
5.	INSTALLATION AND OPERATION OF THE ANALYZER.....	35
5.1.	SAFETY INFORMATION.....	35
5.2.	DESCRIPTION OF THE HOST CONNECTIONS.....	35
5.2.1.	ELECTRICAL TERMINALS	38
5.3.	ANALOG OUTPUTS AND INPUTS	40
5.3.1.	ACTIVE ANALOG OUTPUTS.....	42
5.3.2.	PASSIVE ANALOG OUTPUTS	43
5.3.3.	ACTIVE ANALOG INPUTS	44
5.3.4.	PASSIVE ANALOG INPUTS.....	45
5.3.5.	DOUT	46
5.3.6.	DIN 47	
5.3.7.	RTD 48	
5.4.	ANALYZER START-UP PROCEDURE	51
6.	INDUSTRIAL PROTOCOLS CONNECTION	51
6.1.	MODBUS RTU (RS485).....	51
6.2.	MODBUS TCP	90
6.3.	PROFINET	90
6.4.	ADD-ON MODULE	90
7.	STARTUP PROCEDURE	94
8.	HMI – FRONT PANEL DISPLAY	95
8.1.	OVERVIEW	95
8.2.	MENU	95
8.2.1.	SETTINGS	97
8.2.2.	DIAGNOSTIC.....	98
8.2.3.	MEASUREMENTS.....	99
8.2.4.	ANALOG INPUT	102
8.2.5.	ANALOG OUTPUT	103
8.3.	SIGNALS	104
8.4.	BUTTONS	104
8.5.	EDITING PARAMETERS	105
8.6.	EDITING NETWORK SETTINGS	107

8.7. EDITING AIN/AOUT SCALING	107
9. WEBSERVER APPLICATION	109
9.1. ESTABLISHING COMMUNICATION WITH THE INSTRUMENT	109
9.2. USER ACCESS LEVEL.....	112
9.3. SELF-MONITORING	114
9.4. MEASUREMENT TAB	115
9.4.1.SHOW TABLE.....	116
9.4.2.SHOW GRID	117
9.4.3.SHOW PLOT	119
9.5. SETTINGS	121
9.6. MEASUREMENT GROUPS	121
9.6.1.MP1 -> PROCESS	121
9.6.2.MP1 -> CONCENTRATION.....	122
9.6.3.MP1 -> LASER.....	122
9.6.4.TEC -> TEC0	123
9.6.5.TEC -> TEC1	123
9.6.6.TEC -> TEC2	124
9.6.7.TEC -> TEC3	124
9.6.8.SYSTEM -> SYSTEM.....	125
9.6.9.IO -> AOUT (ANALOG OUTPUT MEASUREMENT)	126
9.6.10. IO -> AIN (ANALOG INPUT MEASUREMENT).....	126
9.6.11. IO -> DIGITAL IN\OU	127
9.7. PARAMETERS TAB.....	127
9.7.1.PARAMETER GROUPS	129
9.7.2.MP1 -> PROCESS (PROCESS ENVIRONMENT CONFIGURATION)	129
9.7.3.MP1 -> GAS101	132
9.7.4.MP1 -> GAS102	133
9.7.5.MP1 -> GAS103	134
9.7.6.MP1 -> GAS104	135
9.7.7.MP1 -> GAS105	136
9.7.8.MP1 -> GAS106	137
9.7.9.MP1 -> GAS107	138
9.7.10. MP1 -> GAS108	139
9.7.11. MP1 -> GAS_SUM	140
9.7.12. MP1 -> TEMP	140
9.7.13. MP1 -> DEWPOINT	141
9.7.14. IO -> DOUT (DIGITAL OUTPUT OPERATING MODE CONFIGURATION)	141
9.7.15. IO -> AOUT (ANALOG OUTPUT CONFIGURATION)	143
9.7.16. IO -> AIN (ANALOG INPUT CONFIGURATION).....	146
9.7.17. IO -> RTD (RESISTANCE TEMPERATURE SENSOR CONFIGURATION)	149
9.7.18. IO -> AMB_PRESS (AMBIENT PRESSURE SENSOR CONFIGURATION)	150
9.7.19. NETWORK -> NET (SERVICE ETHERNET PORT CONFIGURATION)	151
9.7.20. NETWORK -> MODBUS RTU (MODBUS SLAVE TRANSMISSION CONFIGURATION)	152
9.7.21. NETWORK -> ANYBUS MODULE	153
9.7.22. SYSTEM -> RTC (REAL TIME CLOCK CONFIGURATION)	154
9.7.23. SYSTEM -> HMI (HUMAN-MACHINE INTERFACE CONFIGURATION).....	154
9.7.24. SYSTEM -> ALARM	155
9.8. SETTINGS TAB	159
9.9. FACTOR CONFIG TAB.....	162
9.10. ABOUT TAB	162
9.11. CONTACT INFORMATION	163
APPENDIX 1. AVERAGE LIFE OF THE MAIN COMPONENTS OF THE ANALYZER.	164
APPENDIX 2. PARAMETERS LIST.	165

Table of Figures

Figure 1 Schematic diagram of wavelength scanning process	11
Figure 2 GasEye Symphony nameplate	14
Figure 3 Diagram of GasEye Symphony analyzer with dimensions	16
Figure 4 GasEye Symphony - bottom panel	17
Figure 5 GasEye Symphony - outside view	17
Figure 6 GasEye Symphony Ex2 nameplate - standard version and ET version	23
Figure 7 Diagram of GasEye Symphony Ex2 analyzer with dimensions	25
Figure 8 GasEye Symphony Ex2 - outside view	26
Figure 9 Purge panel - outside view	27
Figure 10 Overview of the purging system for GasEye Symphony for Zone 2/22	28
Figure 11 Purging gas flow sequence for GasEye Symphony for Zone 2/22	29
Figure 12 Alarm terminals for pressurization failure	32
Figure 13. Electronics interface – illustrative photo	36
Figure 14. Connecting the power supply inside the analyzer cabinet to the built-in power supply	37
Figure 15. Electrical terminals numbering	38
Figure 16. Electrical terminal configuration	38
Figure 17. Analog input/output dip switches	40
Figure 18. NAMUR NE43 Recommendation	41
Figure 19. EN 15267-3:2008 Recommendation	41
Figure 20. Exemplary usage of active analog output	42
Figure 21. Exemplary usage of passive analog output	43
Figure 22. Exemplary usage of active analog input	44
Figure 23. Exemplary usage of passive analog input	45
Figure 24. Exemplary usage of digital output	46
Figure 25. Exemplary usage of digital input	47
Figure 26. Exemplary usage of 2-wire RTD	48
Figure 27. Exemplary usage of 3-wire RTD	49
Figure 28. Exemplary usage of 4-wire RTD	50
Figure 29. Location RS-485 socket on Analyzer PCB Host 4.X	51
Figure 30. Elements of the ABCC-M40 module	90
Figure 31. ABCC-M40 slot	91
Figure 32. Supports inserting	91
Figure 33. Plugging the ABCC-M40 module	92
Figure 34. Putting the overlay 1/2	92
Figure 35. Putting the overlay 2/2	93
Figure 36 Front panel display. Welcome message with Host software version	95
Figure 37. Main menu overview	96
Figure 38. Front panel display – subcategories	97
Figure 39. Front panel display - network settings	97
Figure 40. Front panel display - parameters	98
Figure 41. Front panel display - diagnostic	98
Figure 42. Front panel display – measurements GAS 1-3	99
Figure 43. Front panel display – measurements GAS 4-6	99
Figure 44. Front panel display – measurements GAS 7-8, TEMCAL	99
Figure 45. Front panel display – measurements F1TR, F2TR, RX1G	100
Figure 46. Front panel display – measurements RX2G, PrTemp, PrPres	100
Figure 47. Front panel display – measurements TRANS1-3	100
Figure 48. Front panel display – measurements TRANS4, SUP, REF1	101
Figure 49. Front panel display – analog input AIN1-3	102
Figure 50. Front panel display – analog input AIN4	102
Figure 51. Front panel display – analog output AOUT1-3	103
Figure 52. Front panel display - analog output AOUT4	103
Figure 53. Front panel display – Parameter selection	105
Figure 54. Front panel display – Password request	105
Figure 55. Front panel display – Password confirmation	105
Figure 56. Front panel display – Editing parameters	106
Figure 57. Front panel display – Confirmation of new parameters	106
Figure 58. Front panel display - Editing network settings	107
Figure 59. Front panel display – Editing IP address	107

Figure 60. Front panel display – IP address confirmation.....	107
Figure 61. Front panel display - AIN/AOUT editing.....	108
Figure 62. Front panel display – Editing analog input parameters.....	108
Figure 63. Front panel display – Confirmation of analog input parameters.....	108
Figure 64. Network settings icon.....	109
Figure 65. Network status window.....	109
Figure 66. Ethernet settings window.....	110
Figure 67. Network connections window.....	110
Figure 68. Ethernet connection properties.....	111
Figure 69. IPv4 Internet Protocol selection.....	111
Figure 70. IP address selection.....	112
Figure 71. Webserver login page.....	113
Figure 72. User access level – main bar 1/2.....	113
Figure 73. User access level – main bar 2/2.....	113
Figure 74. Webserver application - Measurement tab.....	115
Figure 75. Measurements Show table view.....	117
Figure 76. Excerpt from Measurement Table.....	117
Figure 77. Measurements Show grid view.....	118
Figure 78. Plot Window.....	119
Figure 79. Modal window Settings.....	121
Figure 80. Process measurements window.....	122
Figure 81. Concentration measurements window.....	122
Figure 82. Laser measurements window.....	123
Figure 83. Laser temperature control module measurements window – Laser1.....	123
Figure 84. Laser temperature control module measurements window – Laser2.....	124
Figure 85. Laser temperature control module measurements window - Laser3.....	124
Figure 86. Laser temperature control module measurements window - Laser4.....	125
Figure 87. System measurements window.....	125
Figure 88. Analog output measurements window.....	126
Figure 89. Analog input measurements window.....	127
Figure 90. Digital input and output measurements window.....	127
Figure 91. Process parameters window.....	128
Figure 92. Webserver application - parameters Window.....	129
Figure 93. Process parameters window.....	131
Figure 94. GAS101 parameters window.....	132
Figure 95. GAS102 parameters window.....	133
Figure 96. GAS103 parameters window.....	134
Figure 97. GAS104 parameters window.....	135
Figure 98. GAS105 parameters window.....	136
Figure 99. GAS106 parameters window.....	137
Figure 100. GAS107 parameters window.....	138
Figure 101. GAS108 parameters window.....	139
Figure 102. GAS Sum parameters window.....	140
Figure 103. Temperature parameters window.....	140
Figure 104. Dout parameters window.....	142
Figure 105. Aout parameters window.....	146
Figure 106. Ain parameters window.....	148
Figure 107. Resistance temperature detector window.....	149
Figure 108. Ambient pressure sensor window.....	150
Figure 109. Service ethernet port configuration window.....	151
Figure 110. Modbus RTU configuration window.....	152
Figure 111. Anybus configuration window.....	153
Figure 112. Rtc parameters window.....	154
Figure 113. Hmi parameter window.....	155
Figure 114. Alarm parameters window.....	159
Figure 115. Webserver application - settings window.....	160
Figure 116. Settings window.....	161
Figure 117. Settings window - making changes.....	161
Figure 118. Settings window – applying changes.....	161
Figure 119. Settings window – applying changes.....	162

Figure 120. Device information page. 162

Table of Tables

Table 1 GasEye Symphony part specification	18
Table 2 Temperature class and maximum surface temperature vs medium temperature	19
Table 3 GasEye Symphony Ex2 part specification	26
Table 4 Purge panel part specification	27
Table 5. Startup procedure (SUP) troubleshooting steps.	94
Table 6 Self-monitoring functionalities	114
Table 7. Measurement window functionalities.	116
Table 8. Plot Window functionalities.	120
Table 9. Process measurement list.	121
Table 10. Concentration measurement list.	122
Table 11. Laser measurement list.	122
Table 12. Laser measurement list – Laser1 temperature control module.	123
Table 13. Laser measurement list – Laser2 temperature control module.	123
Table 14. Laser measurement list – Laser3 temperature control module.	124
Table 15. Laser measurement list – Laser4 temperature control module.	124
Table 16. System measurements list.	125
Table 17. Analog outputs measurements list.	126
Table 18. Analog inputs measurements list.	126
Table 19. Digital inputs/outputs measurements list.	127
Table 20. Parameter Window functionalities.	129
Table 21. Process parameters list.	130
Table 22. GAS101 parameters list.	132
Table 23. GAS102 parameters list.	133
Table 24. GAS103 parameters list.	134
Table 25. GAS104 parameters list.	135
Table 26. GAS105 parameters list.	136
Table 27. GAS106 parameters list.	137
Table 28. GAS107 parameters list.	138
Table 29. GAS108 parameters list.	139
Table 30. Temperature parameters list.	140
Table 31. Digital outputs list.	141
Table 32. Digital output operating mode list.	142
Table 33. Analog outputs list.	145
Table 34. Analog output select signals list.	145
Table 35. Analog inputs parameters list.	148
Table 36. Resistance temperature sensor parameters list.	149
Table 37. Ambient pressure sensor parameters list.	150
Table 38. Service ethernet port parameters list.	151
Table 39. Service ethernet port parameters list.	152
Table 40. Anybus module parameter list.	153
Table 41. Real time clock parameters list.	154
Table 42. HMI parameters list.	154
Table 43. Alarm parameters list.	157
Table 44. Alarm signals list.	158
Table 45. Settings window functionalities.	160

1. Introduction

1.1. General information

This manual relates to an instrument that was manufactured with high attention to detail in controlled conditions. By following the description provided in this document our product will work safely and perform the intended measurements properly.

1.2. Warranty conditions

Our company guarantees a 12-month warranty period for the GasEye Symphony instrument. This period becomes valid upon delivery of the instrument and will be granted only if the product is installed, operated, and maintained according to the information provided in this manual.

1.3. Delivery information

The respective scope of delivery is listed on the shipping documents – enclosed with the delivery – in accordance with the valid sales contract. When opening the packaging, please observe the corresponding information on the packaging material. Check the delivery for completeness and overall condition. In particular, you should compare the Order No. on the rating plates with the ordering data. If possible, please retain the packaging material, since you can use it again in case of return deliveries.

1.4. Analyzer description

The GasEye Symphony analyzer is a comprehensive gas analysis tool for industrial process applications. A gas sample from the process is continuously fed to the analyzer where it is analyzed in real time using laser absorption spectroscopy. The analyzer can be configured to operate in the near infrared (NIR), mid-infrared (MIR) and infrared (IR) wavelengths, thus enabling the measurement of most gases relevant to monitoring industrial processes. The GasEye Symphony Analyzer uses 1 to 8 lasers to analyze one or more gases of interest.

1.5. Calibration information

The GasEye Symphony system is factory calibrated using certified gas mixtures. The instrument utilizes an internal in-line reference gas cell for real time verification of the calibration status. Thus, we can assure long term stability and accuracy of the system and there is no need for calibration of the system in the field as long as the system status is operational.

2. Operating principle

GasEye Symphony is a laser spectrometer that uses single line molecular absorption spectroscopy. A semiconductor laser emits a beam of infrared light which passes through the process and impinges the detector on the receiver side. When the target gas is present the light intensity changes, and this can be used to determine the concentration of the measured gas. The wavelength of the radiation emitted by the laser is chosen to match the specific absorption line wavelength of the gas. The laser continuously scans this single absorption line with a very high spectral resolution (*Figure 1* - compare the width of the absorption line vs. the width of the laser line). The measurement is free of cross-interferences, since the laser light is absorbed very selectively by only one specific line in the scanned spectral range.

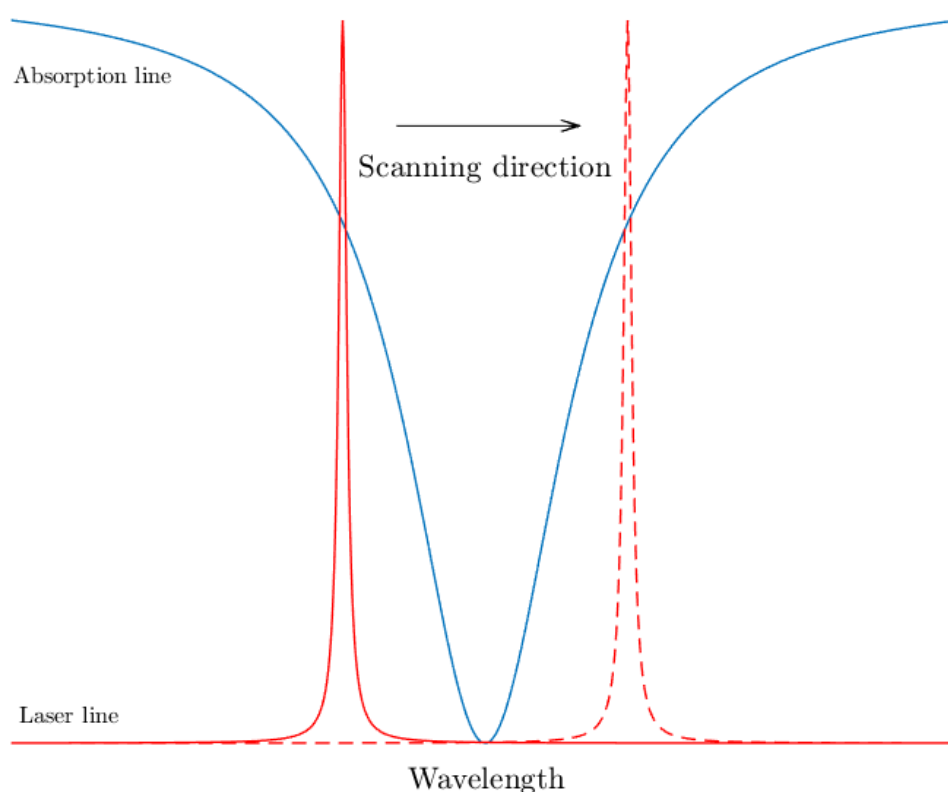


Figure 1 Schematic diagram of wavelength scanning process

2.1. Influences on the measurement

Temperature

The influence of temperature on the measured absorption line is compensated by internal algorithms. The temperature measurement is used to apply a correction of the temperature on the observed line strength. The temperature measurement is done with an internal sensor.

Pressure

The influence of pressure on the measured absorption line is compensated by internal algorithms. For known pressure values, the GasEye Symphony spectrometer adapts the line shape. The pressure measurement is done with an internal sensor to provide complete mathematical compensation of the pressure influence including the density effect (depending on specific application and target gas).

Interferences

The GasEye Symphony can measure the desired gas components very selectively. It may happen that the absorption line of the measured gas is influenced by the presence of other gases. This influence is compensated by the full shape of the detected signal curve analysis and applying algorithms that correct the discrepancies accordingly.

3. GasEye Symphony – general purpose

The GasEye Symphony is a versatile gas analyzing tool for industrial process applications. A process gas sample is continuously fed into the analyzer where it is analyzed in real-time utilizing laser absorption spectroscopy.

Technical parameters:

- Power input Un: 230VAC (100~240VAC)
- Power consumption: < 1000W
- Degree of protection: IP66
- Ambient temperature: -30°C ÷ +60°C

3.1. Basic requirements and safe use

The GasEye Symphony can be operated only in a non-hazardous areas. Any other ways of using the GasEye Symphony are forbidden. The manufacturer will not be liable for damage resulting from incorrect installation, failure to maintain the device in a suitably functional condition, or use of the device other than for its intended purpose.

Installation should be carried out by qualified personnel having the necessary authorization to install electrical and pressure measuring devices. The installer is responsible for performing the installation in accordance with these instructions and with the electromagnetic compatibility and safety regulations and standards applicable to the type of installation.

The device should be configured appropriately for the purpose for which it is to be used. Incorrect configuration may cause erroneous functioning, leading to damage to the device or an accident. Installation of device should be performed with particular care, in accordance with the regulations and standards applicable to that type of installation.

WARNING

Never install GasEye Symphony system in hazardous areas. Death, personal injury and/or damage to property may result if this is not complied.

WARNING

Observe the specifications of the examination certificate valid in your country. Observe the laws and regulations valid in your country for the electric installation in non-hazardous areas.

WARNING

Never repair the device on site! Any components not mentioned in the spare parts list must be replaced or repaired by certified field service technicians.

3.2. Technical Specification

GasEye Symphony nameplate with description is shown in Figure 2.

A I R O P T I C	
GasEye Symphony XX/XX/XX	
DN: SY xx.xx.xx SN: SY1xxxxxx	
  	
Un:	230VAC
Power consumption:	< 1000 W
Degree of protection:	IP 66
Ambient temperature:	-30°C ÷ +60°C
IP Address: 192.168.16.XX	
Airoptic Sp. z o.o. ul. Rubież 46B 61-612 Poznań Poland	
MADE IN POLAND	

Figure 2 GasEye Symphony nameplate

Measurement conditions:

- **Precision:** +/- 1% of the measured value or LOD and response time 30 sec
- **Accuracy:** +/- 2% of the measured value or LOD and response time 30 sec
- **Conditioning of the sample:** dry, free from oils and particles
- **Calibration:** factory calibration using certified gas
- **Zero drift and span drift:** irrelevant
- **Sample pressure:** 0.6 to 2 barA (depends on application)
- **Sample temperature:** 0°C to 200°C (depends on application)

Climatic conditions:

- **Ambient temperature:** -30°C to 60°C
- **Ambient pressure:** 800 - 1200 hPa
- **Ambient humidity:** RH < 90%, non-condensing

Dynamic performance:

- **Ready for measurement:** 30 minutes after switching on
- **Response time (T90):** customizable 3-120 sec

Electrical inputs and outputs

- **Inputs:**
 - 4 x Analog inputs, (4-20 mA, process temperature and pressure, 2 x AUX) – easy user selection via DIP switch between active / passive mode.
 - 1 x RTD
 - 8 x Digital inputs

- **Outputs:**
 - 4 x Analog outputs, (4-20 mA, gas concentration, process transmission, 2 x AUX) active or passive - easy user selection via DIP switch between active / passive mode.
 - 8 x Digital outputs
- **Optional:**
 - Modbus TCP/IP,
 - Modbus RTU
 - Profinet
 - Profibus
- **Local user interface:**
 - Human Machine Interface (HMI) – LCD display with backlight located on the housing cover
 - Ethernet:
 - Webserver application – system configuration and data acquisition via a web browser
 - Windows based program – GasEye recorder for real-time data acquisition
- **Remote control:** Ethernet for remote operation and diagnostics

Mechanical specification:

- **Gas connection:** connector 6 mm Swagelok
- **Dimensions:** 885 x 1222 x 414 mm
- **Weight:** < 170 kg
- **Material:** Housing: SS 1.4301 (AISI 304)
Internal process cell: SS 1.4404 (AISI 316L)
Cell window: sapphire

Security:

- **Low Voltage Directive (LVD) 2014/35/EU**
 - PN-EN 60825-1:2014-11 – Safety of laser devices - Part 1: Equipment classification and requirements
 - PN-EN 61010-1:2011 – Safety requirements for electrical equipment for measurement, control and use in the laboratory – Part 1: General requirements
- **EMC Directive 2014/30/EU**
 - EN 61326-1:2013-6 - Electrical apparatus for measurement, control, and laboratory use. EMC requirements - Part 1: General requirements
- **RoHS Directive 2011/65/EU**



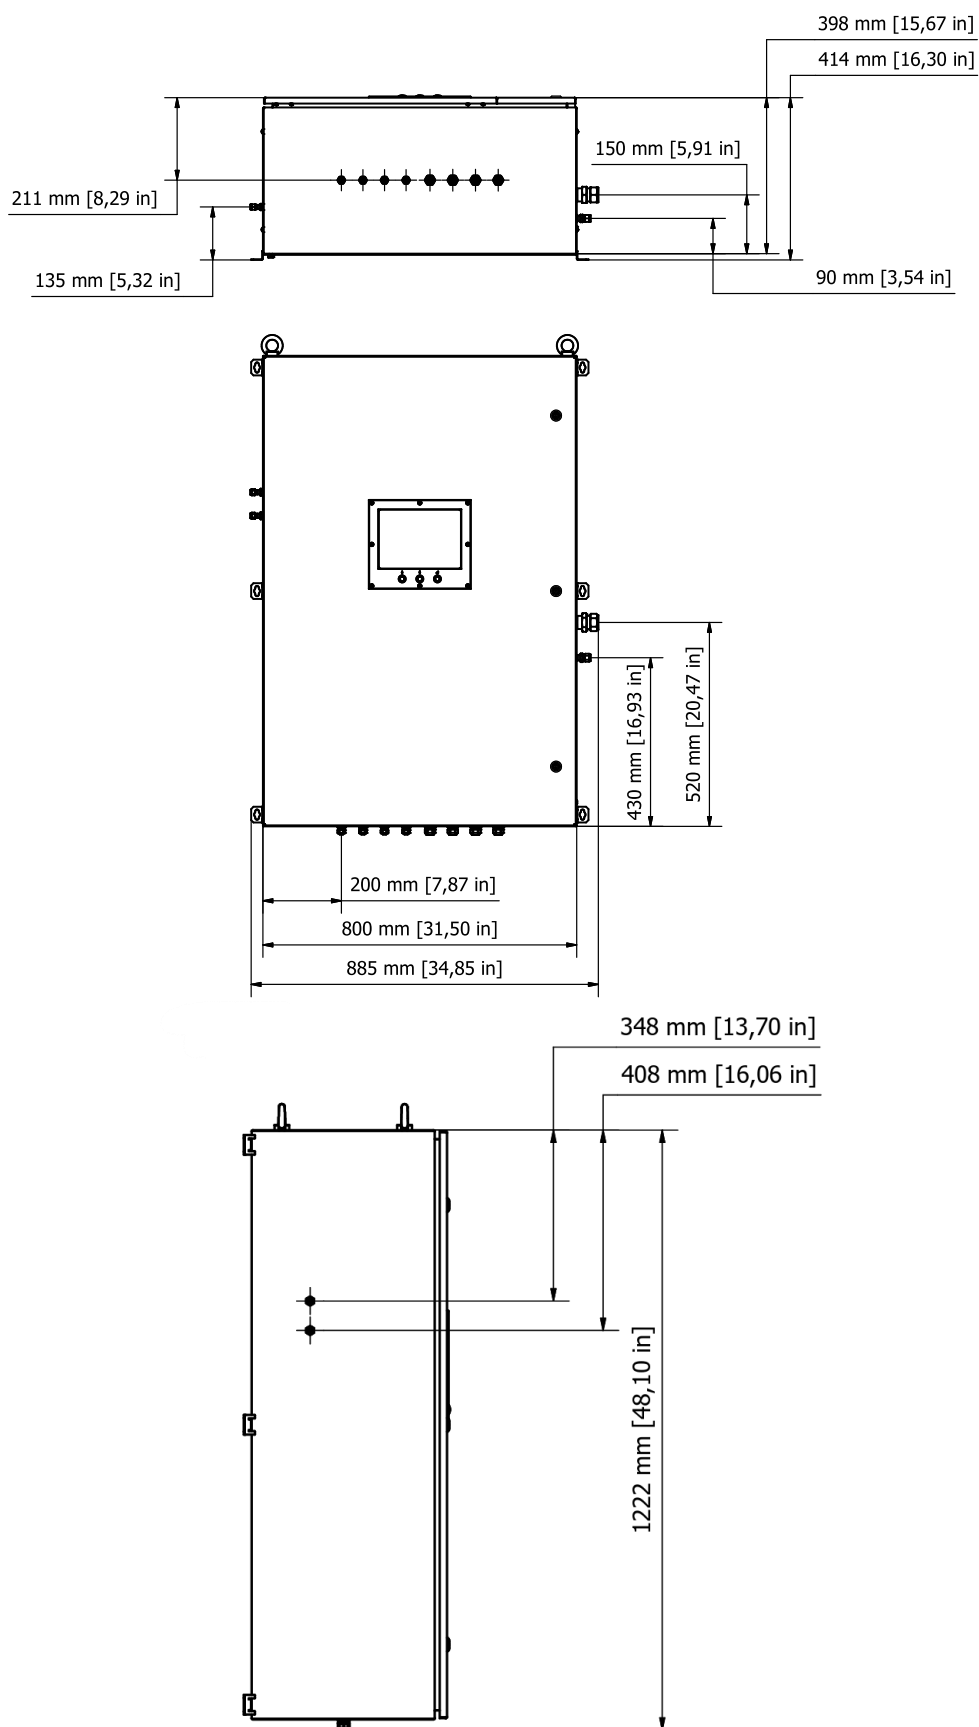


Figure 3 Diagram of GasEye Symphony analyzer with dimensions

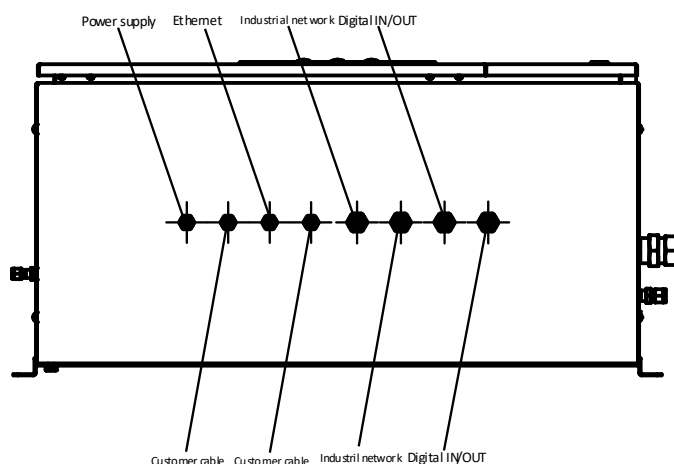


Figure 4 GasEye Symphony - bottom panel

3.3. Components specification

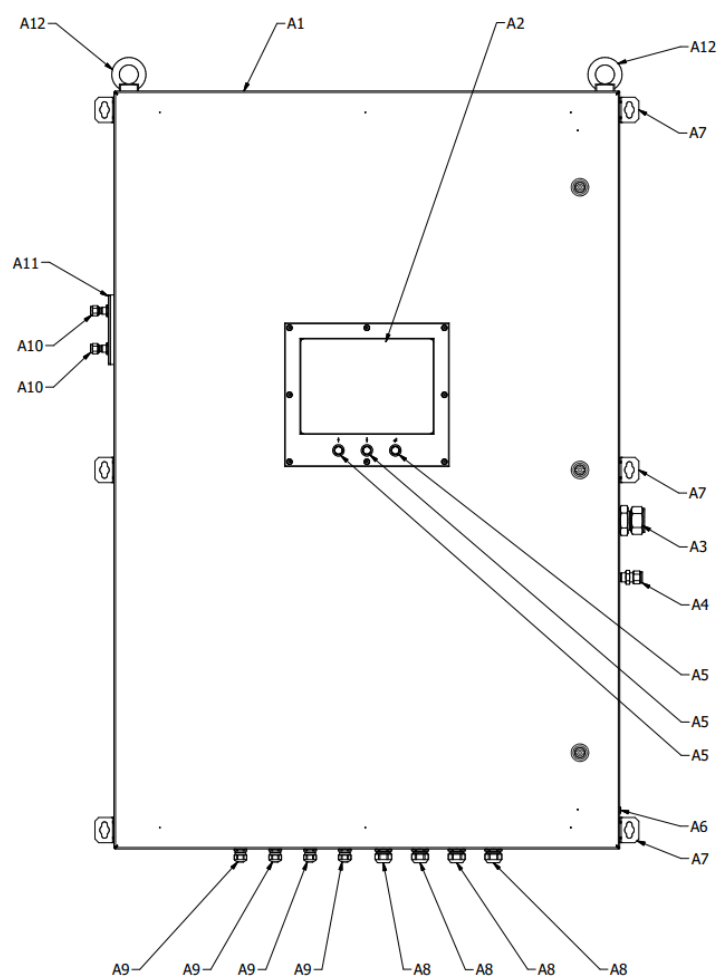


Figure 5 GasEye Symphony - outside view

Table 1 GasEye Symphony part specification

ID	Name	Component specification
A1	Enclosure	Stainless steel AISI 304
A2	HMI front panel	Aluminium 5754
A3	Purging gas connector	Ø25mm or 1" tube fitting, stainless steel AISI316 or breath drain, stainless steel AISI316
A4	Purging gas connector	Ø10mm or 3/8" tube fitting, stainless steel AISI316
A5	HMI button	Ø16mm, stainless steel
A6	PE connector	For M8 screws, stainless steel AISI 304
A7	Mounting bracket	For M8 screws, stainless steel AISI 304
A8	Cable gland M20	9÷14mm, stainless steel AISI 304
A9	Cable gland M16	5÷10mm, stainless steel AISI 304
A10	Gas connector	Ø6mm or ¼" double compression fitting, stainless steel AISI 316
A11	Heat isolator	PTFE
A12	Hinge (support)	Ø30mm, stainless steel AISI 304

4. GasEye Symphony Ex2 – hazardous areas

GasEye Symphony Ex2 is a certified version of the GasEye Symphony device for use in hazardous areas Zone 2/22. GasEye Symphony Ex2 provides Ex p (purge and pressurization) type of explosion protection. Ex p pressurized equipment is the technique of guarding against ingress of the external atmosphere into an enclosure by maintaining a protective gas therein at a pressure above that of the external atmosphere. The overpressure is maintained either with or without a continuous flow of the protective gas. Certified purge and pressurization system from Pepperl+Fuchs is used to meet the hazardous area standards.

4.1. IECEx Marking

Certificate No. IECEx KDB 24.0011X

GasEye Symphony Ex2

Ex pzc IIC T* Gc

Ex pzc IIIC T** Dc

Determination of the temperature class T* and the maximum surface temperature T:**

Table 2 Temperature class and maximum surface temperature vs medium temperature

ID	Medium/ internal cell temperature	Ambient conditions	Temperature class (T*)	Maximum surface temperature (T**)
1	< 100°C	-30°C to 60°C	T5	100°C
2	< 135°C	-30°C to 60°C	T4	135°C
3	< 200°C	-30°C to 60°C	T3	200°C

Technical parameters:

- Power input: Un = 230VAC (100-240VAC)
- Power consumption: < 1000 W
- Degree of protection: IP 66
- Ambient temperature: -20°C ≤ Ta ≤ +60°C
-30°C ≤ Ta ≤ +60°C (ET version)
- Estimated max purge time: ≥ 28 min – nitrogen (for min. flow 95 l/min)
≥ 1h 10 min – air (for min. flow 95 l/min)
- Inlet pressure: 3 to 8 bar
- Minimal pressure: ≥ 1.4 mbar during continuous system work after initial purging

Additional equipment:

➤ Purging system controller with vent

- Producer: Pepperl+Fuchs
- Equipment: Type Z / Ex pzc Purge System – Type 5500 Purge Control Unit and Type EPV 5500 Purge Control Vent Accessory Unit
- Model: 5500-SS-E-VAC-PBC-LBC or 5500-SS-VDC-PBC-LBC
- IECEx certificate: IECEx UL 14.0019X
- Marking:
 - Ex ic ec nC [ic Gc] [pzc Gc] IIC T4 Gc (-20°C ≤ Ta ≤ +60°C)
 - Ex ic tc [ic IIIC Dc] [pzc Dc] IIIB T80°C Dc (-20°C ≤ Ta ≤ +60°C)

➤ Manifold

- Producer: Nass Magnet GmbH
- Equipment: Solenoid
- Model: 0515
- IECEx certificate: IECEx PTB 04.0002X
- Marking:
 - Ex mb IIC T5 Gb (-20°C ≤ Ta ≤ +60°C)
 - Ex mb tb IIIC T95°C Db (-20°C ≤ Ta ≤ +60°C)

Or

- Producer: Pepperl+Fuchs
- Equipment: Manual manifold
- Model: 7500-MAN-MV-01
- Ambient temperature: -40°C ≤ Ta ≤ +70°C

4.2. Basic requirements and safe use

The GasEye Symphony Ex2 can be operated in Zone 2 and 22. Any other ways of using the GasEye Symphony Ex2 are forbidden. The manufacturer will not be liable for damage resulting from incorrect installation, failure to maintain the device in a suitably functional condition, or use of the device other than for its intended purpose.

Installation should be carried out by qualified personnel having the necessary authorization to install electrical and pressure measuring devices. The installer is responsible for performing the installation in accordance with these instructions and with the electromagnetic compatibility and safety regulations and standards applicable to the type of installation.

The device should be configured appropriately for the purpose for which it is to be used. Incorrect configuration may cause erroneous functioning, leading to damage to the device or an accident. Installation of device should be performed with particular care, in accordance with the regulations and standards applicable to that type of installation. The general rules for connecting and using pressurized enclosure should conform to the rules and standards for equipment with Ex-p as specified in:

- IEC 60079-14: Explosive atmospheres. Electrical installations design, selection and erection.
- IEC 60079-17: Explosive atmospheres. Electrical installations inspection and maintenance.

The GasEye device is designed and manufactured in accordance with following standards:

- IEC 60079-0:2018;
- IEC 60079-2:2014.

WARNING

Never install GasEye Symphony Ex2 system in the hazardous area without permission of the plant manager (hot work permit). Death, personal injury and/or damage to property may result if this is not complied.

WARNING

Observe the specifications of the examination certificate valid in your country. Observe the laws and regulations valid in your country for the electric installation in hazardous areas with risk of explosion. Regulations for installation of electric equipment in hazardous areas: DIN EN 60079-14.

WARNING

Never switch on or operate an analyzer with lid open. Before opening the device wait at least 4 minutes after de-energizing. Make sure that externally powered signals are also be de-energized. For secure disconnection of all signals the device should be operated in hazardous areas only via a switch-off unit placed outside the hazardous area.

WARNING

Never repair the device on site! Any components not mentioned in the spare parts list must be replaced or repaired by certified field service technicians. Failure to do so will also result in loss of Ex approval.

WARNING

Power shall not be restored after the enclosure has been opened until combustible gas/dust accumulations within the enclosure have been removed.

WARNING

Customer is not allowed to change any other purging system settings nor replace any hardware element.

WARNING

All non-intrinsically safe connections with GasEye analyzer that are powered other way than through the 5500 purge controller, must be cut-off when the pressurization failure occurs to ensure safety.

Information about possible IECEx use can be found on a label located on the enclosure of the device.

4.3. Technical specification

GasEye Symphony Ex2 nameplate with description is shown in Figure 6.

A I R O P T I C GasEye Symphony Ex2 XX/XX/XX DN: SY xx.xx.xx SN: SY1xxxxxx Certificate No.: IECEx KDB 24.0011X  Ex pxb IIC T* Gc Ex pxb IIIC T** Dc    Un: 230VAC (100 ÷ 240V) Power consumption: < 1000 W Degree of protection: IP 66 Ambient temperature: -20°C ÷ +60°C Air pre-purge time: ≥ 1h10min for min. flow 95l/min Nitronen pre-purge time: ≥ 28min for min. flow 95l/min Inlet pressure: 3 - 8 bar Min. overpressure: 1.4 mbar IP Address: 192.168.16.XX Airoptic Sp. z o.o. ul. Rubiez 46B 61-612 Poznan Poland MADE IN POLAND	A I R O P T I C GasEye Symphony Ex2 ET XX/XX/XX DN: SY xx.xx.xx SN: SY1xxxxxx Certificate No.: IECEx KDB 24.0011X  Ex pxb IIC T* Gc Ex pxb IIIC T** Dc    Un: 230VAC (100 ÷ 240V) Power consumption: < 1000 W Degree of protection: IP 66 Ambient temperature: -30°C ÷ +60°C Air pre-purge time: ≥ 1h10min for min. flow 95l/min Nitronen pre-purge time: ≥ 28min for min. flow 95l/min Inlet pressure: 3 - 8 bar Min. overpressure: 1.4 mbar IP Address: 192.168.16.XX Airoptic Sp. z o.o. ul. Rubiez 46B 61-612 Poznan Poland MADE IN POLAND
--	--

or

Figure 6 GasEye Symphony Ex2 nameplate - standard version and ET version

Measurement conditions:

- **Precision:** +/- 1% of the measured value or LOD and response time 30 sec
- **Accuracy:** +/- 2% of the measured value or LOD and response time 30 sec
- **Conditioning of the sample:** dry, free from oils and particles
- **Calibration:** factory calibration using certified gas
- **Zero drift and span drift:** irrelevant
- **Sample pressure:** 0.6 to 2 barA (depends on application)
- **Sample temperature:** 0°C to 200°C (depends on application)

Climatic conditions:

- **Ambient temperature:** -20°C to 60°C or -30°C to 60°C (ET version)
- **Ambient pressure:** 800 - 1200 hPa
- **Ambient humidity:** RH < 90%, non-condensing

Dynamic performance:

- **Ready for measurement:** 30 minutes after switching on
- **Response time (T90):** customizable 3-120 sec

Electrical inputs and outputs

- **Inputs:**
 - 4 x Analog inputs, (4-20 mA, process temperature and pressure, 2 x AUX)
 - easy user selection via DIP switch between active / passive mode.

- 1 x RTD
- 8 x Digital inputs
- **Outputs:**
 - 4 x Analog outputs, (4-20 mA, gas concentration, process transmission, 2 x AUX) active or passive - easy user selection via DIP switch between active / passive mode.
 - 8 x Digital outputs
- **Optional:**
 - Modbus TCP/IP,
 - Modbus RTU
 - Profinet
 - Profibus
- **Local user interface:**
 - Human machine interface (HMI) – LCD display with backlight located on the housing cover
 - Ethernet:
 - Webserver application – system configuration and data acquisition via a web browser
 - Windows based program – GasEye recorder for real-time data acquisition
- **Remote control:** Ethernet for remote operation and diagnostics

Mechanical specification:

- **Gas connection:** connector 6 mm Swagelok
- **Dimensions:** 1510 x 1234 x 414 mm
- **Weight:** <195 kg
- **Material:** Housing: SS 1.4301 (AISI 304)

Security:

- **Low Voltage Directive (LVD) 2014/35/EU**
 - PN-EN 60825-1:2014-11 – Safety of laser devices - Part 1: Equipment classification and requirements
 - PN-EN 61010-1:2011 – Safety requirements for electrical equipment for measurement, control and use in the laboratory – Part 1: General requirements
- **EMC Directive 2014/30/EU**
 - EN 61326-1:2013-6 - Electrical apparatus for measurement, control, and laboratory use. EMC requirements - Part 1: General requirements
- **RoHS Directive 2011/65/EU**



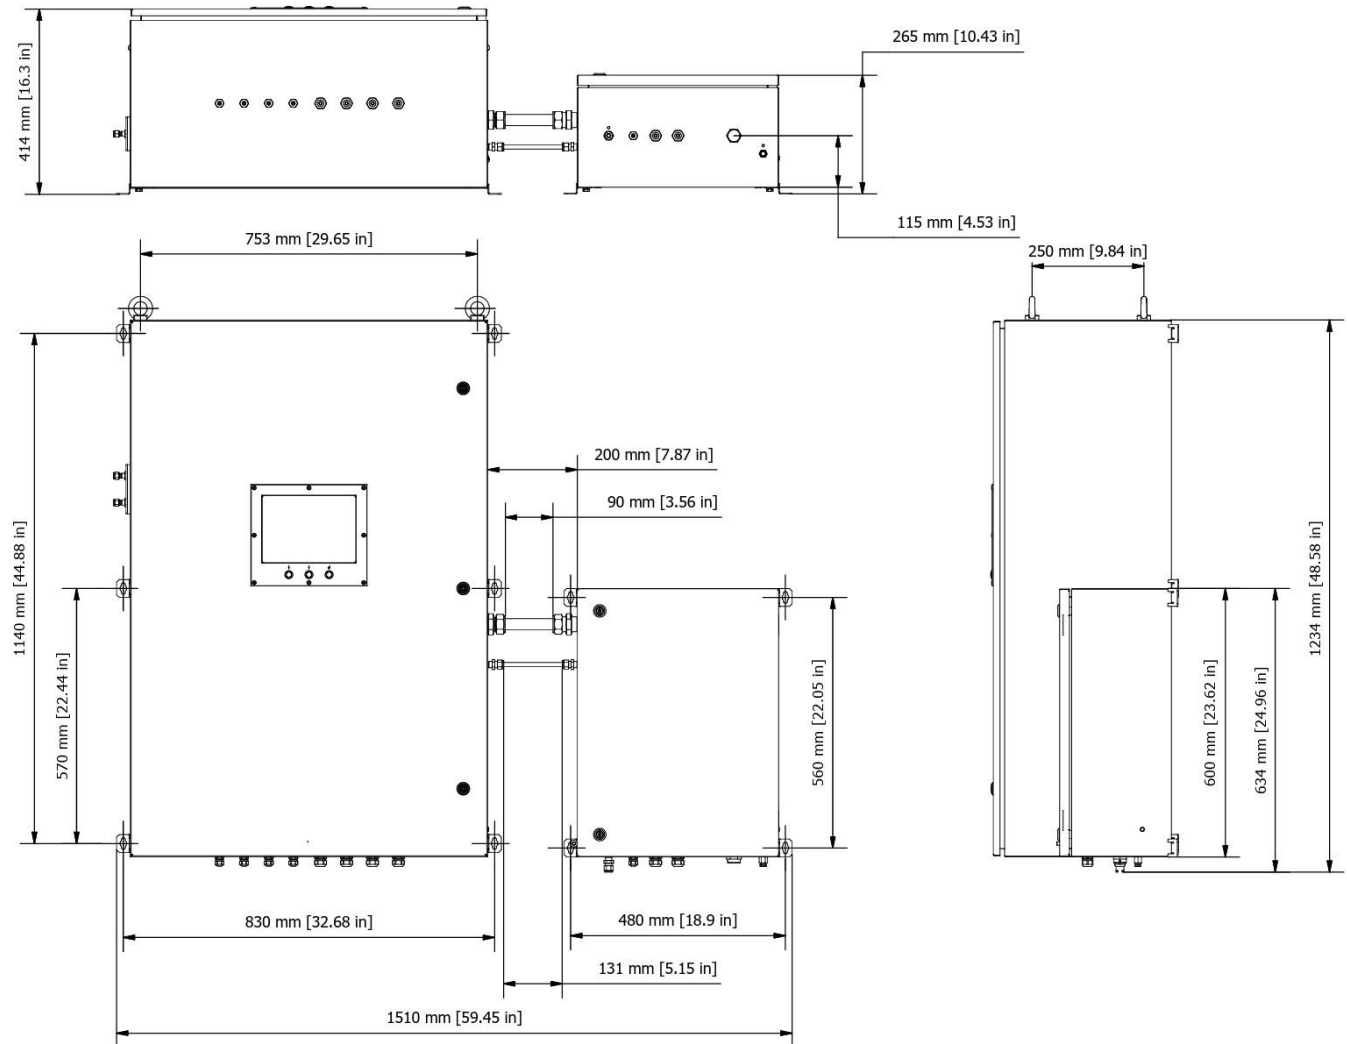


Figure 7 Diagram of GasEye Symphony Ex2 analyzer with dimensions

4.4. Components specification

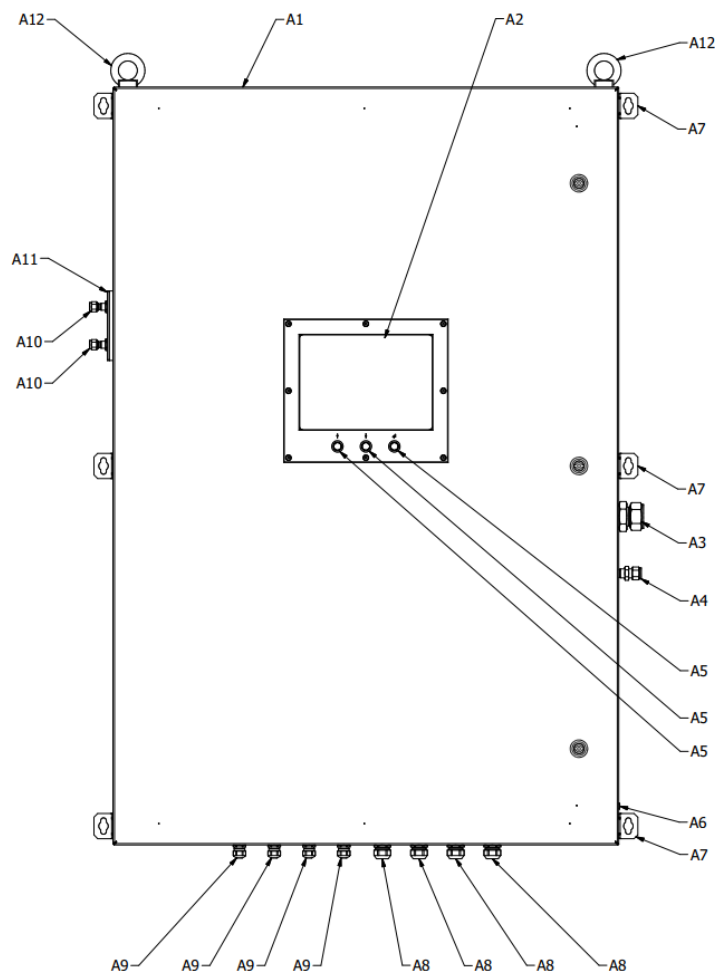


Figure 8 GasEye Symphony Ex2 - outside view

Table 3 GasEye Symphony Ex2 part specification

ID	Name	Component specification
A1	Enclosure	Stainless steel AISI 304
A2	HMI front panel	Aluminium 5754
A3	Purging gas connector	Ø25mm or 1" tube fitting, stainless steel AISI316 or breath drain, stainless steel AISI316
A4	Purging gas connector	Ø10mm or 3/8" tube fitting, stainless steel AISI316
A5	HMI button	Ø16mm, stainless steel
A6	PE connector	For M8 screws, stainless steel AISI 304
A7	Mounting bracket	For M8 screws, stainless steel AISI 304
A8	Cable gland M20	10÷14mm, INOX 1.4305
A9	Cable gland M16	5÷10mm, INOX 1.4305
A10	Gas connector	Ø6mm or ¼" double compression fitting, stainless steel AISI 316
A11	Heat isolator	PTFE
A12	Hinge (support)	Ø30mm, stainless steel AISI 304

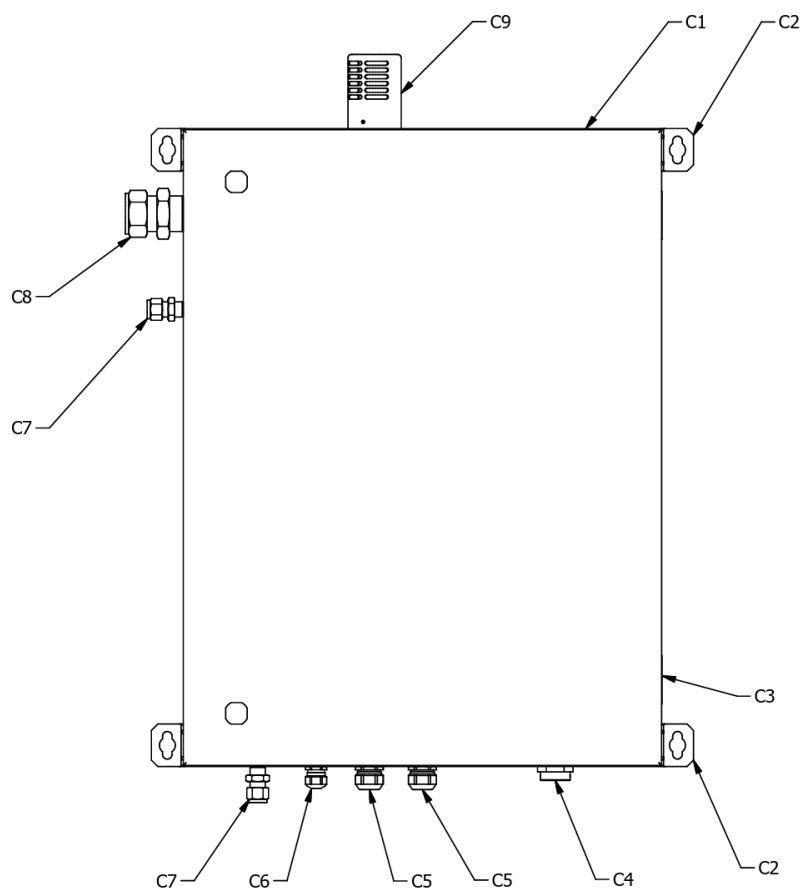


Figure 9 Purge panel - outside view

Table 4 Purge panel part specification

ID	Name	Component specification
C1	Enclosure	Stainless steel AISI 304
C2	Mounting bracket	For M8 screws, Stainless steel AISI 304
C3	PE connector	For M6 screws, Stainless steel AISI 304
C4	Breath drain	Stainless steel AISI 304
C5	Cable gland M20	10÷14mm, INOX 1.4305
C6	Cable gland M16	5÷10mm, INOX 1.4305
C7	Purging gas connector	Ø10mm or 3/8" double compression fitting, stainless steel AISI316
C8	Purging gas connector	Ø25mm or 1" double compression fitting, stainless steel AISI316
C9	Vent	Anodized aluminum with stainless steel AISI 316 cap

4.5. Overview of the 2/22 zone purging system for the GasEye Symphony Ex2

GasEYE SYMPHONY

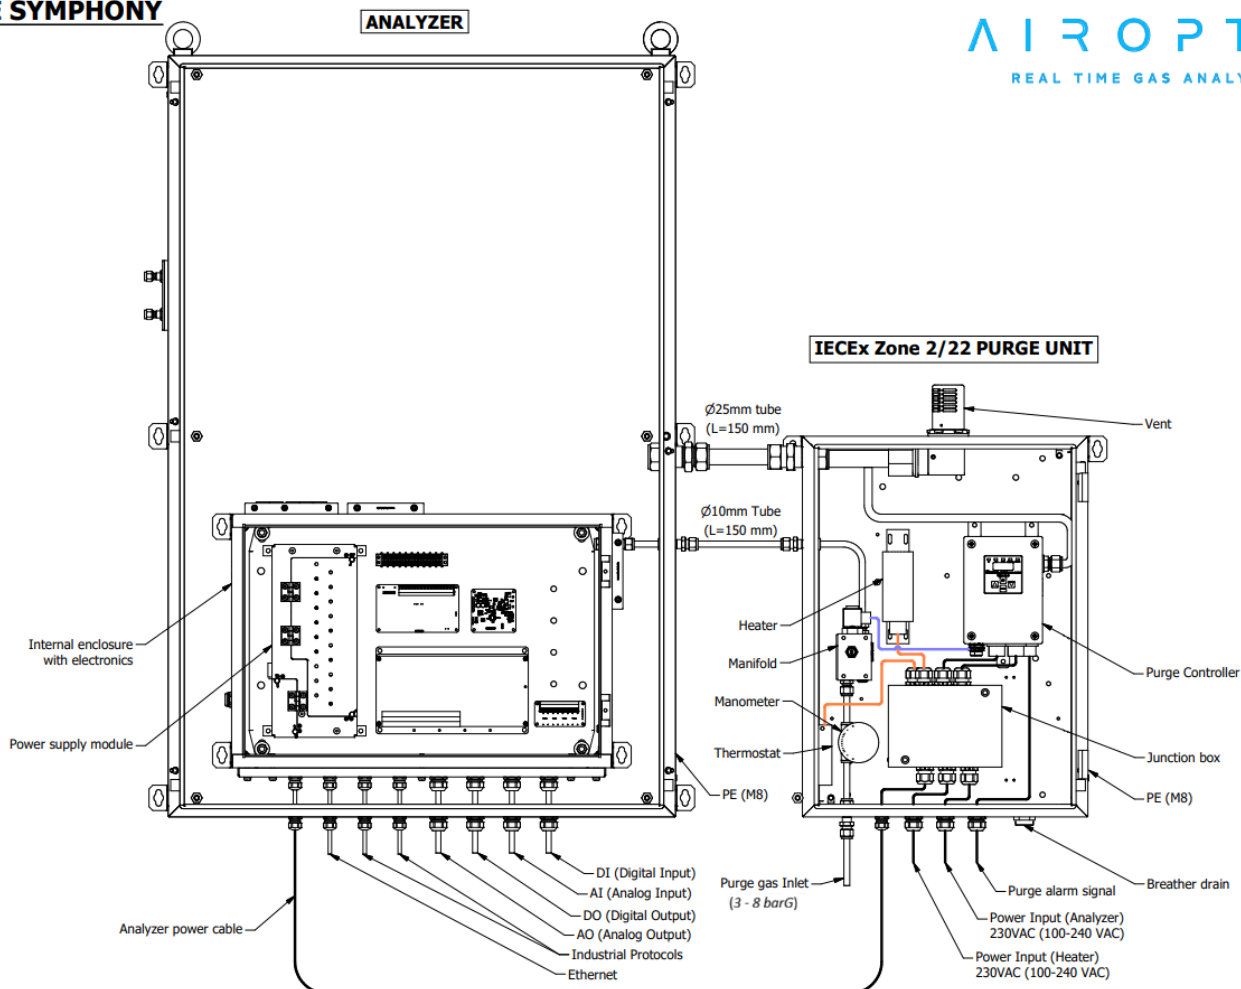


Figure 10 Overview of the purging system for GasEye Symphony for Zone 2/22

Purging gas flow sequence:

Purge gas inlet (Ø10mm or 3/8") -> Manifold block -> Purge gas pipe (Ø10mm or 3/8")
-> Internal enclosure with electronics -> Symphony enclosure -> 25 mm Tube -> Vent

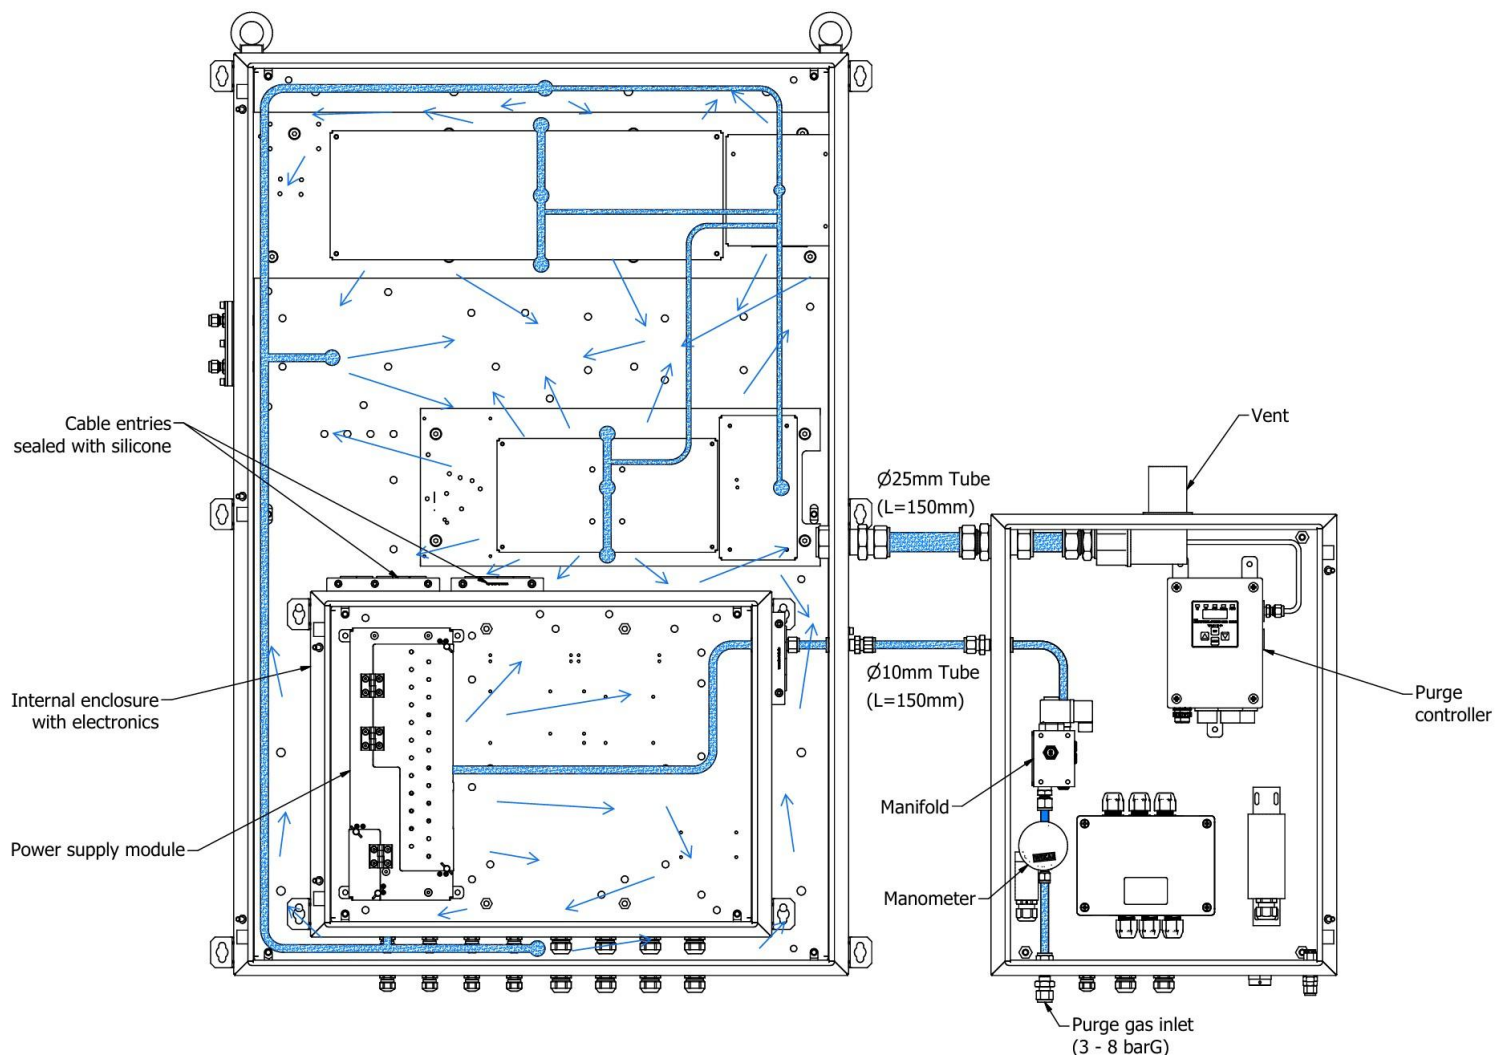


Figure 11 Purging gas flow sequence for GasEye Symphony for Zone 2/22

4.6. First start of the purge system

WARNING

All purge controller settings are predefined by Airoptic Sp. z o.o. The user is not authorized to make changes to them.

The entire module (purge panel) is prepared by Airoptic and ready to operate, only the 2 power sources and the gas inlet connection for purging need to be connected.

1. Supply 230V / 50Hz power to the purging controller power input.
2. Supply 230V / 50Hz power to the heater power input.
3. Apply purging gas to the inlet of the purging system. The pressure at the inlet of the manifold block should be in range 3 - 8 barg.
4. If the pressure on the relief vent could not rise above 1.4mbarg, it means that there are leaks in the system or the needle valve of the manifold block is too closed and should be opened - a special key is included in the kit - opening the needle valve should be done slowly by watching the pressure reading from the controller display. It is not recommended to open the needle valve completely.
5. The purge procedure will begin after the first flow read from the relief vent. The display will show the countdown time (see details in chapter 4.1) after the pre-purge process is complete, manifold block will close, gas will flow only through its needle valve to reduce the flow and the analyzer is energized.
6. Power to the analyzer will be cut off when the relief vent overpressure is reduced to 1.4mbarg. When the pressure returns, the purge procedure will start again automatically.

4.7. Zone 2/22 purging system adjustment possibilities

5500-type purging systems are supplied by Airoptic with already configured software and hardware settings. However, some parameters can be adjusted by the user, those are:

- Inlet gas pressure

User must supply regulated pressure gas source into manifold inlet. Pressure must not exceed 8 bar(g) and should not be less than 3 bar(g) at this point.

- Password to the 5500-controller parameters menu

Password to controller menu is '0000' by default. It can be reset by choosing 'change password' in the menu. After that controller will immediately ask for a new password. Entrance to the controller menu is achievable only by holding 'set' button for 5 seconds.

WARNING

Customer is not allowed to change any other purging system settings nor replace any hardware element.

4.8. System pressurization failure alarm

If pressurization failure of the enclosures occurs, power to the GasEye is cut-off by the 5500 purging controller. At the same time, “K2” relay contacts of 5500 controller are switched on when pressurization is too low. Those contacts can be used to generate additional alarms signals or switching. To use it properly, user must replace 24VDC 2-wire power cable with e.g. 5-wire cable and connect additional 3 wires to the “K2” contacts.

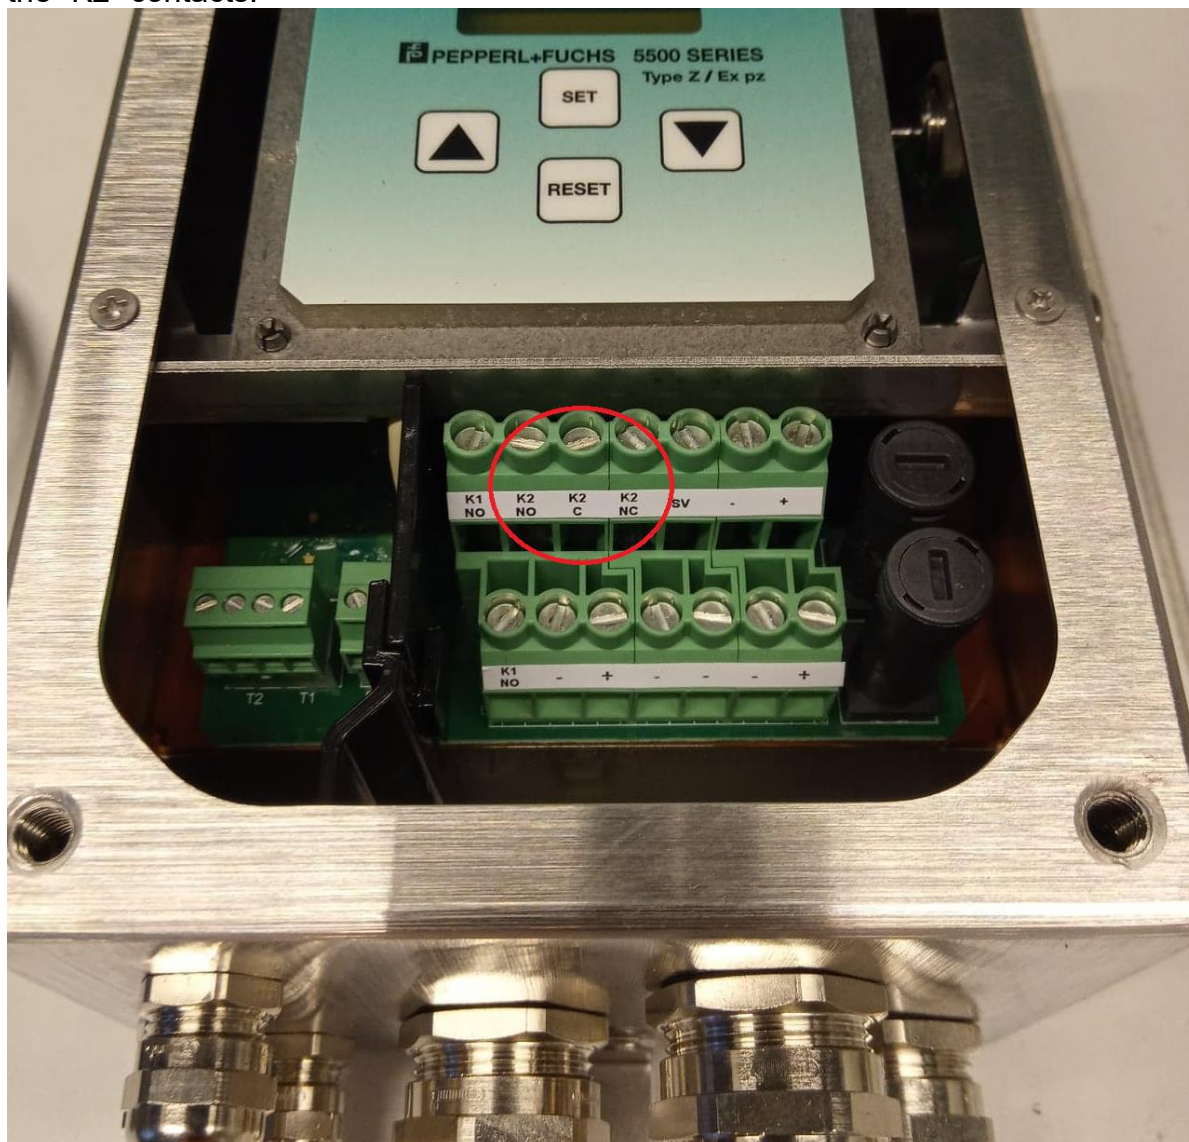


Figure 12 Alarm terminals for pressurization failure.

When alarm occurs, “K2” contacts are energized and switched into NC position (“K2 C” connected with “K2 NC”).

Airoptic Sp. z o.o. supplies purging system controller without any connection to the “K2” contacts.

4.9. System electrical connections – intrinsic safety warnings

Even though power to the GasEye analyzer is cut-off by the purging controller (in case of pressurization loss), not all electrical connections that customer is supplying to the system are safe (intrinsically safe). Those are:

- Externally powered analog or digital connections to analyzer (through Airoptric's 'customer cable')
- Externally powered ethernet communication cable
- Externally powered Modbus communication cable
- Externally powered ProfiNet communication cable
- Externally powered Profibus communication cable

Those and all other electrical non-intrinsically safe connections with GasEye analyser that are powered other way than through the 5500 purge controller, must be cut-off when pressurization failure occurs to ensure safety.

WARNING

All non-intrinsically safe connections with GasEye analyzer that are powered other way than through the 5500 purge controller, must be cut-off when pressurization failure occurs to ensure safety.

To do this, "K2" alarm contacts in purging controller could be used, e.g. to control a switch to cut-off all non-intrinsically safe, externally powered electrical connections to the GasEye analyser.

We recommend that in case neither a switch nor intrinsically safe connection can be used, customer should choose to use active analog input and output settings on the GasEye analyser as they will be switched off by the purge controller. Similarly, digital output should be powered from the same 24VDC provided to power the GasEye (i.e. from 5500 purge controller).

4.10. System conservation for zone 2 and 22

In order to insure safe and convenient operating conditions of 5500-type purging system, subsequent requirements must be satisfied:

- Inlet pressure of the gas must not exceed 8 bar(g).
- Temperature of the inlet gas must not exceed 40°C.
- External parts made of plastic should be cleaned with a damp cloth, with the addition of antistatic fluids.
- All combustible dust must be cleaned from the inside of the enclosures before energizing purge controller and connecting protective gas supply.
- All metal parts of the system must be grounded.
- System must not be exposed to UV light sources and direct sunlight.
- All unused glands to the 5500 control unit must be sealed with included plugs.
- When servicing, installing, and commissioning, the area must be free of all combustible material and/or hazardous explosive gas.
- Only the terminal compartment of the control unit is accessible to users. Under no circumstances shall the control unit, manifold or vent be dismantled or removed from the supplied enclosure.
- In case of any system failure, please contact Airoptic Sp. z o.o.

5. Installation and operation of the analyzer

5.1. Safety information

GasEye Symphony is classified as a Class 1 laser product. The emitted laser radiation is invisible (near infrared) and not hazardous to an unprotected eye. GasEye Symphony has warning labels placed at positions specified in the EN 60825-1:2014-11 norm.

NOTICE	
	Internal invisible IR laser is a Class I product.

WARNING
Electrical safety
<i>Mounting or unmounting of the instrument must be performed with the power cord DISCONNECTED. The power supply must be connected only when the instrument is fully adjusted and secured.</i>

WARNING
Flammable or poisonous gas at the outlet
Please remember to provide tubing for the gas outlet to bring the species to a proper and safe area.

WARNING
Power supply
<i>Do not apply power other than from the purge controller.</i>

5.2. Description of the host connections

Depending on customer requirements, additional connections are available for analog or digital signals as well as Profinet / MODBUS TCP functionality.

Figure 13 shows an overview of the electronics user interface. All connections needed to start the analyzer are made through the electrical panel.

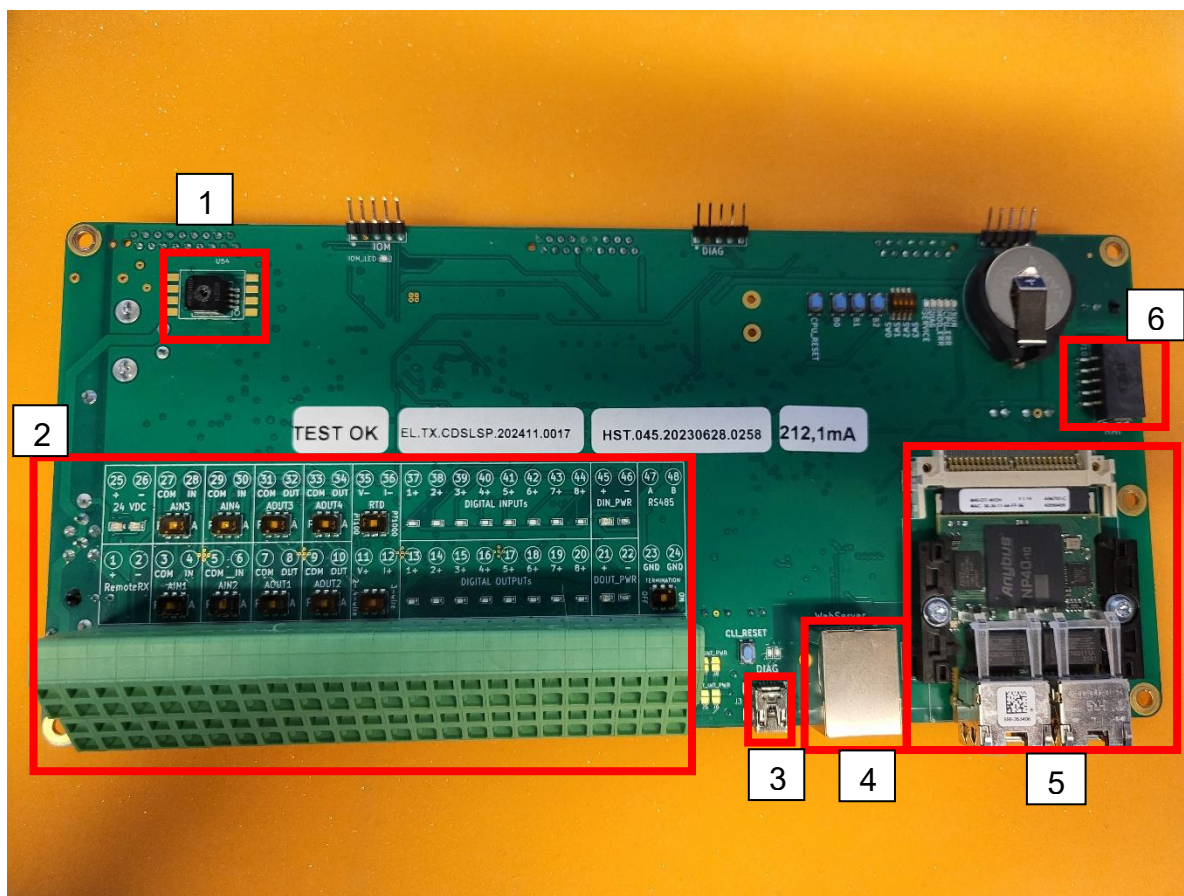


Figure 13. Electronics interface – illustrative photo

1. Pressure sensor
2. Electric terminals
3. USB port
4. Ethernet port for Webserver connection
5. Add-on interface (optional)
6. Front panel display connector

Pull the power cable through the opening in the housing. Secure cable using for this purpose the gland located at the opening.

Before applying power, make sure that all connections have been made correctly.

The voltage of 230 VAC / 24 VDC is supplied to the device inside the analyzer cabinet. The connections between the power supply and the main connector are already made. 230 VAC supply voltage should be connected to the power supply socket in accordance with Figure 14.

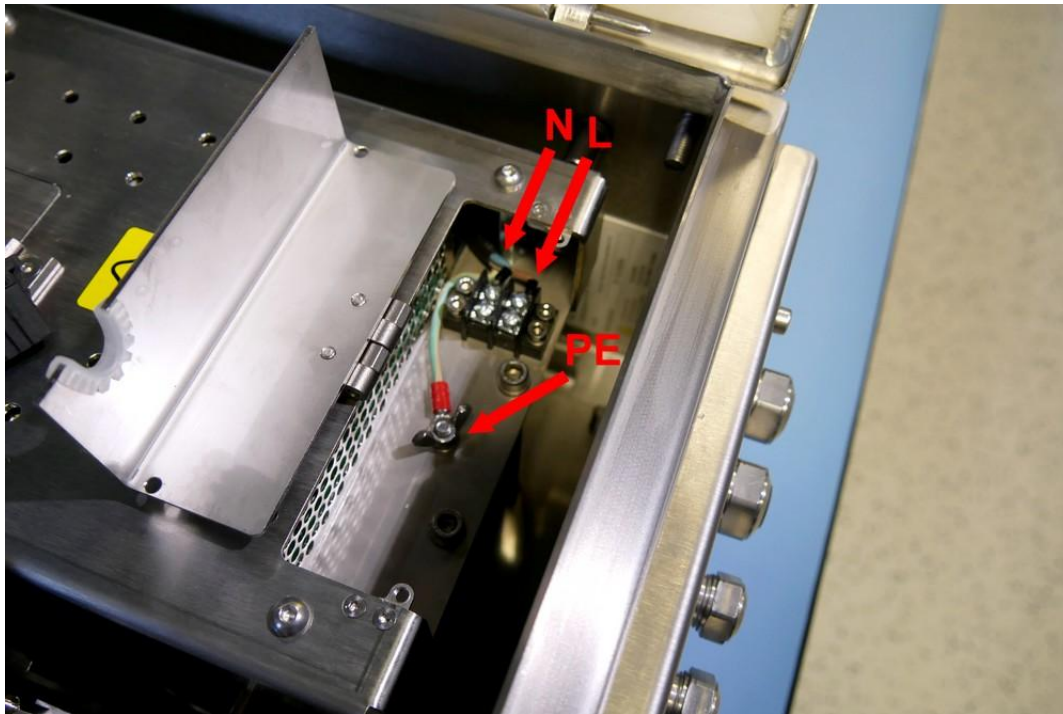


Figure 14. Connecting the power supply inside the analyzer cabinet to the built-in power supply

5.2.1. Electrical terminals

The following is a description of the electrical terminals with their functions. Figure 15 and Figure 16 show sequentially the numbering and configuration of the terminals mounted on the board. Table presents a description of the terminals. If analog input or output signals are used, they must be configured with switches that are available on the board above the electrical terminals.

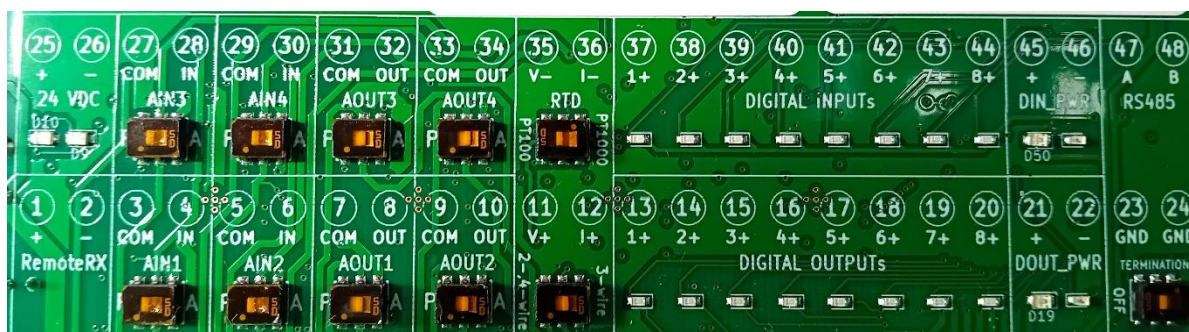


Figure 15. Electrical terminals numbering.

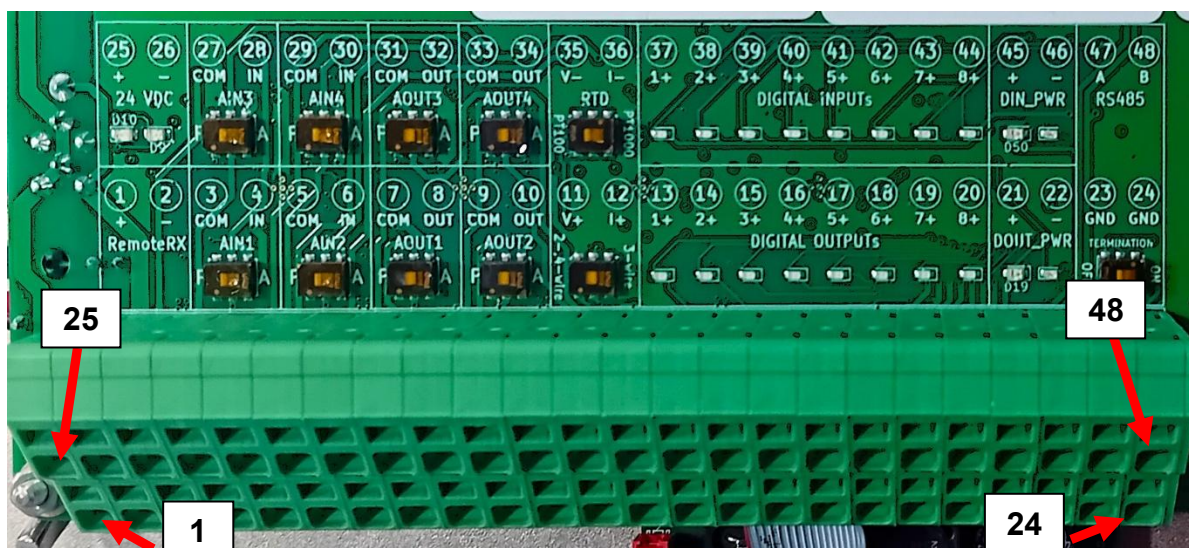


Figure 16. Electrical terminal configuration.

No.	Row	Function	Symbol		Characteristic
1	I	Supply voltage for receiver side	RemoteRX	+	19÷30 VDC (output)
2	I			-	
25	II	Supply voltage	24 VDC	+	19÷30 VDC (input)
26	II			-	
3	I	Analog input 1 (4÷20 mA)	AIN1	COM	19÷30 VDC, 24mA Active/Passive
4	I			IN	
5	I	Analog input 2 (4÷20 mA)	AIN2	COM	19÷30 VDC, 24mA Active/Passive
6	I			IN	
27	II	Analog input 3 (4÷20 mA)	AIN3	COM	19÷30 VDC, 24mA Active/Passive
28	II			IN	
29	II	Analog input 4 (4÷20 mA)	AIN4	COM	19÷30 VDC, 24mA Active/Passive
30	II			IN	
7	I	Analog output 1 (4÷20 mA)	AOUT1	COM	19÷30 VDC, 24mA Active/Passive
8	I			OUT	
9	I	Analog output 2 (4÷20 mA)	AOUT2	COM	19÷30 VDC, 24mA Active/Passive
10	I			OUT	
31	II	Analog output 3 (4÷20 mA)	AOUT3	COM	19÷30 VDC, 24mA Active/Passive
32	II			OUT	
33	II	Analog output 4 (4÷20 mA)	AOUT4	COM	19÷30 VDC, 24mA Active/Passive
34	II			OUT	
11	I	Resistance thermometer input	RTD	V+	PT100/PT1000 2-,3-,4-wire
12	I			I+	
35	II			V-	
36	II			I-	
13	I	Digital outputs 1÷8	DIGITAL OUTPUTs	1+	30VDC, 0.5A Isolated
14	I			2+	
15	I			3+	
16	I			4+	
17	I		DOUT_NAMUR	5+	
18	I			6+	
19	I			7+	
20	I			8+	
21	I	Digital outputs supply voltage	DOUT_PWR	+	
22	I			-	
37	II	Digital inputs 1÷8	DIGITAL INPUTs	1+	30VDC, 0.1A Isolated
38	II			2+	
39	II			3+	
40	II			4+	
41	II			5+	
42	II			6+	
43	II			7+	
44	II			8+	
45	II	Digital inputs supply voltage	DIN_PWR	+	
46	II			-	
23	I	MODBUS RTU	RS485	GND	Isolated
24	I			GND	
47	II			A	
48	II			B	

Table 5. Description of the electrical terminals

5.3. Analog outputs and inputs

According to the customer preference the analog outputs and inputs can be set as active or passive. Please follow the instructions regarding analog outputs and inputs to avoid faulty operation or damage to the system. Figure 17 presents an overview of the analog input/output dip switches which are found on the electrical panel. Dip switches are used to switch between passive and active. To set analog input or analog output signal to passive, change assigned switch position on position P (Passive). To set analog input or analog output signal to active change assigned switch position on position A (Active).

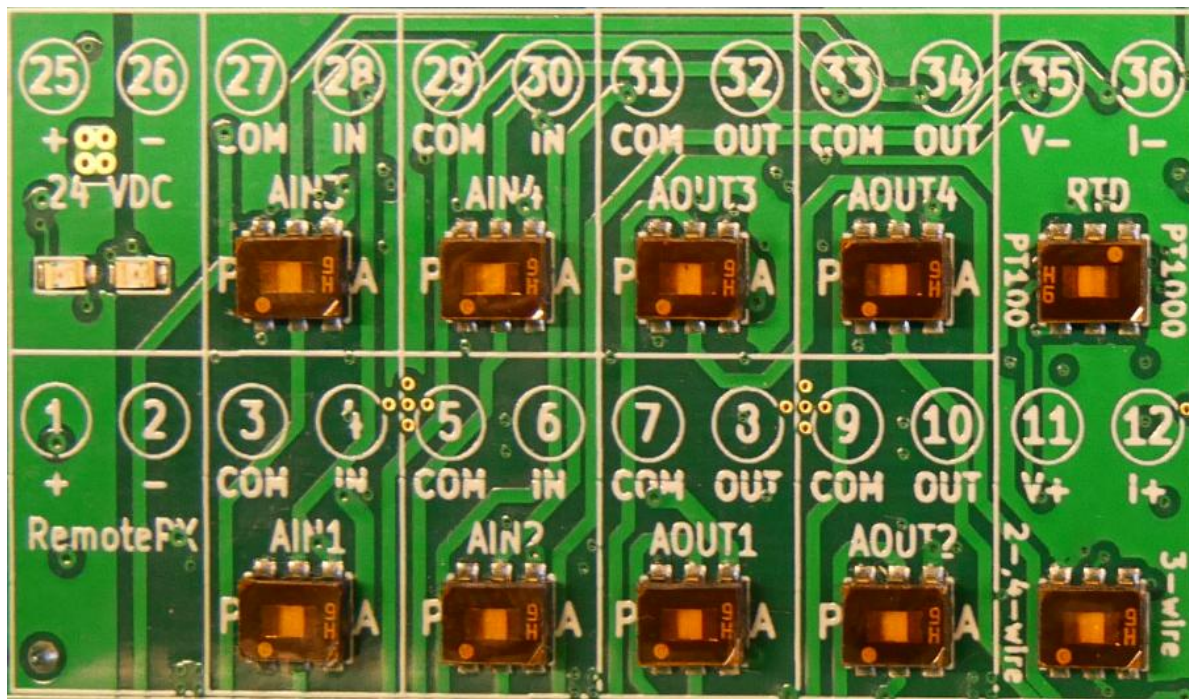


Figure 17. Analog input/output dip switches.

Analog outputs can operate in two modes accordingly to NAMUR NE43 and EN 15267-3:2008. The operation mode can be selected via Webserver in Parameters/AOUT tab. GasEYE device is generated the failure signal at the level of 3.3 mA.

NAMUR NE43 is an international association of process instrumentation user companies that have worked on improving the diagnostic coverage in 4 to 20-mA analog output transmitters to address associated safety issues (Figure 18). NAMUR NE43 provides the guideline for signaling-failure information to the safety-interlock systems over a 4- to 20-mA loop. NAMUR NE43 recommends using 3.8 mA to 20.5 mA as an extended measurement information range. NAMUR NE43 recommends using loop current below 3.6 mA or above 21 mA is in the diagnostic failure information range.

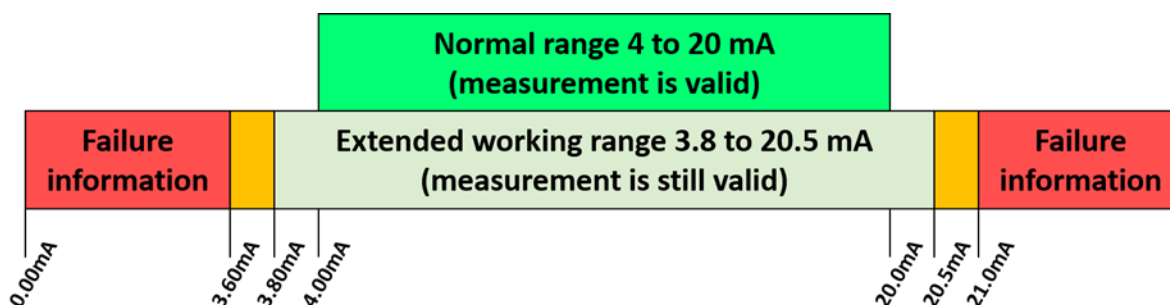


Figure 18. NAMUR NE43 Recommendation.

EN 15267-3:2008 is a European Standard that specifies the performance criteria and test procedures for automated measuring systems that measure gases and particulate matter in, and flow of, the waste gas from stationary sources. This European Standard supports the requirements of particular EU Directives. It provides the detailed procedures covering the QAL1 requirements of EN 14181 and, where required, input data used in QAL3. EN 15267-3:2008 provides the guideline for signaling-failure information to the safety-interlock systems over a 4- to 20-mA loop (Figure 19).

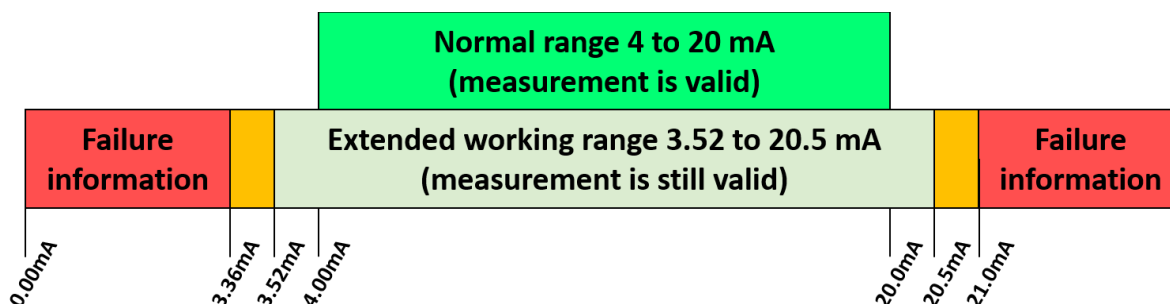



Figure 19. EN 15267-3:2008 Recommendation.

Each analog input and output is individually tested for each GasEYE device using PLC station before shipment. The report from the tests is generated automatically and is attached to the package.

5.3.1. Active analog outputs

Active analog outputs need no external powering of the output terminal. Please refer to **Figure 20** for output signal connection.

Active analog output⁽¹⁾

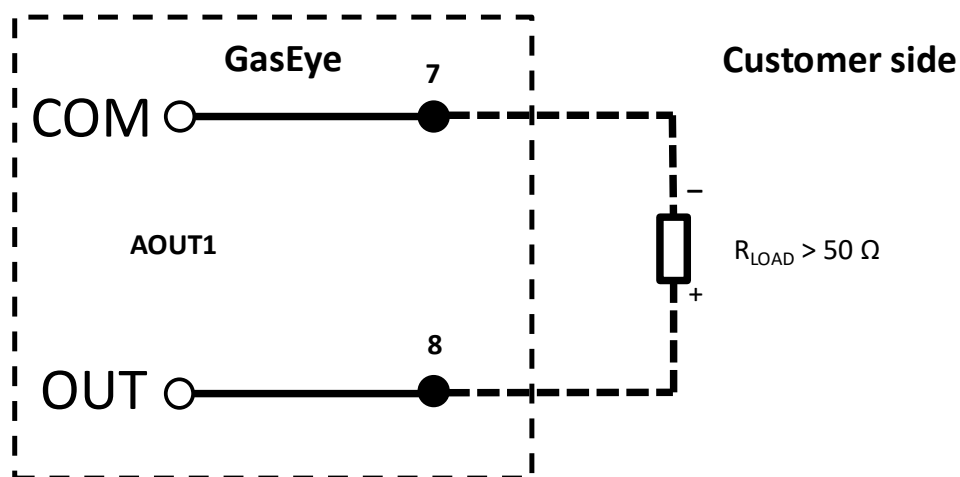

⁽¹⁾ – set AOUT dip switch to A(active)

Figure 20. Exemplary usage of active analog output.

R_{LOAD} should be at least **50Ω**

WARNING


Active analog outputs

*GasEye Symphony provides supply voltage for the active analog outputs and thus analog outputs **MUST NOT BE** powered externally. Please set the dip switch to Active (A) before powering up the system.*

5.3.2. Passive analog outputs

Passive analog outputs require external powering for operation. Please refer to **Figure 21** for output signal connection.

Passive analog output⁽¹⁾

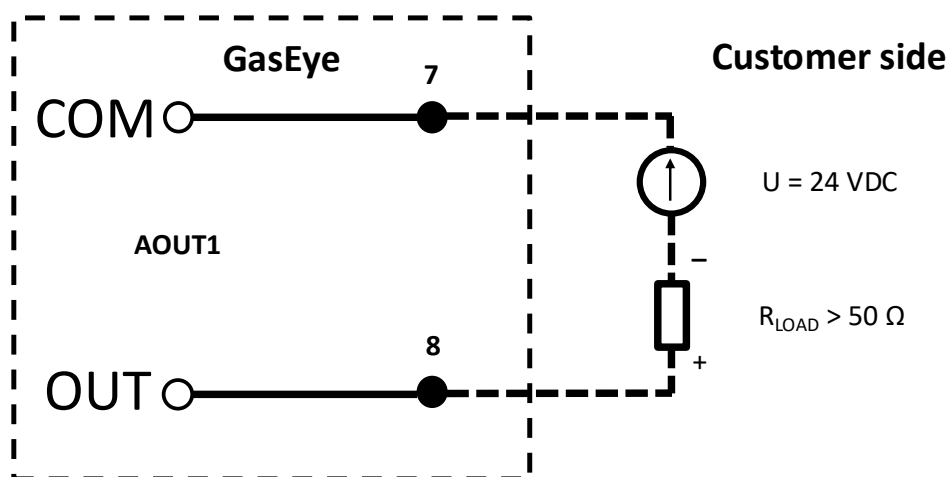

⁽¹⁾ – set AOUT dip switch to P(passive)

Figure 21. Exemplary usage of passive analog output.

R_{LOAD} should be at least **50Ω**


WARNING

Passive analog outputs

*GasEye Symphony does not provide supply voltage for the passive analog outputs, thus they **MUST BE** powered externally. Please set the dip switch to Passive (P) before powering up the system.*

5.3.3. Active analog inputs

Active analog inputs need no external powering of the input terminal. Please refer to **Figure 22** for input signal connection.

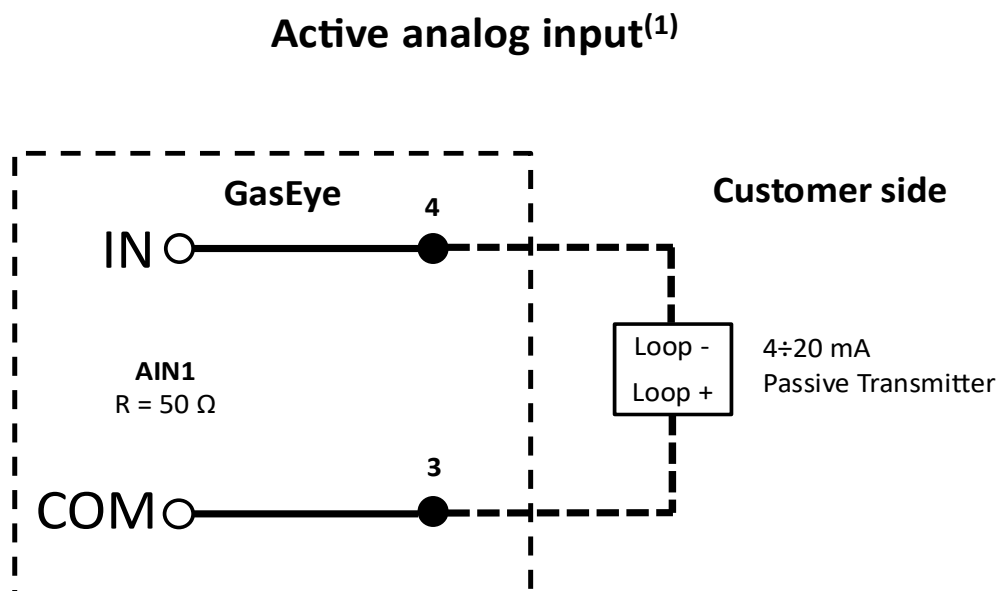

⁽¹⁾ – set AIN dip switch to A(active)

Figure 22. Exemplary usage of active analog input.

WARNINGS


Active analog inputs

*GasEye Symphony provides supply voltage for the active analog inputs and thus analog inputs **MUST NOT BE** powered externally. Please set the dip switch to Active (A) before powering up the system.*

5.3.4. Passive analog inputs

Passive analog inputs require external powering for operation. Please refer to **Figure 23** for input signal connection.

Passive analog input⁽¹⁾

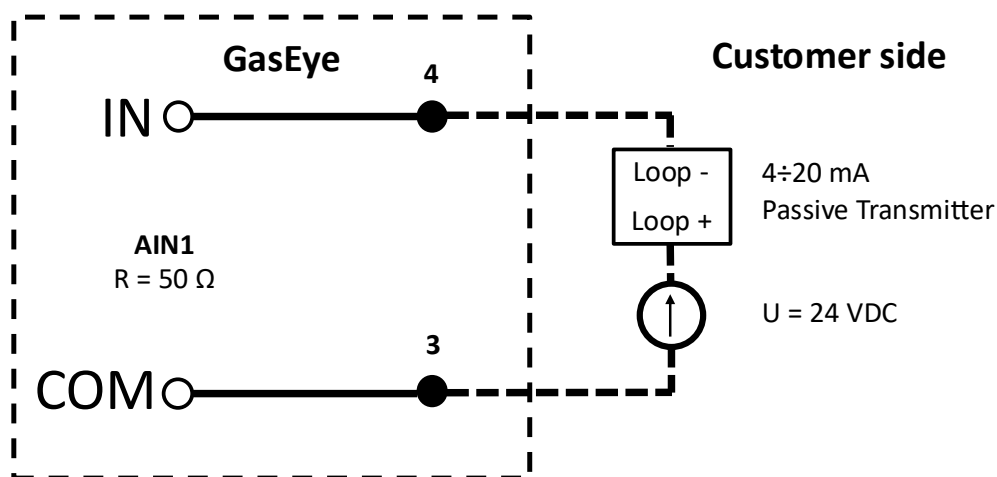

⁽¹⁾ – set AIN dip switch to P(passive)

Figure 23. Exemplary usage of passive analog input.

WARNING


Passive analog inputs

*GasEye Symphony does not provide supply voltage for the passive analog inputs, thus they **MUST BE** powered externally. Please set the dip switch to Passive (P) before powering up the system.*

5.3.5. DOUT

GasEye system provides 8 high side power switch (MOSFET) based digital outputs. Digital outputs are galvanically isolated from HOST board thus the digital outputs block must be powered externally (pin 21 and 22, 19-30 VDC). Each output can handle current up to 0.5 A. The status of each output is displayed on the HOST board with the blue LED in DOUT section. In the DOUT_PWR section the status of the power supply (green LED -> Power OK, red LED -> Power NOT OK) can be found.

Isolated Digital Output ⁽¹⁾⁽²⁾⁽³⁾

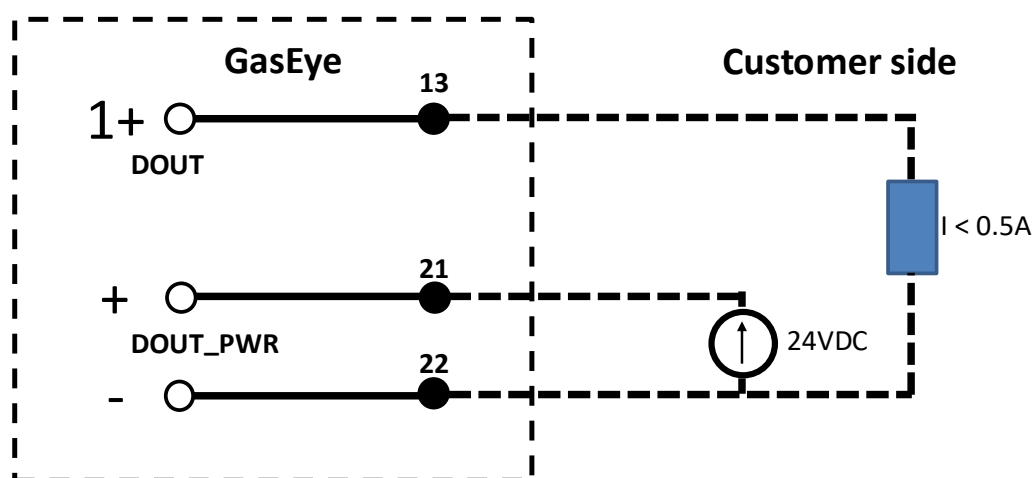

- ⁽¹⁾ – high side power switch (MOSFET) based
- ⁽²⁾ – digital outputs are electrically isolated from HOST board
- ⁽³⁾ – additional 24VDC power supply required

Figure 24. Exemplary usage of digital output.

WARNING

Digital outputs

*GasEye Symphony does not provide supply voltage for the digital outputs, thus they **MUST BE** powered externally.*

5.3.6. DIN

GasEye system provides 8 digital inputs. Digital inputs are galvanically isolated from HOST board thus the digital inputs block must be powered externally (pin 45 and 46, 19-30 VDC). The status of each input is displayed on the HOST board with the blue LED in DIN section. In the DIN_PWR section the status of the power supply (green LED -> Power OK, red LED -> Power NOT OK) can be found.

Isolated Digital Input ⁽¹⁾⁽²⁾

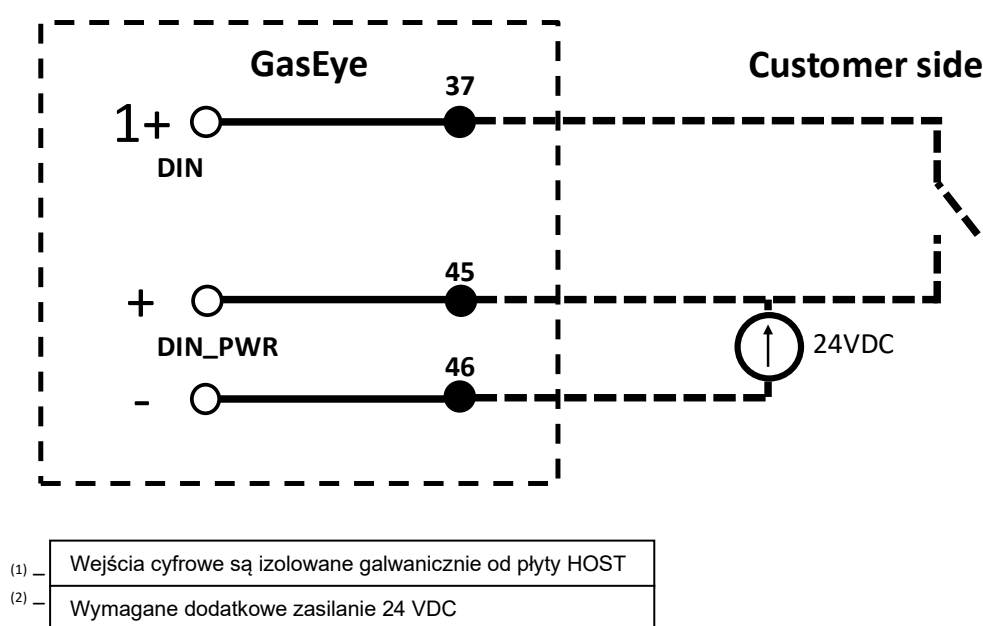


Figure 25. Exemplary usage of digital input.

WARNING


Digital inputs

*GasEye Symphony does not provide supply voltage for the digital inputs, thus they **MUST BE** powered externally.*

5.3.7. RTD

GasEye system provides the resistance temperature detectors (RTDs) input for measuring the process temperature. The system can be configured with two dip switches to operate with PT100/PT1000 and 2-,3-,4-wire connection. Please refer **Figure 26** to **Figure 28** for signal connection.

PT100/PT1000 2-wire⁽¹⁾

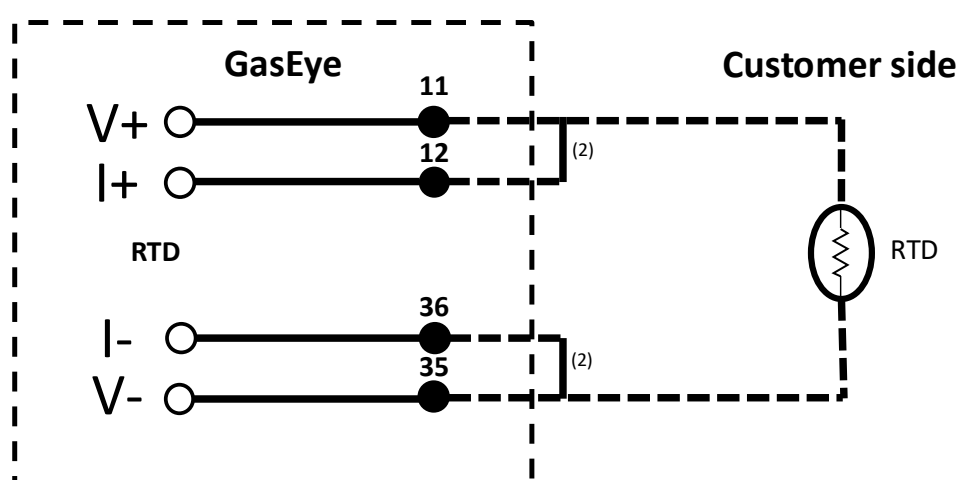

⁽¹⁾ – set 2-,4-wire dip switch, set PT100/PT1000 dip switch as required

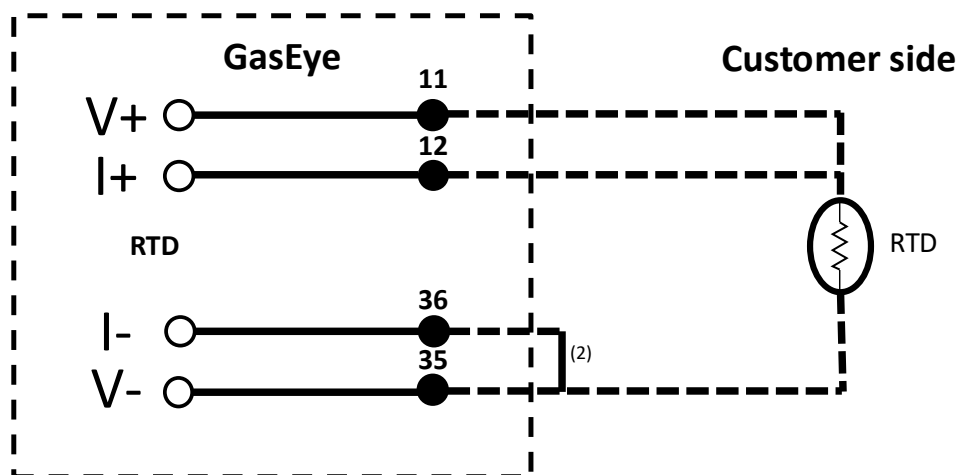
⁽²⁾ – external jumper required

Figure 26. Exemplary usage of 2-wire RTD.

WARNING

RTD

2-wire RTD requires additional terminal connection, please make the external jumper for 11 and 12 as well for 36 and 35.

PT100/PT1000 3-wire⁽¹⁾


⁽¹⁾ – set 3-wire dip switch, set PT100/PT1000 dip switch as required

⁽²⁾ – external jumper required

Figure 27. Exemplary usage of 3-wire RTD.

WARNING**RTD**

3-wire RTD requires additional terminal connection, please make the external jumper for 36 and 35.

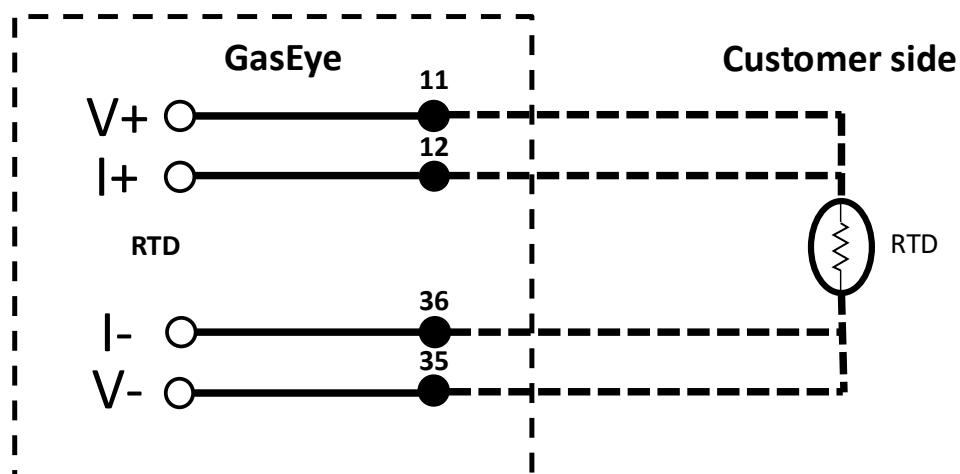PT100/PT1000 4-wire⁽¹⁾

⁽¹⁾ – set 2-,4-wire dip switch, set PT100/PT1000 dip switch as required

Figure 28. Exemplary usage of 4-wire RTD.

5.4. Analyzer start-up procedure

The analyzer is delivered, calibrated and configured as per the order description. The analog output ranges assigned as standard and the digital output ranges are listed in the accompanying document.

The start-up procedure is as follows:

1. The analyzer is ready for operation when the appropriate temperature in the cuvette is reached. It may take up to 30 minutes for it to reach the right temperature. The system will signal full readiness for operation by continuous lighting of the LED "SYSTEM READY" on the LCD display.
2. The minimum required gas flow is 50ml / min, input pressure $0.6 \div 2$ barg.
3. If you need to reconfigure the system, connect the network cable to the PC and log in to the Webserver.
4. The analyzer is configured and ready to work.

6. Industrial protocols connection

The GasEye Symphony gas analyzer has implemented MODBUS RTU, MODBUS TCP and PROFINET industrial communication protocols. On plant can work only one protocol and it is declared by customer during ordering. Thanks to integrated analyzer software and electronic board with Anybus CompactCom communication module device is very flexible and for special customer requirement additional communication protocols can be quickly implemented.

6.1. Modbus RTU (RS485)

Modbus RTU is fully implemented by Airoptric and does not need additional communication module. Device can work in slave mode. Communication parameters are configured by Analyzer web server tool.

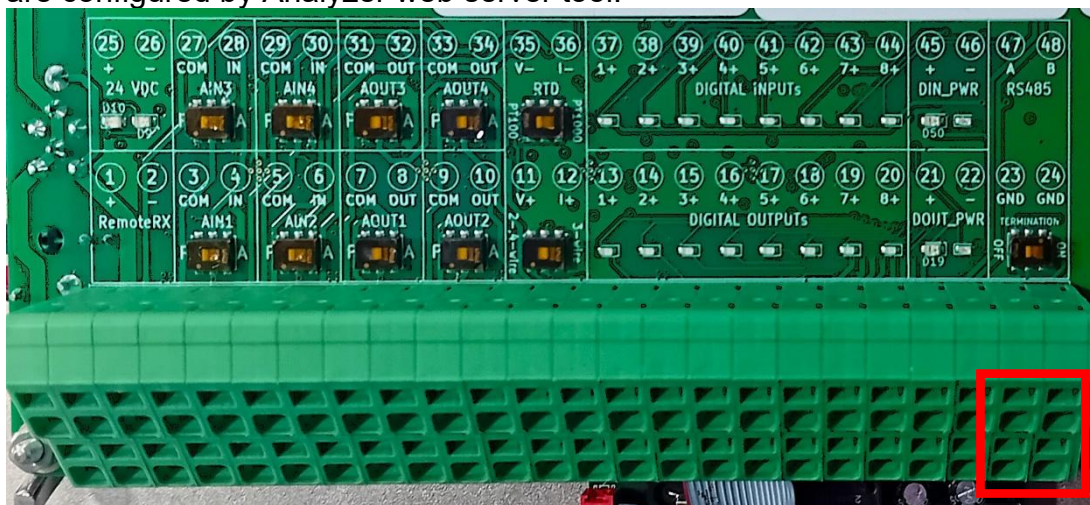


Figure 29. Location RS-485 socket on Analyzer PCB Host 4.X.

1. RS-485 transmission settings

Baud rate: 9600/19200

Stop bits: STOP_BIT_1/ STOP_BIT_2

Parity: NO_PARITY_8_BIT/ EVEN_PARITY_8_BIT/ ODD_PARITY_8_BIT/

NO_PARITY_9_BIT

Flow control: none

2. Modbus byte transmission method

Byte Order: LSB/MSB

Swap: ON/OFF

3. Device Address

Modbus slave device address from 1 to 247 are shown in the Table 6.

Register Name	Register address (hex)	Register address (dec)	Comments
PROCESS.TEMPERATURE	0x00	0	16 -bits of floating point value (first part) Process temperature
	0x01	1	16 -bits of floating point value (second part) Process temperature
PROCESS.PRESSURE	0x02	2	16 -bits of floating point value (first part) Process pressure
	0x03	3	16 -bits of floating point value (second part) Process pressure
TEMP.CALCULATED	0x04	4	16 -bits of floating point value (first part) Temperature calculate available only in specific configuration
	0x05	5	16 -bits of floating point value (second part) Temperature calculate available only in specific configuration
GAS101.CONCENTRATION	0x06	6	16 -bits of floating point value (first part) Gas concentration
	0x07	7	16 -bits of floating point value (second part) Gas concentration
GAS102.CONCENTRATION	0x08	8	16 -bits of floating point value (first part) Gas concentration

	0x09	9	16 -bits of floating point value (second part) Gas concentration
GAS103.CONCENTRATION	0x0A	10	16 -bits of floating point value (first part) Gas concentration
	0x0B	11	16 -bits of floating point value (second part) Gas concentration
	0x0C	12	16 -bits of floating point value (first part) Gas concentration
GAS104.CONCENTRATION	0x0D	13	16 -bits of floating point value (second part) Gas concentration
	0x0E	14	16 -bits of floating point value (first part) Gas concentration
GAS105.CONCENTRATION	0x0F	15	16 -bits of floating point value (second part) Gas concentration
	0x10	16	16 -bits of floating point value (first part) Gas concentration
GAS106.CONCENTRATION	0x11	17	16 -bits of floating point value (second part) Gas concentration
	0x12	18	16 -bits of floating point value (first part) Gas concentration
GAS107.CONCENTRATION	0x13	19	16 -bits of floating point value (second part) Gas concentration
	0x14	20	16 -bits of floating point value (first part) Gas concentration
GAS108.CONCENTRATION	0x15	21	16 -bits of floating point value (second part) Gas concentration
	0x16	22	Scaling to integer value (0 - 27648) Gas concentration
GAS101.CONSIM	0x16	22	Scaling to integer value (0 - 27648) Gas concentration
GAS102.CONSIM	0x17	23	Scaling to integer value (0 - 27648) Gas concentration
GAS103.CONSIM	0x18	24	Scaling to integer value (0 - 27648) Gas concentration
GAS104.CONSIM	0x19	25	Scaling to integer value (0 - 27648)

			Gas concentration
GAS105.CONSIM	0x1A	26	Scaling to integer value (0 - 27648) Gas concentration
GAS106.CONSIM	0x1B	27	Scaling to integer value (0 - 27648) Gas concentration
GAS107.CONSIM	0x1C	28	Scaling to integer value (0 - 27648) Gas concentration
GAS108.CONSIM	0x1D	29	Scaling to integer value (0 - 27648) Gas concentration
LASER11.TRANSMISSION	0x1E	30	16 -bits of floating point value (first part) Laser transmission
	0x1F	31	16 -bits of floating point value (second part) Laser transmission
LASER12.TRANSMISSION	0x20	32	16 -bits of floating point value (first part) Laser transmission
	0x21	33	16 -bits of floating point value (second part) Laser transmission
LASER13.TRANSMISSION	0x22	34	16 -bits of floating point value (first part) Laser transmission
	0x23	35	16 -bits of floating point value (second part) Laser transmission
LASER14.TRANSMISSION	0x24	36	16 -bits of floating point value (first part) Laser transmission
	0x25	37	16 -bits of floating point value (second part) Laser transmission
LASER11.TRANSMISSION_SIM	0x26	38	Scaling to integer value (0 - 27648) Laser transmission
LASER12.TRANSMISSION_SIM	0x27	39	Scaling to integer value (0 - 27648) Laser transmission
LASER13.TRANSMISSION_SIM	0x28	40	Scaling to integer value (0 - 27648) Laser transmission
LASER14.TRANSMISSION_SIM	0x29	41	Scaling to integer value (0 - 27648) Laser transmission

FIBER1.TRANSMISSION	0x2A	42	16 -bits of floating point value (first part) Fiber transmission
	0x2B	43	16 -bits of floating point value (second part) Fiber transmission
FIBER2.TRANSMISSION	0x2C	44	16 -bits of floating point value (first part) Fiber transmission
	0x2D	45	16 -bits of floating point value (second part) Fiber transmission
REMOTERX1.GAIN	0x2E	46	16 -bits of floating point value (first part) Detector gain
	0x2F	47	16 -bits of floating point value (second part) Detector gain
REMOTERX2.GAIN	0x30	48	16 -bits of floating point value (first part) Detector gain
	0x31	49	16 -bits of floating point value (second part) Detector gain
LASER1.GAIN_TIA	0x32	50	16 -bits of floating point value (first part) Laser gain
	0x33	51	16 -bits of floating point value (second part) Laser gain
LASER2.GAIN_TIA	0x34	52	16 -bits of floating point value (first part) Laser gain
	0x35	53	16 -bits of floating point value (second part) Laser gain
LASER3.GAIN_TIA	0x36	54	16 -bits of floating point value (first part) Laser gain
	0x37	55	16 -bits of floating point value (second part) Laser gain
LASER4.GAIN_TIA	0x38	56	16 -bits of floating point value (first part) Laser gain
	0x39	57	16 -bits of floating point value (second part) Laser gain
TEC0.THL_REF_AMP	0x3A	58	16 -bits of floating point value (first part)

			Laser amplitude reference
	0x3B	59	16 -bits of floating point value (second part) Laser amplitude reference
	0x3C	60	16 -bits of floating point value (first part) Laser temperature conditions
	0x3D	61	16 -bits of floating point value (second part) Laser temperature conditions
TEC0.AMB_TEMPERATURE			
	0x3E	62	16 -bits of floating point value (first part) Laser amplitude reference
	0x3F	63	16 -bits of floating point value (second part) Laser amplitude reference
TEC1.THL_REF_AMP			
	0x40	64	16 -bits of floating point value (first part) Laser temperature conditions
	0x41	65	16 -bits of floating point value (second part) Laser temperature conditions
TEC1.AMB_TEMPERATURE			
	0x42	66	16 -bits of floating point value (first part) Laser amplitude reference
	0x43	67	16 -bits of floating point value (second part) Laser amplitude reference
TEC2.THL_REF_AMP			
	0x44	68	16 -bits of floating point value (first part) Laser temperature conditions
	0x45	69	16 -bits of floating point value (second part) Laser temperature conditions
TEC2.AMB_TEMPERATURE			
	0x46	70	16 -bits of floating point value (first part) Laser amplitude reference
TEC3.THL_REF_AMP			

	0x47	71	16 -bits of floating point value (second part) Laser amplitude reference
	0x48	72	16 -bits of floating point value (first part) Laser temperature conditions
TEC3.AMB_TEMPERATURE	0x49	73	16 -bits of floating point value (second part) Laser temperature conditions
SYSTEM.STATUS	0x4A	74	System status value 6 system ok
SYSTEM.STARTUP_PROCEDURE	0x4B	75	System startup procedure 0 - Low level platform is not working 1 - Device initialization and memory test 2 - Internal communication check 3 - Automatic gain control calibration procedure 4 - Device parameters check and set 5 - Lasers temperature stabilization (lasers are off) 6 - Lasers temperature stabilization (lasers are on) 7 - Lasers transmission check 8 - Self-calibration procedure 9 - Concentration measurement check 10 - Normal operation of the device (startup procedure is finished)
SYSTEM.TRANS_MP1_STATUS	0x4C	76	Value 1 ok Value 0 warning
SYSTEM.ERR_CODE	0x4D	77	Error codes for system
SYSTEM.AIO_ERROR	0x4E	78	Analog inputs error
SYSTEM.DIO_ERROR	0x4F	79	Digital inputs error
SYSTEM.RTD_PRESS_ERROR	0x50	80	RTD pressure error
SYSTEM.ALARM1	0x51	81	Alarm 1
SYSTEM.ALARM2	0x52	82	Alarm 2
SYSTEM.ALARM3	0x53	83	Alarm 3
SYSTEM.ALARM4	0x54	84	Alarm 4

SYSTEM.ALARM5	0x55	85	Alarm 5
SYSTEM.ALARM6	0x56	86	Alarm 6
SYSTEM.ALARM7	0x57	87	Alarm 7
SYSTEM.ALARM8	0x58	88	Alarm 8
SYSTEM.ALARM9	0x59	89	Alarm 9
SYSTEM.ALARM10	0x5A	90	Alarm 10
SYSTEM.CALIB_MODE	0x5B	91	Run in system calibrated mode
AOUT1			16 -bits of floating point value (first part)
	0x5C	92	Analog output value
			16 -bits of floating point value (second part)
	0x5D	93	Analog output value
AOUT2			16 -bits of floating point value (first part)
	0x5E	94	Analog output value
			16 -bits of floating point value (second part)
	0x5F	95	Analog output value
AOUT3			16 -bits of floating point value (first part)
	0x60	96	Analog output value
			16 -bits of floating point value (second part)
	0x61	97	Analog output value
AOUT4			16 -bits of floating point value (first part)
	0x62	98	Analog output value
			16 -bits of floating point value (second part)
	0x63	99	Analog output value
AIN1			16 -bits of floating point value (first part)
	0x64	100	Analog scaling input value
			16 -bits of floating point value (second part)
	0x65	101	Analog input value
AIN1.VAL			16 -bits of floating point value (first part)
	0x66	102	Analog input scaling value
			16 -bits of floating point value (second part)
	0x67	103	Analog input scaling value
AIN1.VALSIM	0x68	104	Scaling to integer value (0 - 27648)

			Analog input scaling value
AIN2	0x69	105	16 -bits of floating point value (first part) Analog input value
	0x6A	106	16 -bits of floating point value (second part) Analog input value
AIN2.VAL	0x6B	107	16 -bits of floating point value (first part) Analog input scaling value
	0x6C	108	16 -bits of floating point value (second part) Analog input scaling value
AIN2.VALSIM	0x6D	109	Scaling to integer value (0 - 27648) Analog input scaling value
AIN3	0x6E	110	16 -bits of floating point value (first part) Analog input value
	0x6F	111	16 -bits of floating point value (second part) Analog input value
AIN3.VAL	0x70	112	16 -bits of floating point value (first part) Analog input scaling value
	0x71	113	16 -bits of floating point value (second part) Analog input scaling value
AIN3.VALSIM	0x72	114	Scaling to integer value (0 - 27648) Analog input scaling value
AIN4	0x73	115	16 -bits of floating point value (first part) Analog input value
	0x74	116	16 -bits of floating point value (second part) Analog input value
AIN4.VAL	0x75	117	16 -bits of floating point value (first part) Analog input scaling value
	0x76	118	16 -bits of floating point value (second part)

			Analog input scaling value
AIN4.VALSIM	0x77	119	Scaling to integer value (0 - 27648) Analog input scaling value
RTD	0x78	120	16 -bits of floating point value (first part) Temperature sensor value
	0x79	121	16 -bits of floating point value (second part) Temperature sensor value
AMB PRESSURE	0x7A	122	16 -bits of floating point value (first part) Pressure sensor value
	0x7B	123	16 -bits of floating point value (second part) Pressure sensor value
DOUT	0x7C	124	DOUT & 0x01 – first digital output DOUT & 0x02 – second digital output DOUT & 0x04 – third digital output DOUT & 0x08 – fourth digital output
DIN	0x7D	125	DIN & 0x01 – first digital input DIN & 0x02 – second digital input DIN & 0x04 – third digital input DIN & 0x08 – fourth digital input
PROCESS.TEMP_IS	0x7E	126	Process temperature input signal selection
PROCESS.TEMP_MANUAL_VALUE	0x7F	127	16 -bits of floating point value (first part) Process temperature manual value
	0x80	128	16 -bits of floating point value (second part) Process temperature manual value
PROCESS.PRESS_IS	0x81	129	Process pressure input signal selection

PROCESS.PRESS_SENSOR_TYPE	0x82	130	Pressure sensor type selection (absolute/gauge)
PROCESS.PRESS_MANUAL_VALUE	0x83	131	16 -bits of floating point value (first part) Process pressure manual value
	0x84	132	16 -bits of floating point value (second part) Process pressure manual value
MEAS.PATH_LENGTH_CH1	0x85	133	16 -bits of floating point value (first part) Measuring path length channel 1
	0x86	134	16 -bits of floating point value (second part) Measuring path length channel 1
MEAS.PATH_LENGTH_CH2	0x87	135	16 -bits of floating point value (first part) Measuring path length channel 2
	0x88	136	16 -bits of floating point value (second part) Measuring path length channel 2
MEAS.RESPONSE_TIME_T90	0x89	137	16 -bits of floating point value (first part) Response time (T90) – const for IIR filter
	0x8A	138	16 -bits of floating point value (second part) Response time (T90) – const for IIR filter
GAS101.SPAN_CALIBRATION	0x8B	139	16 -bits of floating point value (first part) Span calibration factor
	0x8C	140	16 -bits of floating point value (second part) Span calibration factor
GAS101.OFFSET	0x8D	141	16 -bits of floating point value (first part) Span offset value
	0x8E	142	16 -bits of floating point value (second part) Span offset value
GAS102.SPAN_CALIBRATION	0x8F	143	16 -bits of floating point value (first part) Span calibration factor

	0x90	144	16 -bits of floating point value (second part) Span calibration factor
GAS102.OFFSET	0x91	145	16 -bits of floating point value (first part) Span offset value
	0x92	146	16 -bits of floating point value (second part) Span offset value
GAS103.SPAN_CALIBRATION	0x93	147	16 -bits of floating point value (first part) Span calibration factor
	0x94	148	16 -bits of floating point value (second part) Span calibration factor
GAS103.OFFSET	0x95	149	16 -bits of floating point value (first part) Span offset value
	0x96	150	16 -bits of floating point value (second part) Span offset value
GAS104.SPAN_CALIBRATION	0x97	151	16 -bits of floating point value (first part) Span calibration factor
	0x98	152	16 -bits of floating point value (second part) Span calibration factor
GAS104.OFFSET	0x99	153	16 -bits of floating point value (first part) Span offset value
	0x9A	154	16 -bits of floating point value (second part) Span offset value
GAS105.SPAN_CALIBRATION	0x9B	155	16 -bits of floating point value (first part) Span calibration factor
	0x9C	156	16 -bits of floating point value (second part) Span calibration factor
GAS105.OFFSET	0x9D	157	16 -bits of floating point value (first part) Span offset value
	0x9E	158	16 -bits of floating point value (second part) Span offset value
GAS106.SPAN_CALIBRATION	0x9F	159	16 -bits of floating point value (first part) Span calibration factor
	0xA0	160	16 -bits of floating point value (second part)

			Span calibration factor
GAS106.OFFSET	0xA1	161	16 -bits of floating point value (first part) Span offset value
	0xA2	162	16 -bits of floating point value (second part) Span offset value
GAS107.SPAN_CALIBRATION	0xA3	163	16 -bits of floating point value (first part) Span calibration factor
	0xA4	164	16 -bits of floating point value (second part) Span calibration factor
GAS107.OFFSET	0xA5	165	16 -bits of floating point value (first part) Span offset value
	0xA6	166	16 -bits of floating point value (second part) Span offset value
GAS108.SPAN_CALIBRATION	0xA7	167	16 -bits of floating point value (first part) Span calibration factor
	0xA8	168	16 -bits of floating point value (second part) Span calibration factor
GAS108.OFFSET	0xA9	169	16 -bits of floating point value (first part) Span offset value
	0xAA	170	16 -bits of floating point value (second part) Span offset value
TEMP.SPAN_CALIBRATION	0xAB	171	16 -bits of floating point value (first part) Span calibration factor
	0xAC	172	16 -bits of floating point value (second part) Span calibration factor
TEMP.OFFSET	0xAD	173	16 -bits of floating point value (first part) Span offset value
	0xAE	174	16 -bits of floating point value (second part) Span offset value
DOUT.DO1	0xAF	175	Signal selection for digital output
DOUT.DO2	0xB0	176	Signal selection for digital output
DOUT.DO3	0xB1	177	Signal selection for digital output

DOUT.DO4	0xB2	178	Signal selection for digital output
AOUT.FORCE_MANUAL_MODE_ENABLE	0xB3	179	Force manual mode for all analog outputs
AOUT.SCALE_ENALE	0xB4	180	Enable scaling range for all analog outputs
AOUT.CALIBRATED	0xB5	181	Enable/disable calibration factors
AOUT1.SELECT_SIGNAL	0xB6	182	Measurement signal selection for the output
AOUT1.MANUAL_VALUE	0xB7	183	16 -bits of floating point value (first part) Manual mode value in scaling range
	0xB8	184	16 -bits of floating point value (second part) Manual mode value in scaling range
AOUT1.SCALE_MIN	0xB9	185	16 -bits of floating point value (first part) Scaling range value corresponds to 4 mA
	0xBA	186	16 -bits of floating point value (second part) Scaling range value corresponds to 4 mA
AOUT1.SCALE_MAX	0xBB	187	16 -bits of floating point value (first part) Scaling range value corresponds to 20 mA
	0xBC	188	16 -bits of floating point value (second part) Scaling range value corresponds to 20 mA
AOUT1.A	0xBD	189	16 -bits of floating point value (first part) Calibration factor A on first output ($y=Ax+B$)
	0xBE	190	16 -bits of floating point value (second part) Calibration factor A on first output ($y=Ax+B$)
AOUT1.B	0xBF	191	16 -bits of floating point value (first part) Calibration factor B on first output ($y=Ax+B$)
	0xC0	192	16 -bits of floating point value (second part) Calibration factor B on first output ($y=Ax+B$)

AOUT2.SELECT_SIGNAL	0xC1	193	Measurement signal selection for the output
AOUT2.MANUAL_VALUE	0xC2	194	16 -bits of floating point value (first part) Manual mode value in scaling range
	0xC3	195	16 -bits of floating point value (second part) Manual mode value in scaling range
AOUT2.SCALE_MIN	0xC4	196	16 -bits of floating point value (first part) Scaling range value corresponds to 4 mA
	0xC5	197	16 -bits of floating point value (second part) Scaling range value corresponds to 4 mA
AOUT2.SCALE_MAX	0xC6	198	16 -bits of floating point value (first part) Scaling range value corresponds to 20 mA
	0xC7	199	16 -bits of floating point value (second part) Scaling range value corresponds to 20 mA
AOUT2.A	0xC8	200	16 -bits of floating point value (first part) Calibration factor A on second output ($y = Ax + B$)
	0xC9	201	16 -bits of floating point value (second part) Calibration factor A on second output ($y = Ax + B$)
AOUT2.B	0xCA	202	16 -bits of floating point value (first part) Calibration factor B on second output ($y = Ax + B$)
	0xCB	203	16 -bits of floating point value (second part) Calibration factor B on second output ($y = Ax + B$)
AOUT3.SELECT_SIGNAL	0xCC	204	Measurement signal selection for the output
AOUT3.MANUAL_VALUE	0xCD	205	16 -bits of floating point value (first part) Manual mode value in scaling range
	0xCE	206	16 -bits of floating point value (second part)

			Manual mode value in scaling range
AOUT3.SCALE_MIN	0xCF	207	16 -bits of floating point value (first part) Scaling range value corresponds to 4 mA
	0xD0	208	16 -bits of floating point value (second part) Scaling range value corresponds to 4 mA
AOUT3.SCALE_MAX	0xD1	209	16 -bits of floating point value (first part) Scaling range value corresponds to 20 mA
	0xD2	210	16 -bits of floating point value (second part) Scaling range value corresponds to 20 mA
AOUT3.A	0xD3	211	16 -bits of floating point value (first part) Calibration factor A on third output ($y=Ax+B$)
	0xD4	212	16 -bits of floating point value (second part) Calibration factor A on third output ($y=Ax+B$)
AOUT3.B	0xD5	213	16 -bits of floating point value (first part) Calibration factor B on third output ($y=Ax+B$)
	0xD6	214	16 -bits of floating point value (second part) Calibration factor B on third output ($y=Ax+B$)
AOUT4.SELECT_SIGNAL	0xD7	215	Measurement signal selection for the output
AOUT4.MANUAL_VALUE	0xD8	216	16 -bits of floating point value (first part) Manual mode value in scaling range
	0xD9	217	16 -bits of floating point value (second part) Manual mode value in scaling range
AOUT4.SCALE_MIN	0xDA	218	16 -bits of floating point value (first part) Scaling range value corresponds to 4 mA
	0xDB	219	16 -bits of floating point value (second part)

			Scaling range value corresponds to 4 mA
AOUT4.SCALE_MAX	0xDC	220	16 -bits of floating point value (first part) Scaling range value corresponds to 20 mA
	0xDD	221	16 -bits of floating point value (second part) Scaling range value corresponds to 20 mA
AOUT4.A	0xDE	222	16 -bits of floating point value (first part) Calibration factor A on fourth output ($y=Ax+B$)
	0xDF	223	16 -bits of floating point value (second part) Calibration factor A on fourth output ($y=Ax+B$)
AOUT4.B	0xE0	224	16 -bits of floating point value (first part) Calibration factor B on fourth output ($y=Ax+B$)
	0xE1	225	16 -bits of floating point value (second part) Calibration factor B on fourth output ($y=Ax+B$)
AIN.SCALE_ENABLE	0xE2	226	Enable scaling range for all analog inputs
AIN.CALIBRATED	0xE3	227	Enable/disable calibration factors
AIN.MEDIAN	0xE4	228	Number of samples put to median filter
AIN.IIR	0xE5	229	16 -bits of floating point value (first part) Const time value put to IIR filter
	0xE6	230	16 -bits of floating point value (second part) Const time value put to IIR filter
AIN1.SCALE_MIN	0xE7	231	16 -bits of floating point value (first part) Scaling range value corresponds to 4 mA
	0xE8	232	16 -bits of floating point value (second part) Scaling range value corresponds to 4 mA
AIN1.SCALE_MAX	0xE9	233	16 -bits of floating point value (first part)

			Scaling range value corresponds to 20 mA
	0xEA	234	16 -bits of floating point value (second part) Scaling range value corresponds to 20 mA
AIN1.A	0xEB	235	16 -bits of floating point value (first part) Calibration factor A on first input ($y=Ax+B$)
	0xEC	236	16 -bits of floating point value (second part) Calibration factor A on first input ($y=Ax+B$)
AIN1.B	0xED	237	16 -bits of floating point value (first part) Calibration factor B on first input ($y=Ax+B$)
	0xEE	238	16 -bits of floating point value (second part) Calibration factor B on first input ($y=Ax+B$)
AIN2.SCALE_MIN	0xEF	239	16 -bits of floating point value (first part) Scaling range value corresponds to 4 mA
	0xF0	240	16 -bits of floating point value (second part) Scaling range value corresponds to 4 mA
AIN2.SCALE_MAX	0xF1	241	16 -bits of floating point value (first part) Scaling range value corresponds to 20 mA
	0xF2	242	16 -bits of floating point value (second part) Scaling range value corresponds to 20 mA
AIN2.A	0xF3	243	16 -bits of floating point value (first part) Calibration factor A on second input ($y=Ax+B$)
	0xF4	244	16 -bits of floating point value (second part) Calibration factor A on second input ($y=Ax+B$)
AIN2.B	0xF5	245	16 -bits of floating point value (first part) Calibration factor B on second input ($y=Ax+B$)

	0xF6	246	16 -bits of floating point value (second part) Calibration factor B on second input ($y=Ax+B$)
AIN3.SCALE_MIN	0xF7	247	16 -bits of floating point value (first part) Scaling range value corresponds to 4 mA
	0xF8	248	16 -bits of floating point value (second part) Scaling range value corresponds to 4 mA
AIN3.SCALE_MAX	0xF9	249	16 -bits of floating point value (first part) Scaling range value corresponds to 20 mA
	0xFA	250	16 -bits of floating point value (second part) Scaling range value corresponds to 20 mA
AIN3.A	0xFB	251	16 -bits of floating point value (first part) Calibration factor A on third input ($y=Ax+B$)
	0xFC	252	16 -bits of floating point value (second part) Calibration factor A on third input ($y=Ax+B$)
AIN3.B	0xFD	253	16 -bits of floating point value (first part) Calibration factor B on third input ($y=Ax+B$)
	0xFE	254	16 -bits of floating point value (second part) Calibration factor B on third input ($y=Ax+B$)
AIN4.SCALE_MIN	0xFF	255	16 -bits of floating point value (first part) Scaling range value corresponds to 4 mA
	0x100	256	16 -bits of floating point value (second part) Scaling range value corresponds to 4 mA
AIN4.SCALE_MAX	0x101	257	16 -bits of floating point value (first part) Scaling range value corresponds to 20 mA
	0x102	258	16 -bits of floating point value (second part)

			Scaling range value corresponds to 20 mA
AIN4.A	0x103	259	16 -bits of floating point value (first part) Calibration factor A on fourth input ($y=Ax+B$)
	0x104	260	16 -bits of floating point value (second part) Calibration factor A on fourth input ($y=Ax+B$)
AIN4.B	0x105	261	16 -bits of floating point value (first part) Calibration factor B on fourth input ($y=Ax+B$)
	0x106	262	16 -bits of floating point value (second part) Calibration factor B on fourth input ($y=Ax+B$)
RTD.MEDIAN	0x107	263	Number of samples put to median filter
RTD.IIR	0x108	264	16 -bits of floating point value (first part) Const time value put to IIR filter
	0x109	265	16 -bits of floating point value (second part) Const time value put to IIR filter
AMB_PRESS.MEDIAN	0x10A	266	Number of samples put to median filter
AMB_PRESS.IIR	0x10B	267	16 -bits of floating point value (first part) Const time value put to IIR filter
	0x10C	268	16 -bits of floating point value (second part) Const time value put to IIR filter
SYSTEM.CALIB_MODE_ENABLE	0x10D	269	Set system to calibrated mode
ALARM1.ENABLE	0x10E	270	Alarm enable/disable
ALARM1.AUTORESET_ENABLE	0x10F	271	Alarm auto reset enable/disable
ALARM1.RESET	0x110	272	Alarm manual reset
ALARM1.NORMAL_STATE	0x111	273	Alarm normal state value
ALARM1.SIGNAL	0x112	274	Alarm signal selection
ALARM1.OPERATOR	0x113	275	Alarm mathematical operator
ALARM1.THRESHOLD	0x114	276	16 -bits of floating point value (first part)

			Alarm threshold value
	0x115	277	16 -bits of floating point value (second part) Alarm threshold value
ALARM1.HYSTERESIS	0x116	278	16 -bits of floating point value (first part) Alarm hysteresis value
	0x117	279	16 -bits of floating point value (second part) Alarm hysteresis value
ALARM2.ENABLE	0x118	280	Alarm enable/disable
ALARM2.AUTORESET_ENABLE	0x119	281	Alarm auto reset enable/disable
ALARM2.RESET	0x11A	282	Alarm manual reset
ALARM2.NORMAL_STATE	0x11B	283	Alarm normal state value
ALARM2.SIGNAL	0x11C	284	Alarm signal selection
ALARM2.OPERATOR	0x11D	285	Alarm mathematical operator
ALARM2.THRESHOLD	0x11E	286	16 -bits of floating point value (first part) Alarm threshold value
	0x11F	287	16 -bits of floating point value (second part) Alarm threshold value
ALARM2.HYSTERESIS	0x120	288	16 -bits of floating point value (first part) Alarm hysteresis value
	0x121	289	16 -bits of floating point value (second part) Alarm hysteresis value
ALARM3.ENABLE	0x122	290	Alarm enable/disable
ALARM3.AUTORESET_ENABLE	0x123	291	Alarm auto reset enable/disable
ALARM3.RESET	0x124	292	Alarm manual reset
ALARM3.NORMAL_STATE	0x125	293	Alarm normal state value
ALARM3.SIGNAL	0x126	294	Alarm signal selection
ALARM3.OPERATOR	0x127	295	Alarm mathematical operator
ALARM3.THRESHOLD	0x128	296	16 -bits of floating point value (first part) Alarm threshold value
	0x129	297	16 -bits of floating point value (second part) Alarm threshold value
ALARM3.HYSTERESIS	0x12A	298	16 -bits of floating point value (first part) Alarm hysteresis value
	0x12B	299	16 -bits of floating point value (second part)

			Alarm hysteresis value
ALARM4.ENABLE	0x12C	300	Alarm enable/disable
ALARM4.AUTORESET_ENABLE	0x12D	301	Alarm auto reset enable/disable
ALARM4.RESET	0x12E	302	Alarm manual reset
ALARM4.NORMAL_STATE	0x12F	303	Alarm normal state value
ALARM4.SIGNAL	0x130	304	Alarm signal selection
ALARM4.OPERATOR	0x131	305	Alarm mathematical operator
ALARM4.THRESHOLD	0x132	306	16 -bits of floating point value (first part) Alarm threshold value
	0x133	307	16 -bits of floating point value (second part) Alarm threshold value
ALARM4.HYSTERESIS	0x134	308	16 -bits of floating point value (first part) Alarm hysteresis value
	0x135	309	16 -bits of floating point value (second part) Alarm hysteresis value
ALARM5.ENABLE	0x136	310	Alarm enable/disable
ALARM5.AUTORESET_ENABLE	0x137	311	Alarm auto reset enable/disable
ALARM5.RESET	0x138	312	Alarm manual reset
ALARM5.NORMAL_STATE	0x139	313	Alarm normal state value
ALARM5.SIGNAL	0x13A	314	Alarm signal selection
ALARM5.OPERATOR	0x13B	315	Alarm mathematical operator
ALARM5.THRESHOLD	0x13C	316	16 -bits of floating point value (first part) Alarm threshold value
	0x13D	317	16 -bits of floating point value (second part) Alarm threshold value
ALARM5.HYSTERESIS	0x13E	318	16 -bits of floating point value (first part) Alarm hysteresis value
	0x13F	319	16 -bits of floating point value (second part) Alarm hysteresis value
ALARM6.ENABLE	0x140	320	Alarm enable/disable
ALARM6.AUTORESET_ENABLE	0x141	321	Alarm auto reset enable/disable
ALARM6.RESET	0x142	322	Alarm manual reset
ALARM6.NORMAL_STATE	0x143	323	Alarm normal state value
ALARM6.SIGNAL	0x144	324	Alarm signal selection
ALARM6.OPERATOR	0x145	325	Alarm mathematical operator

ALARM6.THRESHOLD	0x146	326	16 -bits of floating point value (first part) Alarm threshold value
	0x147	327	16 -bits of floating point value (second part) Alarm threshold value
ALARM6.HYSTERESIS	0x148	328	16 -bits of floating point value (first part) Alarm hysteresis value
	0x149	329	16 -bits of floating point value (second part) Alarm hysteresis value
ALARM7.ENABLE	0x14A	330	Alarm enable/disable
ALARM7.AUTORESET_ENABLE	0x14B	331	Alarm auto reset enable/disable
ALARM7.RESET	0x14C	332	Alarm manual reset
ALARM7.NORMAL_STATE	0x14D	333	Alarm normal state value
ALARM7.SIGNAL	0x14E	334	Alarm signal selection
ALARM7.OPERATOR	0x14F	335	Alarm mathematical operator
ALARM7.THRESHOLD	0x150	336	16 -bits of floating point value (first part) Alarm threshold value
	0x151	337	16 -bits of floating point value (second part) Alarm threshold value
ALARM7.HYSTERESIS	0x152	338	16 -bits of floating point value (first part) Alarm hysteresis value
	0x153	339	16 -bits of floating point value (second part) Alarm hysteresis value
ALARM8.ENABLE	0x154	340	Alarm enable/disable
ALARM8.AUTORESET_ENABLE	0x155	341	Alarm auto reset enable/disable
ALARM8.RESET	0x156	342	Alarm manual reset
ALARM8.NORMAL_STATE	0x157	343	Alarm normal state value
ALARM8.SIGNAL	0x158	344	Alarm signal selection
ALARM8.OPERATOR	0x159	345	Alarm mathematical operator
ALARM8.THRESHOLD	0x15A	346	16 -bits of floating point value (first part) Alarm threshold value
	0x15B	347	16 -bits of floating point value (second part) Alarm threshold value
ALARM8.HYSTERESIS	0x15C	348	16 -bits of floating point value (first part) Alarm hysteresis value

	0x15D	349	16 -bits of floating point value (second part) Alarm hysteresis value
ALARM9.ENABLE	0x15E	350	Alarm enable/disable
ALARM9.AUTORESET_ENABLE	0x15F	351	Alarm auto reset enable/disable
ALARM9.RESET	0x160	352	Alarm manual reset
ALARM9.NORMAL_STATE	0x161	353	Alarm normal state value
ALARM9.SIGNAL	0x162	354	Alarm signal selection
ALARM9.OPERATOR	0x163	355	Alarm mathematical operator
ALARM9.THRESHOLD	0x164	356	16 -bits of floating point value (first part) Alarm threshold value
	0x165	357	16 -bits of floating point value (second part) Alarm threshold value
ALARM9.HYSTERESIS	0x166	358	16 -bits of floating point value (first part) Alarm hysteresis value
	0x167	359	16 -bits of floating point value (second part) Alarm hysteresis value
ALARM10.ENABLE	0x168	360	Alarm enable/disable
ALARM10.AUTORESET_ENABLE	0x169	361	Alarm auto reset enable/disable
ALARM10.RESET	0x16A	362	Alarm manual reset
ALARM10.NORMAL_STATE	0x16B	363	Alarm normal state value
ALARM10.SIGNAL	0x16C	364	Alarm signal selection
ALARM10.OPERATOR	0x16D	365	Alarm mathematical operator
ALARM10.THRESHOLD	0x16E	366	16 -bits of floating point value (first part) Alarm threshold value
	0x16F	367	16 -bits of floating point value (second part) Alarm threshold value
ALARM10.HYSTERESIS	0x170	368	16 -bits of floating point value (first part) Alarm hysteresis value
	0x171	369	16 -bits of floating point value (second part) Alarm hysteresis value
HMI.PASSWORD	0x172	370	HMI pin needs to change parameters from HMI panel (value range 0-9999)

Table 6. Modbus Input register map (function 0x4).

System		Gas Concentration	Transmission	AI	AO	Description
Integer	Hexadecimal	0 ppm to 10 ppm	0% to 100%	4mA to 20mA	4mA to 20mA	
32767	7FFF	11.851 ppm	118.51 %	22.96 mA	22.96 mA	Overflow
32512	7F00					
32511	7EFF	11.759 ppm	117.59 %	22.81 mA	22.81 mA	Overshoot range
27649	6C01					
27648	6C00	10 ppm	100 %	20 mA	20 mA	Nominal range
20736	5100	7.5 ppm	75 %	16 mA	16 mA	
1	0001	0.00036 ppm	0.0036 %	4 mA + 578.7 nA	4 mA + 578.7 nA	
0	0000	0 ppm	0 %	4 mA	4 mA	
-1	FFFF					Undershoot range
-4864	ED00	-1.759 ppm		1.185 mA	1.185 mA	
-4865	ECFF					Underflow
-32768	8000					

Table 7. Scaling to integer value example (0-27648).

Register Name	Register address (hex)	Register address (dec)	Comments
PROCESS.TEMP_IS	0x00	0	Process temperature input signal selection
PROCESS.TEMP_MANUAL_VALUE	0x01	1	16 -bits of floating point value (first part) Process temperature manual value
	0x02	2	16 -bits of floating point value (second part) Process temperature manual value
PROCESS.PRESS_IS	0x03	3	Process pressure input signal selection
PROCESS.PRESS_SENSOR_TYPE	0x04	4	Pressure sensor type selection (absolute/gauge)
PROCESS.PRESS_MANUAL_VALUE	0x05	5	16 -bits of floating point value (first part) Process pressure manual value in
	0x06	6	16 -bits of floating point value (second part) Process pressure manual value in
MEAS.PATH_LENGTH_CH1	0x07	7	16 -bits of floating point value (first part)

			Measuring path length channel 1
	0x08	8	16 -bits of floating point value (second part) Measuring path length channel 1
MEAS.PATH_LENGTH_CH2	0x09	9	16 -bits of floating point value (first part) Measuring path length channel 2
	0x0A	10	16 -bits of floating point value (second part) Measuring path length channel 2
MEAS.RESPONSE_TIME_T90	0x0B	11	16 -bits of floating point value (first part) Response time (T90) – const for IIR filter
	0x0C	12	16 -bits of floating point value (second part) Response time (T90) – const for IIR filter
GAS101.SPAN_CALIBRATION	0x0D	13	16 -bits of floating point value (first part) Span calibration factor
	0x0E	14	16 -bits of floating point value (second part) Span calibration factor
GAS101.OFFSET	0x0F	15	16 -bits of floating point value (first part) Span offset value
	0x10	16	16 -bits of floating point value (second part) Span offset value
GAS102.SPAN_CALIBRATION	0x11	17	16 -bits of floating point value (first part) Span calibration factor
	0x12	18	16 -bits of floating point value (second part) Span calibration factor
GAS102.OFFSET	0x13	19	16 -bits of floating point value (first part) Span offset value
	0x14	20	16 -bits of floating point value (second part) Span offset value
GAS103.SPAN_CALIBRATION	0x15	21	16 -bits of floating point value (first part) Span calibration factor

	0x16	22	16 -bits of floating point value (second part) Span calibration factor
GAS103.OFFSET	0x17	23	16 -bits of floating point value (first part) Span offset value
	0x18	24	16 -bits of floating point value (second part) Span offset value
GAS104.SPAN_CALIBRATION	0x19	25	16 -bits of floating point value (first part) Span calibration factor
	0x1A	26	16 -bits of floating point value (second part) Span calibration factor
GAS104.OFFSET	0x1B	27	16 -bits of floating point value (first part) Span offset value
	0x1C	28	16 -bits of floating point value (second part) Span offset value
GAS105.SPAN_CALIBRATION	0x1D	29	16 -bits of floating point value (first part) Span calibration factor
	0x1E	30	16 -bits of floating point value (second part) Span calibration factor
GAS105.OFFSET	0x1F	31	16 -bits of floating point value (first part) Span offset value
	0x20	32	16 -bits of floating point value (second part) Span offset value
GAS106.SPAN_CALIBRATION	0x21	33	16 -bits of floating point value (first part) Span calibration factor
	0x22	34	16 -bits of floating point value (second part) Span calibration factor
GAS106.OFFSET	0x23	35	16 -bits of floating point value (first part) Span offset value
	0x24	36	16 -bits of floating point value (second part) Span offset value
GAS107.SPAN_CALIBRATION	0x25	37	16 -bits of floating point value (first part) Span calibration factor
	0x26	38	16 -bits of floating point value (second part)

			Span calibration factor
GAS107.OFFSET	0x27	39	16 -bits of floating point value (first part) Span offset value
	0x28	40	16 -bits of floating point value (second part) Span offset value
GAS108.SPAN_CALIBRATION	0x29	41	16 -bits of floating point value (first part) Span calibration factor
	0x2A	42	16 -bits of floating point value (second part) Span calibration factor
GAS108.OFFSET	0x2B	43	16 -bits of floating point value (first part) Span offset value
	0x2C	44	16 -bits of floating point value (second part) Span offset value
TEMP.SPAN_CALIBRATION	0x2D	45	16 -bits of floating point value (first part) Span calibration factor
	0x2E	46	16 -bits of floating point value (second part) Span calibration factor
TEMP.OFFSET	0x2F	47	16 -bits of floating point value (first part) Span offset value
	0x30	48	16 -bits of floating point value (second part) Span offset value
DOUT.DO1	0x31	49	Signal selection for digital output
DOUT.DO2	0x32	50	Signal selection for digital output
DOUT.DO3	0x33	51	Signal selection for digital output
DOUT.DO4	0x34	52	Signal selection for digital output
AOUT.FORCE_MANUAL_MODE ENABLE	0x35	53	Force manual mode for all analog outputs
AOUT.SCALE_ENALE	0x36	54	Enable scaling range for all analog outputs
AOUT.CALIBRATED	0x37	55	Enable/disable calibration factors
AOUT1.SELECT_SIGNAL	0x38	56	Measurement signal selection for the output
AOUT1.MANUAL_VALUE	0x39	57	16 -bits of floating point value (first part)

			Manual mode value in scaling range
	0x3A	58	16 -bits of floating point value (second part) Manual mode value in scaling range
AOUT1.SCALE_MIN	0x3B	59	16 -bits of floating point value (first part) Scaling range value corresponds to 4 mA
	0x3C	60	16 -bits of floating point value (second part) Scaling range value corresponds to 4 mA
AOUT1.SCALE_MAX	0x3D	61	16 -bits of floating point value (first part) Scaling range value corresponds to 20 mA
	0x3E	62	16 -bits of floating point value (second part) Scaling range value corresponds to 20 mA
AOUT1.A	0x3F	63	16 -bits of floating point value (first part) Calibration factor A on first output ($y=Ax+B$)
	0x40	64	16 -bits of floating point value (second part) Calibration factor A on first output ($y=Ax+B$)
AOUT1.B	0x41	65	16 -bits of floating point value (first part) Calibration factor B on first output ($y=Ax+B$)
	0x42	66	16 -bits of floating point value (second part) Calibration factor B on first output ($y=Ax+B$)
AOUT2.SELECT_SIGNAL	0x43	67	Measurement signal selection for the output
AOUT2.MANUAL_VALUE	0x44	68	16 -bits of floating point value (first part) Manual mode value in scaling range
	0x45	69	16 -bits of floating point value (second part) Manual mode value in scaling range
AOUT2.SCALE_MIN	0x46	70	16 -bits of floating point value (first part)

			Scaling range value corresponds to 4 mA
	0x47	71	16 -bits of floating point value (second part) Scaling range value corresponds to 4 mA
AOUT2.SCALE_MAX	0x48	72	16 -bits of floating point value (first part) Scaling range value corresponds to 20 mA
	0x49	73	16 -bits of floating point value (second part) Scaling range value corresponds to 20 mA
AOUT2.A	0x4A	74	16 -bits of floating point value (first part) Calibration factor A on second output ($y = Ax + B$)
	0x4B	75	16 -bits of floating point value (second part) Calibration factor A on second output ($y = Ax + B$)
AOUT2.B	0x4C	76	16 -bits of floating point value (first part) Calibration factor B on second output ($y = Ax + B$)
	0x4D	77	16 -bits of floating point value (second part) Calibration factor B on second output ($y = Ax + B$)
AOUT3.SELECT_SIGNAL	0x4E	78	Measurement signal selection for the output
AOUT3.MANUAL_VALUE	0x4F	79	16 -bits of floating point value (first part) Manual mode value in scaling range
	0x50	80	16 -bits of floating point value (second part) Manual mode value in scaling range
AOUT3.SCALE_MIN	0x51	81	16 -bits of floating point value (first part) Scaling range value corresponds to 4 mA
	0x52	82	16 -bits of floating point value (second part) Scaling range value corresponds to 4 mA
AOUT3.SCALE_MAX	0x53	83	16 -bits of floating point value (first part)

			Scaling range value corresponds to 20 mA
	0x54	84	16 -bits of floating point value (second part) Scaling range value corresponds to 20 mA
AOUT3.A	0x55	85	16 -bits of floating point value (first part) Calibration factor A on third output ($y=Ax+B$)
	0x56	86	16 -bits of floating point value (second part) Calibration factor A on third output ($y=Ax+B$)
AOUT3.B	0x57	87	16 -bits of floating point value (first part) Calibration factor B on third output ($y=Ax+B$)
	0x58	88	16 -bits of floating point value (second part) Calibration factor B on third output ($y=Ax+B$)
AOUT4.SELECT_SIGNAL	0x59	89	Measurement signal selection for the output
AOUT4.MANUAL_VALUE	0x5A	90	16 -bits of floating point value (first part) Manual mode value in scaling range
	0x5B	91	16 -bits of floating point value (second part) Manual mode value in scaling range
AOUT4.SCALE_MIN	0x5C	92	16 -bits of floating point value (first part) Scaling range value corresponds to 4 mA
	0x5D	93	16 -bits of floating point value (second part) Scaling range value corresponds to 4 mA
AOUT4.SCALE_MAX	0x5E	94	16 -bits of floating point value (first part) Scaling range value corresponds to 20 mA
	0x5F	95	16 -bits of floating point value (second part) Scaling range value corresponds to 20 mA
AOUT4.A	0x60	96	16 -bits of floating point value (first part)

			Calibration factor A on fourth output ($y=Ax+B$)
	0x61	97	16 -bits of floating point value (second part) Calibration factor A on fourth output ($y=Ax+B$)
AOUT4.B	0x62	98	16 -bits of floating point value (first part) Calibration factor B on fourth output ($y=Ax+B$)
	0x63	99	16 -bits of floating point value (second part) Calibration factor B on fourth output ($y=Ax+B$)
AIN.SCALE_ENABLE	0x64	100	Enable scaling range for all analog inputs
AIN.CALIBRATED	0x65	101	Enable/disable calibration factors
AIN.MEDIAN	0x66	102	Number of samples put to median filter
AIN.IIR	0x67	103	16 -bits of floating point value (first part) Const time value put to IIR filter
	0x68	104	16 -bits of floating point value (second part) Const time value put to IIR filter
AIN1.SCALE_MIN	0x69	105	16 -bits of floating point value (first part) Scaling range value corresponds to 4 mA
	0x6A	106	16 -bits of floating point value (second part) Scaling range value corresponds to 4 mA
AIN1.SCALE_MAX	0x6B	107	16 -bits of floating point value (first part) Scaling range value corresponds to 20 mA
	0x6C	108	16 -bits of floating point value (second part) Scaling range value corresponds to 20 mA
AIN1.A	0x6D	109	16 -bits of floating point value (first part) Calibration factor A on first input ($y=Ax+B$)
	0x6E	110	16 -bits of floating point value (second part)

			Calibration factor A on first input ($y=Ax+B$)
AIN1.B	0x6F	111	16 -bits of floating point value (first part) Calibration factor B on first input ($y=Ax+B$)
	0x70	112	16 -bits of floating point value (second part) Calibration factor B on first input ($y=Ax+B$)
AIN2.SCALE_MIN	0x71	113	16 -bits of floating point value (first part) Scaling range value corresponds to 4 mA
	0x72	114	16 -bits of floating point value (second part) Scaling range value corresponds to 4 mA
AIN2.SCALE_MAX	0x73	115	16 -bits of floating point value (first part) Scaling range value corresponds to 20 mA
	0x74	116	16 -bits of floating point value (second part) Scaling range value corresponds to 20 mA
AIN2.A	0x75	117	16 -bits of floating point value (first part) Calibration factor A on second input ($y=Ax+B$)
	0x76	118	16 -bits of floating point value (second part) Calibration factor A on second input ($y=Ax+B$)
AIN2.B	0x77	119	16 -bits of floating point value (first part) Calibration factor B on second input ($y=Ax+B$)
	0x78	120	16 -bits of floating point value (second part) Calibration factor B on second input ($y=Ax+B$)
AIN3.SCALE_MIN	0x79	121	16 -bits of floating point value (first part) Scaling range value corresponds to 4 mA
	0x7A	122	16 -bits of floating point value (second part) Scaling range value corresponds to 4 mA

AIN3.SCALE_MAX	0x7B	123	16 -bits of floating point value (first part) Scaling range value corresponds to 20 mA
	0x7C	124	16 -bits of floating point value (second part) Scaling range value corresponds to 20 mA
AIN3.A	0x7D	125	16 -bits of floating point value (first part) Calibration factor A on third input ($y=Ax+B$)
	0x7E	126	16 -bits of floating point value (second part) Calibration factor A on third input ($y=Ax+B$)
AIN3.B	0x7F	127	16 -bits of floating point value (first part) Calibration factor B on third input ($y=Ax+B$)
	0x80	128	16 -bits of floating point value (second part) Calibration factor B on third input ($y=Ax+B$)
AIN4.SCALE_MIN	0x81	129	16 -bits of floating point value (first part) Scaling range value corresponds to 4 mA
	0x82	130	16 -bits of floating point value (second part) Scaling range value corresponds to 4 mA
AIN4.SCALE_MAX	0x83	131	16 -bits of floating point value (first part) Scaling range value corresponds to 20 mA
	0x84	132	16 -bits of floating point value (second part) Scaling range value corresponds to 20 mA
AIN4.A	0x85	133	16 -bits of floating point value (first part) Calibration factor A on fourth input ($y=Ax+B$)
	0x86	134	16 -bits of floating point value (second part) Calibration factor A on fourth input ($y=Ax+B$)
AIN4.B	0x87	135	16 -bits of floating point value (first part)

			Calibration factor B on fourth input ($y=Ax+B$)
	0x88	136	16 -bits of floating point value (second part) Calibration factor B on fourth input ($y=Ax+B$)
RTD.MEDIAN	0x89	137	Number of samples put to median filter
RTD.IIR	0x8A	138	16 -bits of floating point value (first part) Const time value put to IIR filter
	0x8B	139	16 -bits of floating point value (second part) Const time value put to IIR filter
AMB_PRESS.MEDIAN	0x8C	140	Number of samples put to median filter
AMB_PRESS.IIR	0x8D	141	16 -bits of floating point value (first part) Const time value put to IIR filter
	0x8E	142	16 -bits of floating point value (second part) Const time value put to IIR filter
SYSTEM.CALIB_MODE_ENABLE	0x8F	143	Set system to calibrated mode
ALARM1.ENABLE	0x90	144	Alarm enable/disable
ALARM1.AUTORESET_ENABLE	0x91	145	Alarm auto reset enable/disable
ALARM1.RESET	0x92	146	Alarm manual reset
ALARM1.NORMAL_STATE	0x93	147	Alarm normal state value
ALARM1.SIGNAL	0x94	148	Alarm signal selection
ALARM1.OPERATOR	0x95	149	Alarm mathematical operator
ALARM1.THRESHOLD	0x96	150	16 -bits of floating point value (first part) Alarm threshold value
	0x97	151	16 -bits of floating point value (second part) Alarm threshold value
ALARM1.HYSTERESIS	0x98	152	16 -bits of floating point value (first part) Alarm hysteresis value
	0x99	153	16 -bits of floating point value (second part) Alarm hysteresis value

ALARM2.ENABLE	0x9A	154	Alarm enable/disable
ALARM2.AUTORESET_ENABLE	0x9B	155	Alarm auto reset enable/disable
ALARM2.RESET	0x9C	156	Alarm manual reset
ALARM2.NORMAL_STATE	0x9D	157	Alarm normal state value
ALARM2.SIGNAL	0x9E	158	Alarm signal selection
ALARM2.OPERATOR	0x9F	159	Alarm mathematical operator
ALARM2.THRESHOLD	0xA0	160	16 -bits of floating point value (first part) Alarm threshold value
	0xA1	161	16 -bits of floating point value (second part) Alarm threshold value
ALARM2.HYSTERESIS	0xA2	162	16 -bits of floating point value (first part) Alarm hysteresis value
	0xA3	163	16 -bits of floating point value (second part) Alarm hysteresis value
ALARM3.ENABLE	0xA4	164	Alarm enable/disable
ALARM3.AUTORESET_ENABLE	0xA5	165	Alarm auto reset enable/disable
ALARM3.RESET	0xA6	166	Alarm manual reset
ALARM3.NORMAL_STATE	0xA7	167	Alarm normal state value
ALARM3.SIGNAL	0xA8	168	Alarm signal selection
ALARM3.OPERATOR	0xA9	169	Alarm mathematical operator
ALARM3.THRESHOLD	0xAA	170	16 -bits of floating point value (first part) Alarm threshold value
	0xAB	171	16 -bits of floating point value (second part) Alarm threshold value
ALARM3.HYSTERESIS	0xAC	172	16 -bits of floating point value (first part) Alarm hysteresis value
	0xAD	173	16 -bits of floating point value (second part) Alarm hysteresis value
ALARM4.ENABLE	0xAE	174	Alarm enable/disable
ALARM4.AUTORESET_ENABLE	0xAF	175	Alarm auto reset enable/disable
ALARM4.RESET	0xB0	176	Alarm manual reset
ALARM4.NORMAL_STATE	0xB1	177	Alarm normal state value
ALARM4.SIGNAL	0xB2	178	Alarm signal selection

ALARM4.OPERATOR	0xB3	179	Alarm mathematical operator
ALARM4.THRESHOLD	0xB4	180	16 -bits of floating point value (first part) Alarm threshold value
	0xB5	181	16 -bits of floating point value (second part) Alarm threshold value
ALARM4.HYSTERESIS	0xB6	182	16 -bits of floating point value (first part) Alarm hysteresis value
	0xB7	183	16 -bits of floating point value (second part) Alarm hysteresis value
ALARM5.ENABLE	0xB8	184	Alarm enable/disable
ALARM5.AUTORESET_ENABLE	0xB9	185	Alarm auto reset enable/disable
ALARM5.RESET	0xBA	186	Alarm manual reset
ALARM5.NORMAL_STATE	0xBB	187	Alarm normal state value
ALARM5.SIGNAL	0xBC	188	Alarm signal selection
ALARM5.OPERATOR	0xBD	189	Alarm mathematical operator
ALARM5.THRESHOLD	0xBE	190	16 -bits of floating point value (first part) Alarm threshold value
	0xBF	191	16 -bits of floating point value (second part) Alarm threshold value
ALARM5.HYSTERESIS	0xC0	192	16 -bits of floating point value (first part) Alarm hysteresis value
	0xC1	193	16 -bits of floating point value (second part) Alarm hysteresis value
ALARM6.ENABLE	0xC2	194	Alarm enable/disable
ALARM6.AUTORESET_ENABLE	0xC3	195	Alarm auto reset enable/disable
ALARM6.RESET	0xC4	196	Alarm manual reset
ALARM6.NORMAL_STATE	0xC5	197	Alarm normal state value
ALARM6.SIGNAL	0xC6	198	Alarm signal selection
ALARM6.OPERATOR	0xC7	199	Alarm mathematical operator
ALARM6.THRESHOLD	0xC8	200	16 -bits of floating point value (first part) Alarm threshold value
	0xC9	201	16 -bits of floating point value (second part)

			Alarm threshold value
ALARM6.HYSTERESIS	0xCA	202	16 -bits of floating point value (first part) Alarm hysteresis value
	0xCB	203	16 -bits of floating point value (second part) Alarm hysteresis value
ALARM7.ENABLE	0xCC	204	Alarm enable/disable
ALARM7.AUTORESET_ENABLE	0xCD	205	Alarm auto reset enable/disable
ALARM7.RESET	0xCE	206	Alarm manual reset
ALARM7.NORMAL_STATE	0xCF	207	Alarm normal state value
ALARM7.SIGNAL	0xD0	208	Alarm signal selection
ALARM7.OPERATOR	0xD1	209	Alarm mathematical operator
ALARM7.THRESHOLD	0xD2	210	16 -bits of floating point value (first part) Alarm threshold value
	0xD3	211	16 -bits of floating point value (second part) Alarm threshold value
ALARM7.HYSTERESIS	0xD4	212	16 -bits of floating point value (first part) Alarm hysteresis value
	0xD5	213	16 -bits of floating point value (second part) Alarm hysteresis value
ALARM8.ENABLE	0xD6	214	Alarm enable/disable
ALARM8.AUTORESET_ENABLE	0xD7	215	Alarm auto reset enable/disable
ALARM8.RESET	0xD8	216	Alarm manual reset
ALARM8.NORMAL_STATE	0xD9	217	Alarm normal state value
ALARM8.SIGNAL	0xDA	218	Alarm signal selection
ALARM8.OPERATOR	0xDB	219	Alarm mathematical operator
ALARM8.THRESHOLD	0xDC	220	16 -bits of floating point value (first part) Alarm threshold value
	0xDD	221	16 -bits of floating point value (second part) Alarm threshold value
ALARM8.HYSTERESIS	0xDE	222	16 -bits of floating point value (first part) Alarm hysteresis value
	0xDF	223	16 -bits of floating point value (second part) Alarm hysteresis value

ALARM9.ENABLE	0xE0	224	Alarm enable/disable
ALARM9.AUTORESET_ENABLE	0xE1	225	Alarm auto reset enable/disable
ALARM9.RESET	0xE2	226	Alarm manual reset
ALARM9.NORMAL_STATE	0xE3	227	Alarm normal state value
ALARM9.SIGNAL	0xE4	228	Alarm signal selection
ALARM9.OPERATOR	0xE5	229	Alarm mathematical operator
ALARM9.THRESHOLD	0xE6	230	16 -bits of floating point value (first part) Alarm threshold value
	0xE7	231	16 -bits of floating point value (second part) Alarm threshold value
ALARM9.HYSTERESIS	0xE8	232	16 -bits of floating point value (first part) Alarm hysteresis value
	0xE9	233	16 -bits of floating point value (second part) Alarm hysteresis value
ALARM10.ENABLE	0xEA	234	Alarm enable/disable
ALARM10.AUTORESET_ENABLE	0xEB	235	Alarm auto reset enable/disable
ALARM10.RESET	0xEC	236	Alarm manual reset
ALARM10.NORMAL_STATE	0xED	237	Alarm normal state value
ALARM10.SIGNAL	0xEE	238	Alarm signal selection
ALARM10.OPERATOR	0xEF	239	Alarm mathematical operator
ALARM10.THRESHOLD	0xF0	240	16 -bits of floating point value (first part) Alarm threshold value
	0xF1	241	16 -bits of floating point value (second part) Alarm threshold value
ALARM10.HYSTERESIS	0xF2	242	16 -bits of floating point value (first part) Alarm hysteresis value
	0xF3	243	16 -bits of floating point value (second part) Alarm hysteresis value
HMI.PASSWORD	0xF4	244	HMI pin needs to change parameters from HMI panel (value range 0-9999)

Table 8. Holding Registers (Function 0x3 0x6 0x10).

6.2. Modbus TCP

Modbus TCP is an Anybus CompactCom module integrated with Analyzer. Communication parameters are configured by Analyzer web server tool (only TCP PORT number is static).

TCP port number: 502

Modbus register map is common for RTU/TCP and is described in previous chapter.

6.3. Profinet

Profinet is Anybus CompactCom module integrated with Analyzer. Communication parameters are configured by Analyzer web server tool.

Data transmitted by protocol are described in Modbus RTU chapter and can be found in GSDML configuration file deliver with device.

6.4. Add-on module

Mechanical connection of the ABCC-M40 module to the PCB board GasEye Host ver. 4.X.

Elements of the ABCC-M40 module:

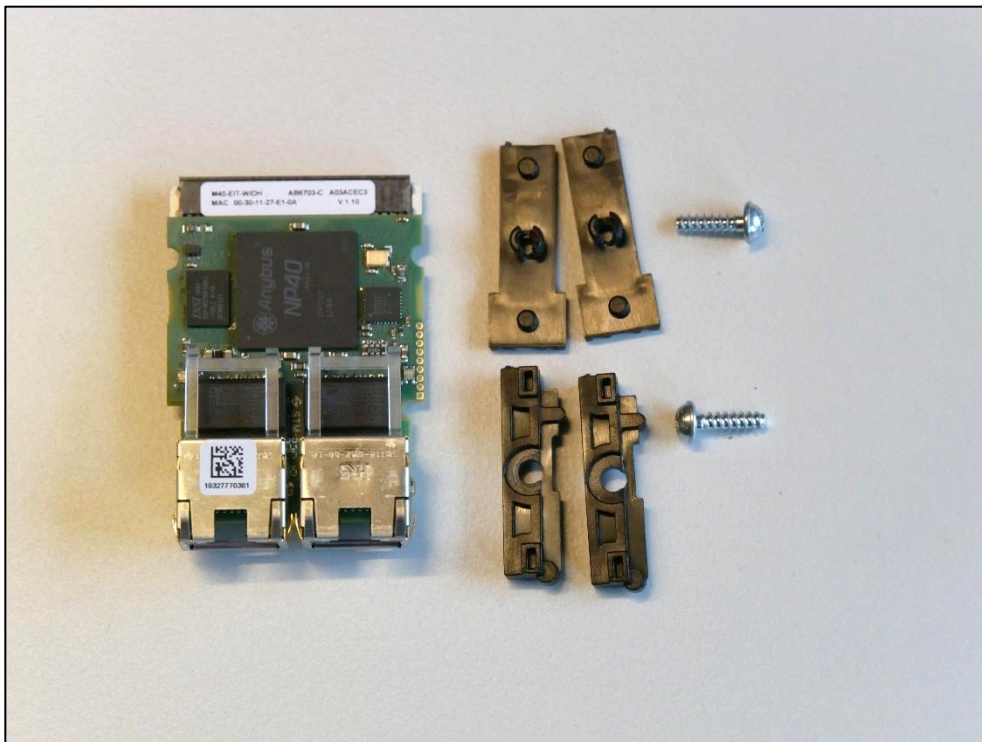


Figure 30. Elements of the ABCC-M40 module.

Steps to plug the ABCC-M40 module into the PCB GasEye Host board are presented in the pictures below:

1. Locate the slot reserved for ABCC-M40 on the GasEye Host PCB board.

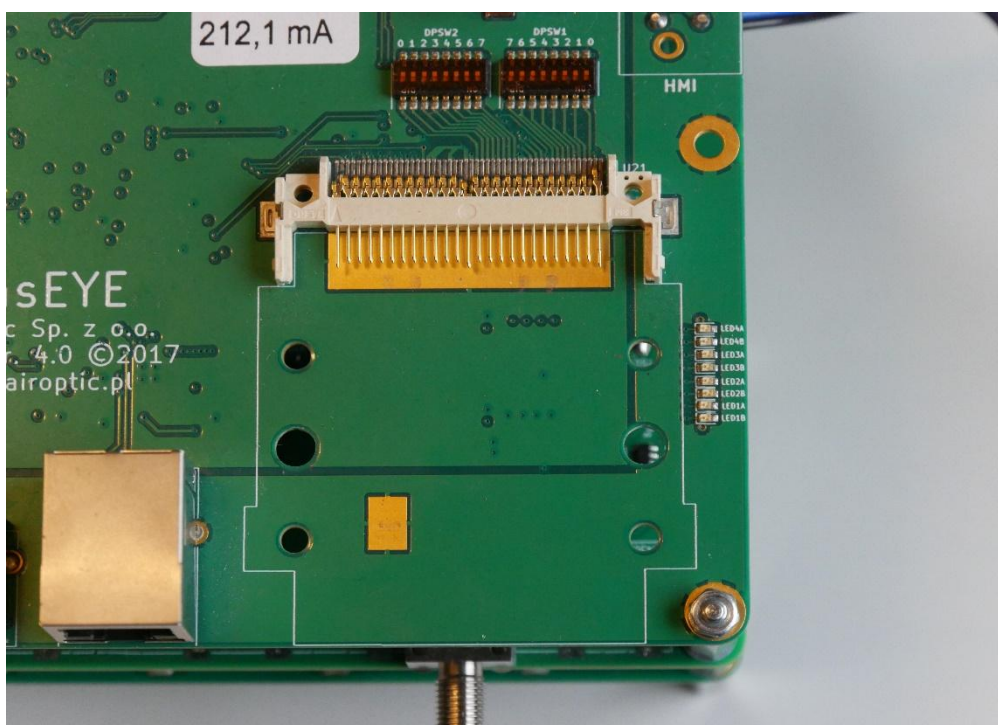


Figure 31. ABCC-M40 slot.

2. Insert two supports as presented on the picture below.

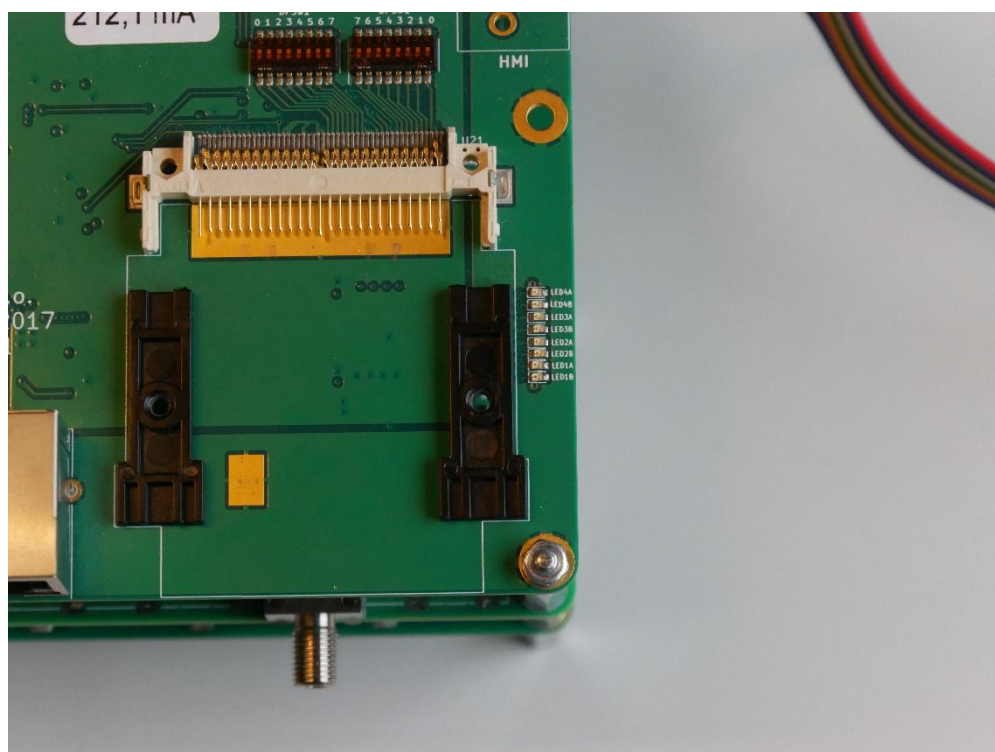


Figure 32. Supports inserting.

3. Plug the ABCC-M40 module to the socket.

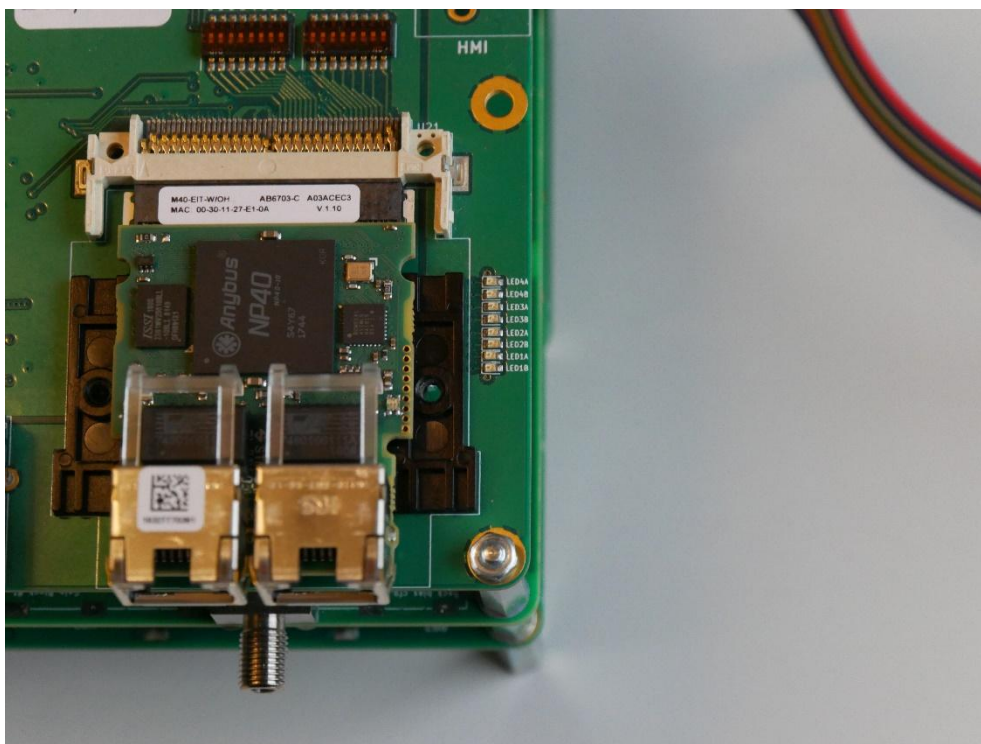


Figure 33. Plugging the ABCC-M40 module.

4. Put the overlay and screw it with the support using two screws



Figure 34. Putting the overlay 1/2.



Figure 35. Putting the overlay 2/2.

7. Startup Procedure

The startup procedure (SUP) is started each time the device is powered on or restarted via Webserver or by the reset button. During startup procedure the device is performing the internal diagnostics and checking the laser optical transmission. Startup procedure steps are shown in Table . The startup procedure takes about 3 to 5 minutes. Actual start-up procedure number can be checked on the HMI (as SUP) or via Webserver (Measurements/System/SYSTEM.STARTUP_PROCEDURE).

Startup Procedure Number (SUP)	Information
0	Low level platform is not working
1	Device initialization and memory test
2	Internal communication check
3	Automatic gain control calibration procedure
4	Device parameters check and set
5	Lasers temperature stabilization (lasers are off)
6	Lasers temperature stabilization (lasers are on)
7	Lasers transmission check
8	Self-calibration procedure
9	Concentration measurement check
10	Normal operation of the device (startup procedure is finished)

Table 9. Startup procedure (SUP) steps.

If the startup procedure (SUP) stopped at the step below 10 for more than 5 minutes, please refer to the SUP troubleshooting steps table below.

Startup Procedure Number (SUP)	Troubleshooting
0 to 6	Internal error occurred. Please contact Airoptic.
7	No/Low optical transmission. Please check the cleanliness of the process windows.
8 to 9	Self-calibration procedure error. Please check the device specification (device is used out of the specification and/or the process gas is required for reference purposes).
10	Normal operation of the device.

Table 5. Startup procedure (SUP) troubleshooting steps.

8. HMI – front panel display

On the lid there is an LCD display, which allows monitoring of pre-defined measurements and editing essential parameters. The user can access and toggle between the menu positions using the buttons that are placed beneath the display.

8.1. Overview

Front panel of device has an alphanumerical display 4x20 (4 rows, 20 columns), three buttons and two LED's.

Upon connection of the power supply the display will light up and show a welcome message with host version which is followed by the Main Menu page. During the start-up procedure the red LED will flash until the procedure is completed. It takes approximately 6 minutes to complete the initialization.

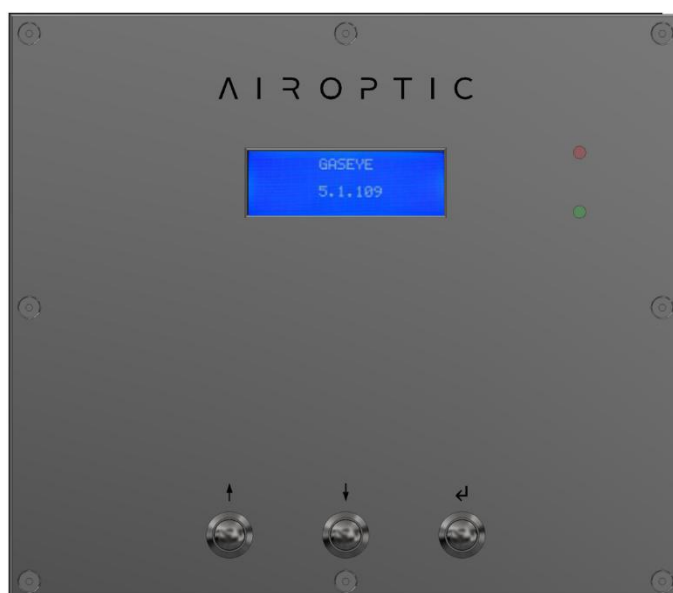


Figure 36 Front panel display. Welcome message with Host software version.

8.2. Menu

The user has access to the menu from the HMI level. The user can display measurements, parameters and IOs (Inputs/Outputs). The menu structure looks as follows.

- Main Menu
- Settings
 - Network Settings
 - IP address
 - Mask
 - Gateway
 - Parameters
 - Optical path length 1 (Path1)
 - Optical path length 2 (Path2)
 - T90
 - Diagnostic
 - HMI version
 - Host version
 - Measurements
 - Gas 1
 - Gas 2
 - Gas 3
 - Gas 4
 - Gas 5
 - Gas 6
 - Gas 7
 - Gas 8
 - Temperature calculated (TEMCAL)
 - Fiber 1 transmission (F1TR)
 - Fiber 2 transmission (F2TR)
 - Remote RX1 gain (RX1G)
 - Remote RX2 gain (RX2G)
 - Process temperature (PrTemp)
 - Process pressure (PrPres)
 - Laser1 transmission (Trans1)
 - Laser2 transmission (Trans2)
 - Laser3 transmission (Trans3)
 - Laser4 transmission (Trans4)
 - System startup procedure (SUP)
 - Reference 1 (REF1)
 - Reference 2 (REF2)
 - Reference 3 (REF3)
 - Reference 4 (REF4)
 - Analog input
 - Analog input 1
 - Analog input 2
 - Analog input 3
 - Analog input 4
 - Analog output
 - Analog output 1
 - Analog output 2
 - Analog output 3
 - Analog output 4

Figure 37. Main menu overview

8.2.1.SETTINGS

Subcategories “Network settings” and “Parameters” can be selected.



Figure 38. Front panel display – subcategories.

NETWORK SETTINGS

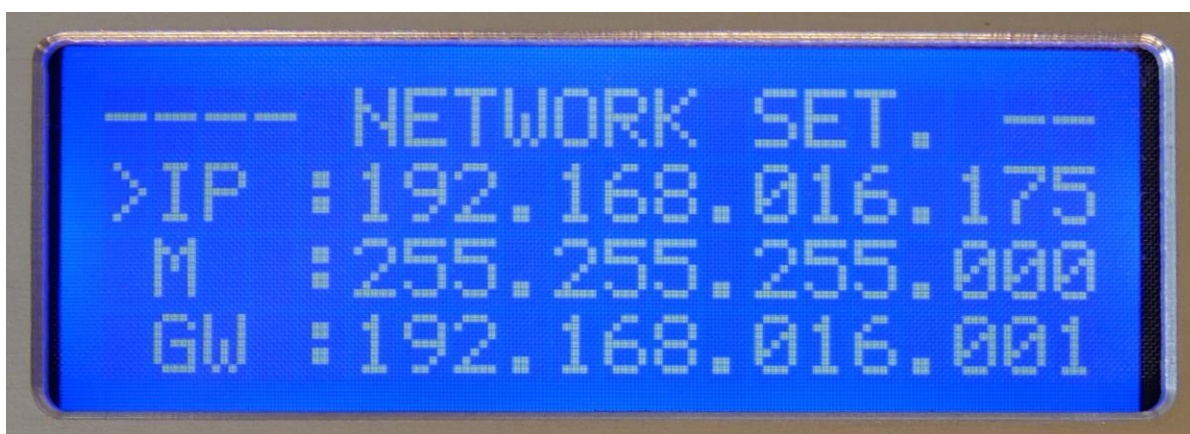


Figure 39. Front panel display - network settings.

Items in this category can be edited.

IP	IP address of the device
M	Subnet mask
GW	IP address of the gateway

PARAMETERS



Figure 40. Front panel display - parameters.

Items in this category can be edited.

PATH1	The path 1 length value (unit: meter)
PATH2	The path 2 length value (unit: meter)
T90	Averaging time for concentration measurement (unit: second)

8.2.2.DIAGNOSTIC

In this category we can read the HMI and HOST version

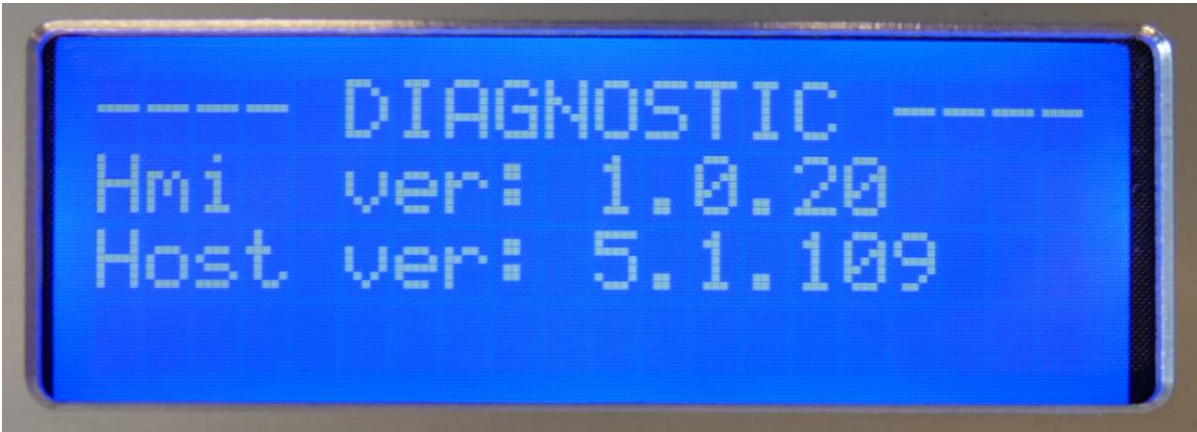


Figure 41. Front panel display - diagnostic.

Items in this category are read-only.

HMI ver	HMI version
Host ver	Host version

8.2.3.MEASUREMENTS

Items in this category are read-only.

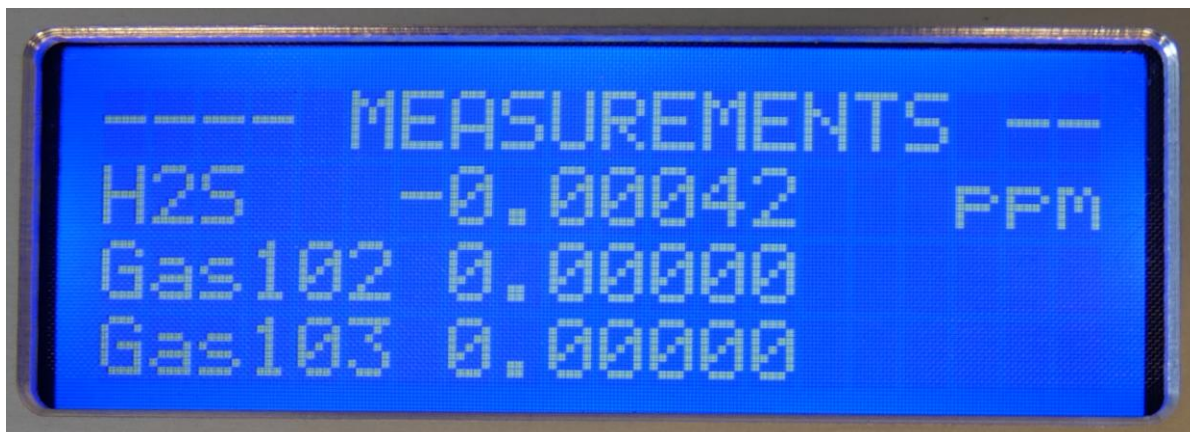


Figure 42. Front panel display – measurements GAS 1-3.

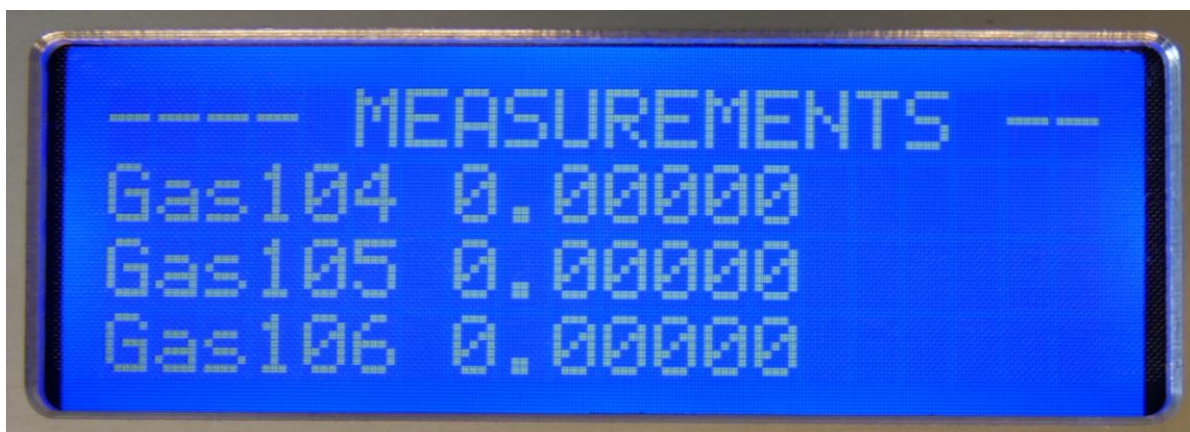


Figure 43. Front panel display – measurements GAS 4-6.

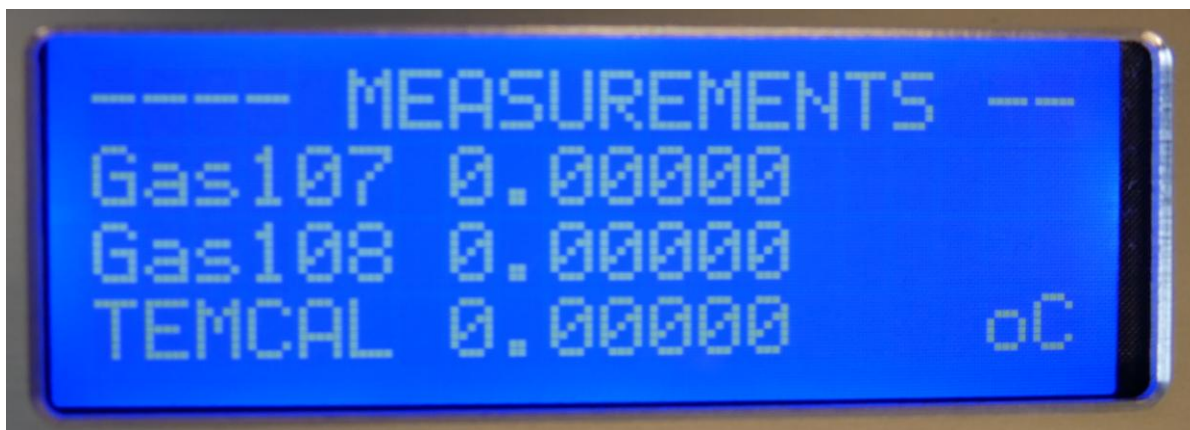


Figure 44. Front panel display – measurements GAS 7-8, TEMCAL.

GAS101-108 (e.g. O₂, HCL, HCHO)	Displays the concentration value for up to eight gases
TEMCAL	Calculated process temperature (unit: degree Celsius)

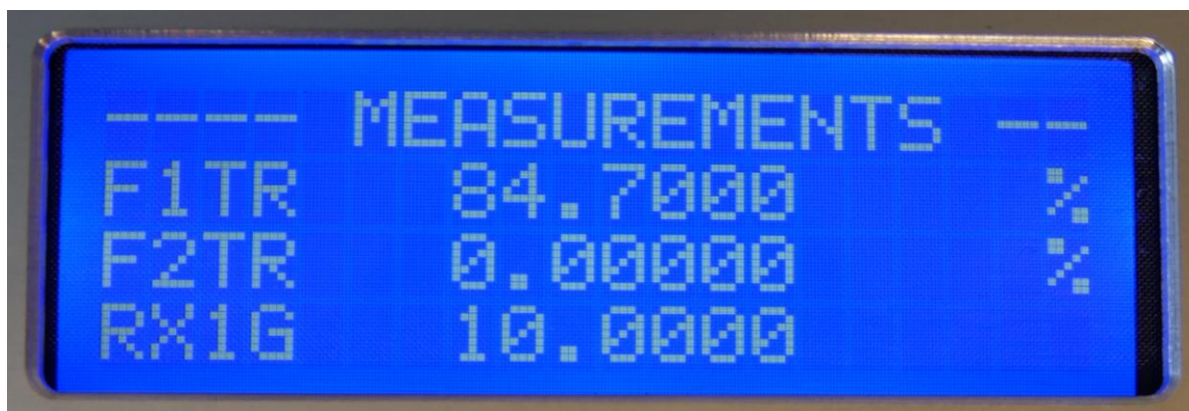


Figure 45. Front panel display – measurements F1TR, F2TR, RX1G.

F1TR	Displays transmission of fiber 1
F2TR	Displays transmission of fiber 2
RX1G	Fiber 1 remote RX gain



Figure 46. Front panel display – measurements RX2G, PrTemp, PrPres.

RX2G	Fiber 2 remote RX gain
PrTemp	Process temperature (unit: degree Celsius)
PrPres	Process pressure (unit: mbar)

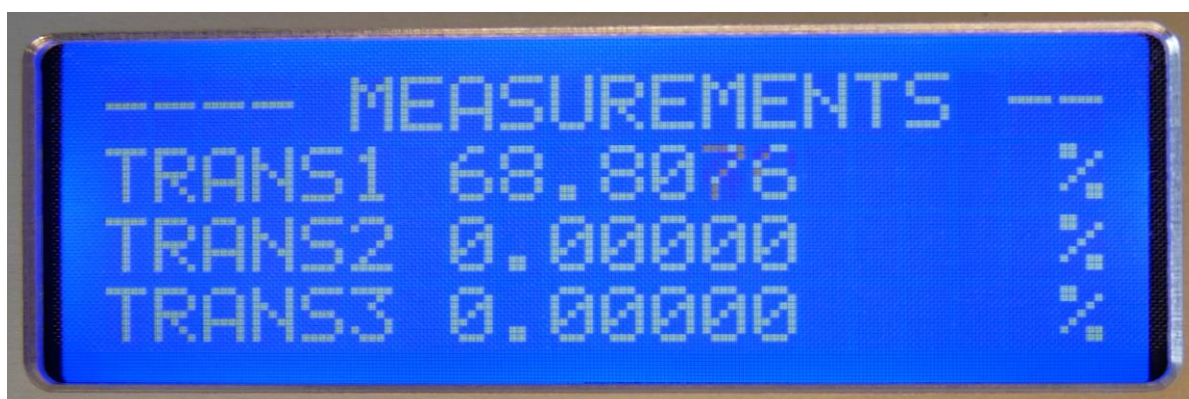


Figure 47. Front panel display – measurements TRANS1-3.

TRANS1	Transmission of Laser 1
TRANS2	Transmission of Laser 2
TRANS3	Transmission of Laser 3

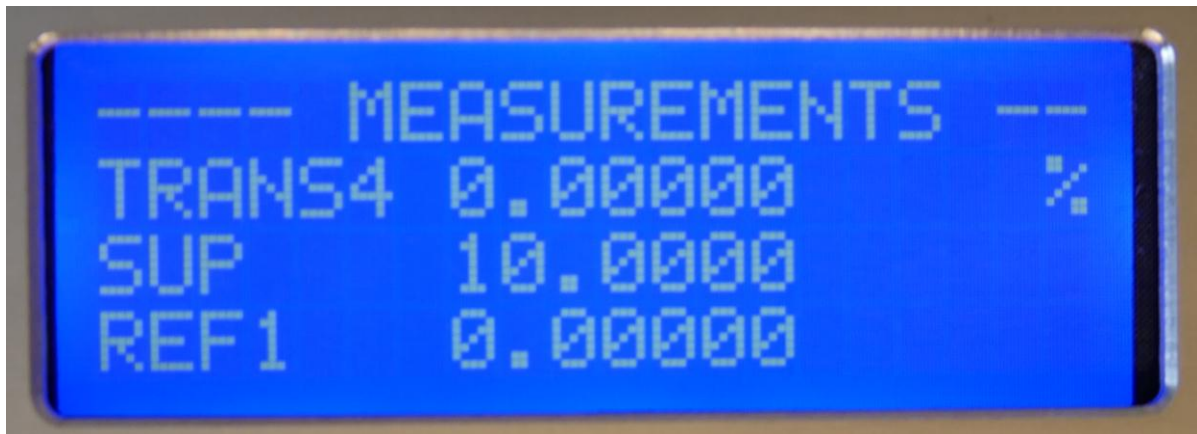


Figure 48. Front panel display – measurements TRANS4, SUP, REF1.

TRANS4	Transmission of Laser 4
SUP	Startup Procedure Number
REF1	Displays the reference signal 1 value

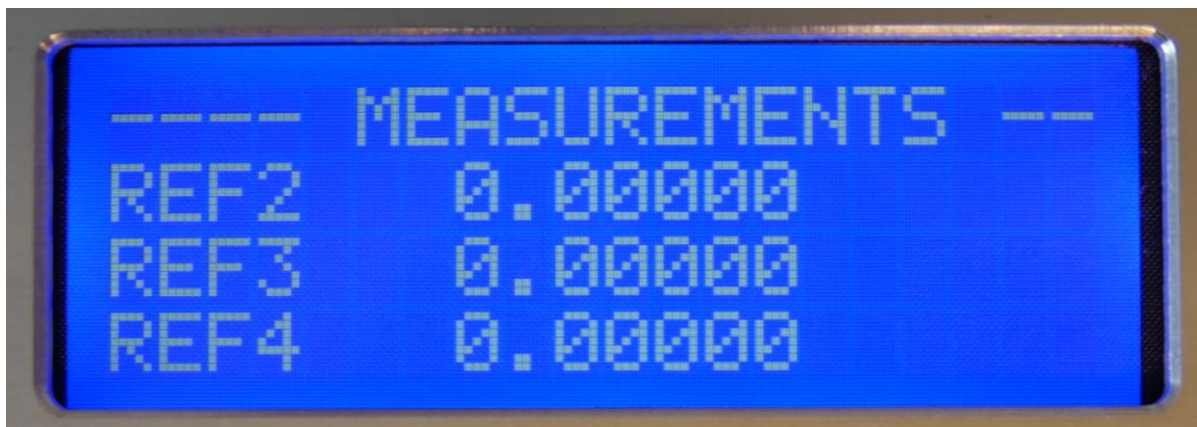


Figure 58. Front panel display – measurements REF2-4.

REF2	Displays the reference signal 2 value
REF3	Displays the reference signal 3 value
REF4	Displays the reference signal 4 value

8.2.4.ANALOG INPUT

Items in this category can be edited.



Figure 49. Front panel display – analog input AIN1-3.

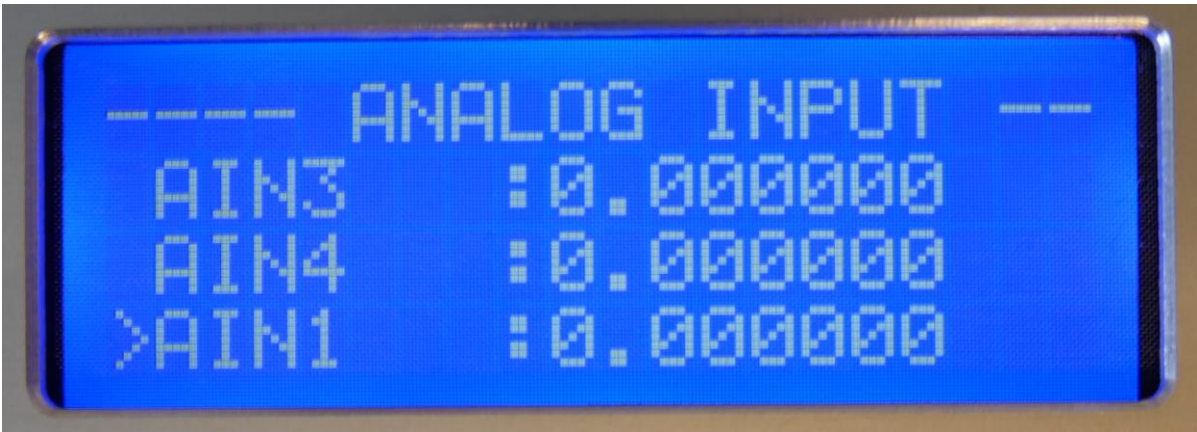


Figure 50. Front panel display – analog input AIN4.

AIN1	Scaled value from Analog Input 1
AIN2	Scaled value from Analog Input 2
AIN3	Scaled value from Analog Input 3
AIN4	Scaled value from Analog Input 4

8.2.5.ANALOG OUTPUT

Items in this category can be edited.



Figure 51. Front panel display – analog output AOUT1-3.



Figure 52. Front panel display - analog output AOUT4.

AOUT1	Scaled value from Analog Output 1
AOUT2	Scaled value from Analog Output 2
AOUT3	Scaled value from Analog Output 3
AOUT4	Scaled value from Analog Output 4

8.3. Signals

GREEN LED	RED LED	Description
ON	OFF	System OK
ON (FLASHING)	OFF	Low transmission OR/AND low reference signal
OFF	ON	System error
OFF	ON (FLASHING)	Start-up procedure

Table 11. Front panel display – signals.

8.4. Buttons

Buttons provide signals from user to the HMI. Buttons function depends on which mode currently is.

Mode		NORMAL	EDIT	PASSWORD
Button				
↑	Up	Move up	Increment blinking digit	Increment blinking digit
↓	Down	Move down	Decrement blinking digit	Decrement blinking digit
↵	Enter	Select item	Go to next field	Go to next digit field
⏏	Enter (hold)	Return to higher menu level	Confirm changes	Confirm the typed in password

Table 12. Front panel display - buttons.

8.5. Editing parameters

1. Go to parameters menu and select the desired item with Enter button.



Figure 53. Front panel display – Parameter selection.

2. Password request should appear. Standard password is: **2552**



Figure 54. Front panel display – Password request.

3. Type password and hold Enter button to confirm or just press Enter button when the cursor is on the last digit – then password validation status shall appear. Press Enter to return to the Parameters category.

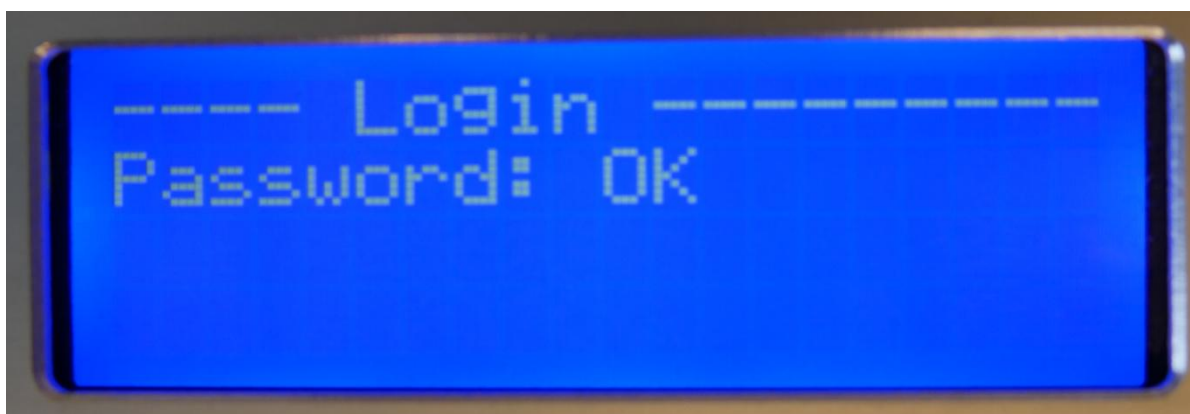


Figure 55. Front panel display – Password confirmation.

4. If password was correct, select the desired item again, and press Enter. Now, the selected parameter is in edition mode. With using UP/DOWN change value at certain position and with pressing ENTER button change input position. Set parameter holding ENTER button.



Figure 56. Front panel display – Editing parameters.

5. There will show asking for confirmation of changing parameter. Select “Yes”, “No” or “repeat config” and press ENTER button.

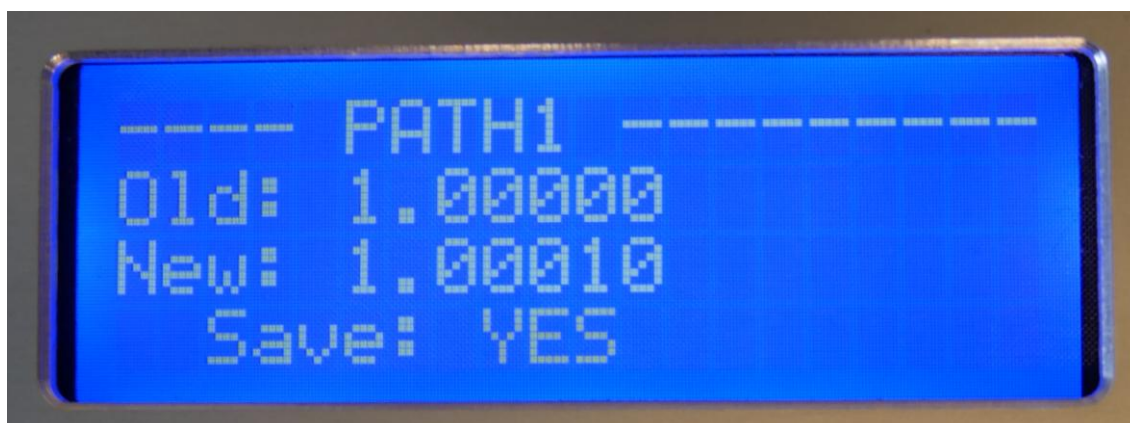


Figure 57. Front panel display – Confirmation of new parameters.

6. Parameter was changed successfully.

8.6. Editing network settings

Network settings can be changed in the NETWORK SETTINGS category.

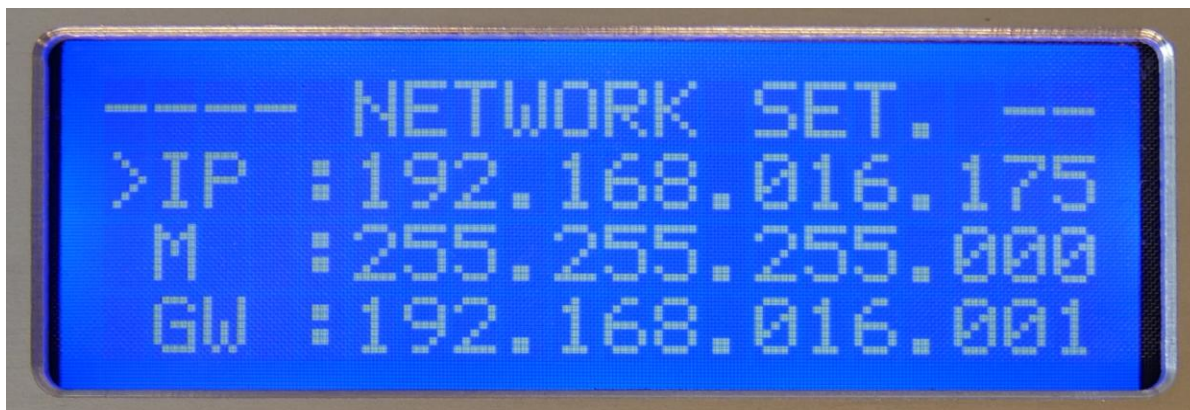


Figure 58. Front panel display - Editing network settings.

IP, subnet mask, and gateway address configuration are similar to usual parameter editing but holding Enter button quits editing mode without saving. To confirm the changes, press Enter when the cursor is on the last digit, and select “Yes”, “No”, or “repeat config”.

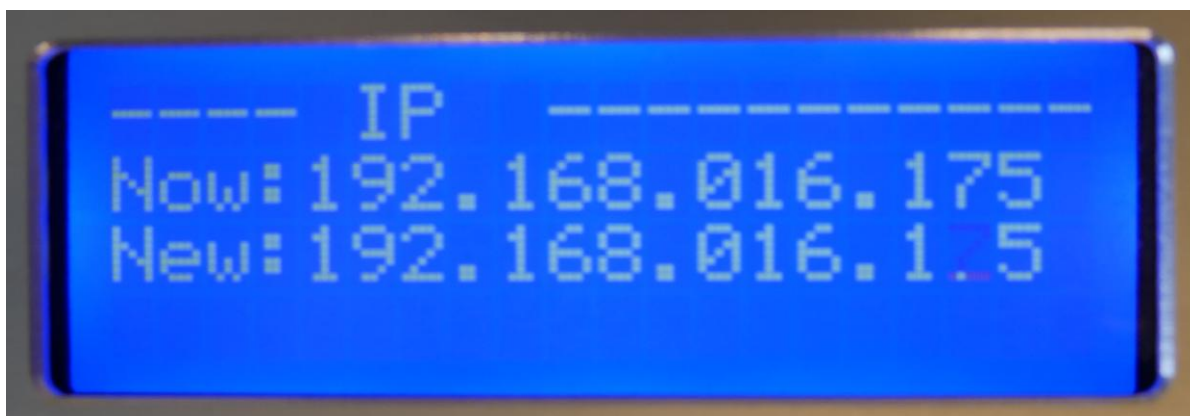


Figure 59. Front panel display – Editing IP address

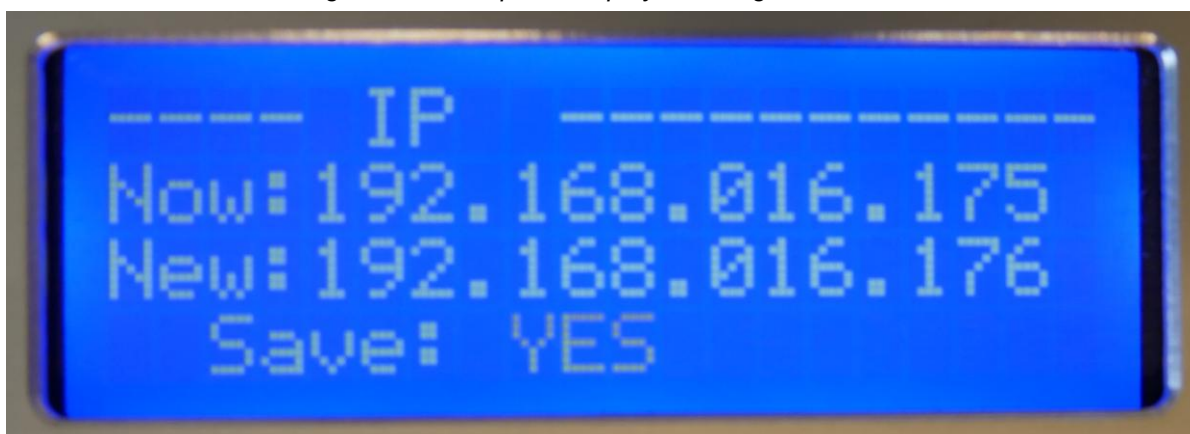


Figure 60. Front panel display – IP address confirmation

8.7. Editing AIN/AOUT scaling

When is needed to change scale of AINx/AOUTx select in Analog Input/Output menu item to edit and enter password if prompted.

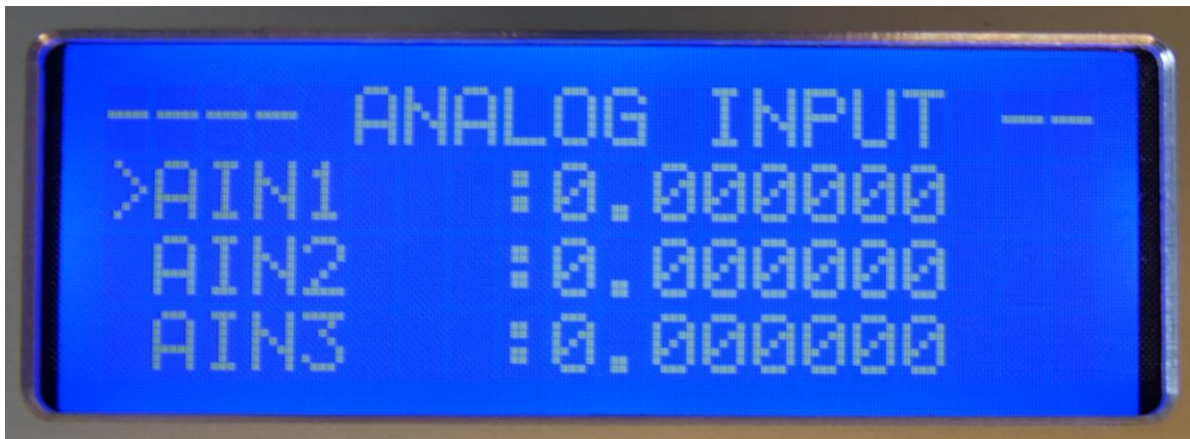


Figure 61. Front panel display - AIN/AOUT editing.

After item selection, a dialog with min and max values opens.

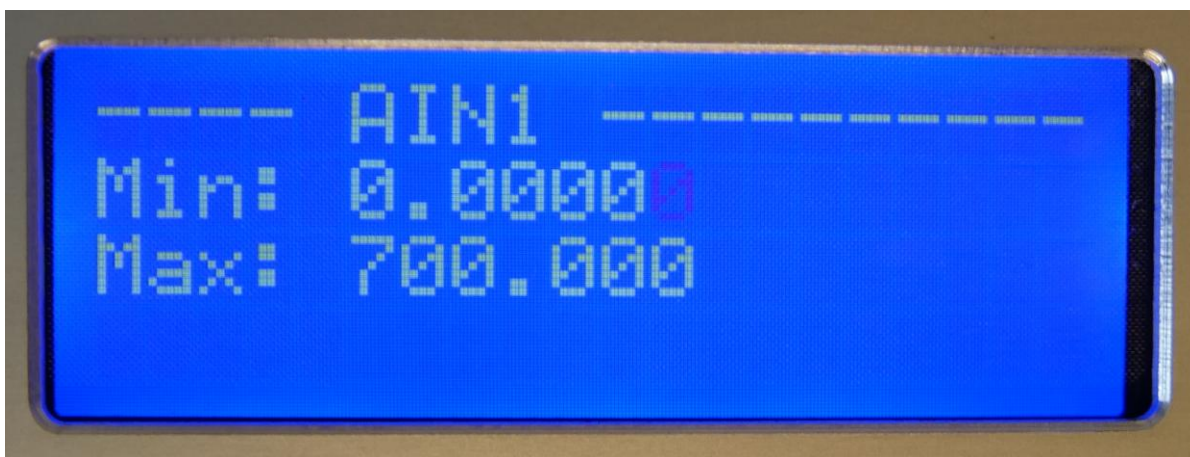


Figure 62. Front panel display – Editing analog input parameters.

Holding the Enter button for the first time moves the cursor from Min value to the Max value. After holding the Enter button for the second time a confirmation dialog appears. Select “Yes”, “No”, or “repeat config”.

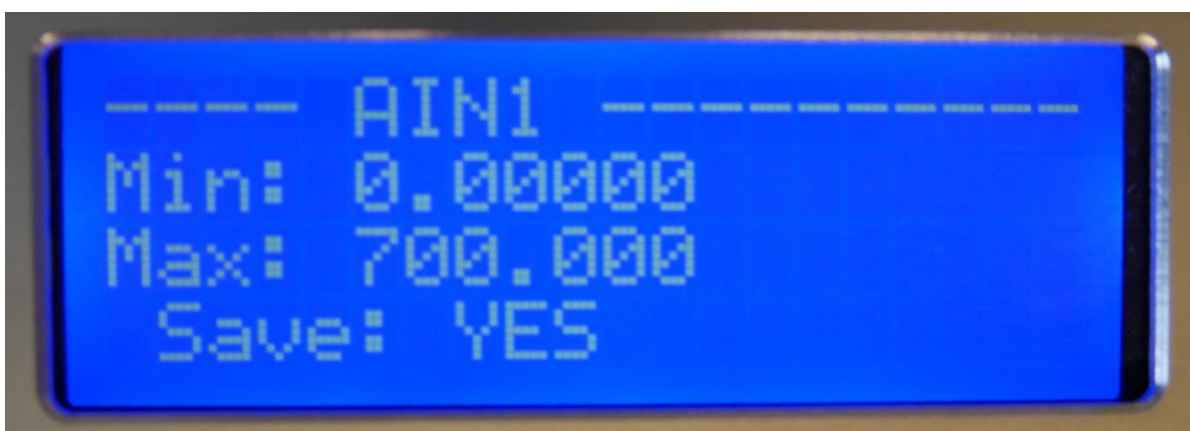


Figure 63. Front panel display – Confirmation of analog input parameters.

After confirmation, the new value of parameter is set.

9. Webserver application

The Webserver application allows to monitor the GasEye Symphony measurements i.e. transmission value which is necessary to properly adjust the instrument.

9.1. Establishing communication with the instrument

In order to establish the communication of the instrument with the computer the user have to properly setup IP configuration. Please follow the steps below (based on Microsoft Windows 10 operating system):

1. Open Network and internet settings.

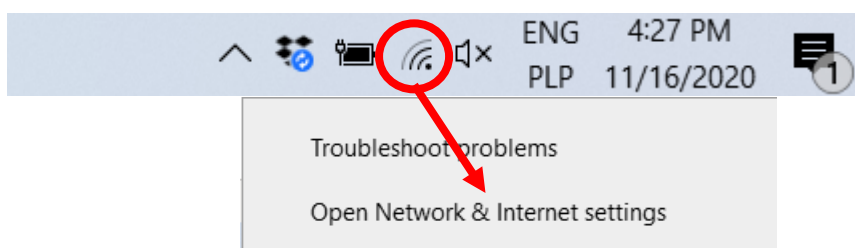


Figure 64. Network settings icon

2. Access the Adapter settings by clicking on the “Ethernet” connection.

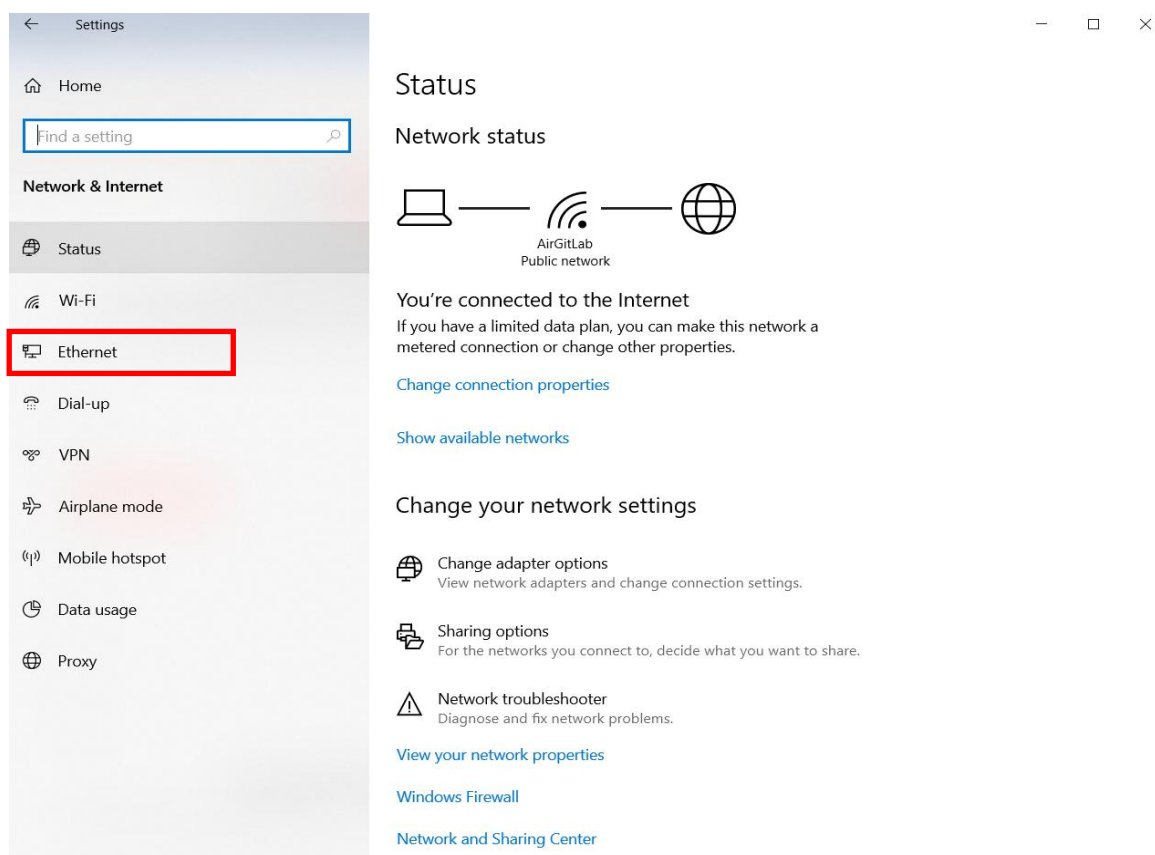


Figure 65. Network status window.

3. Open the Adapter options by clicking “Change adapter options”.

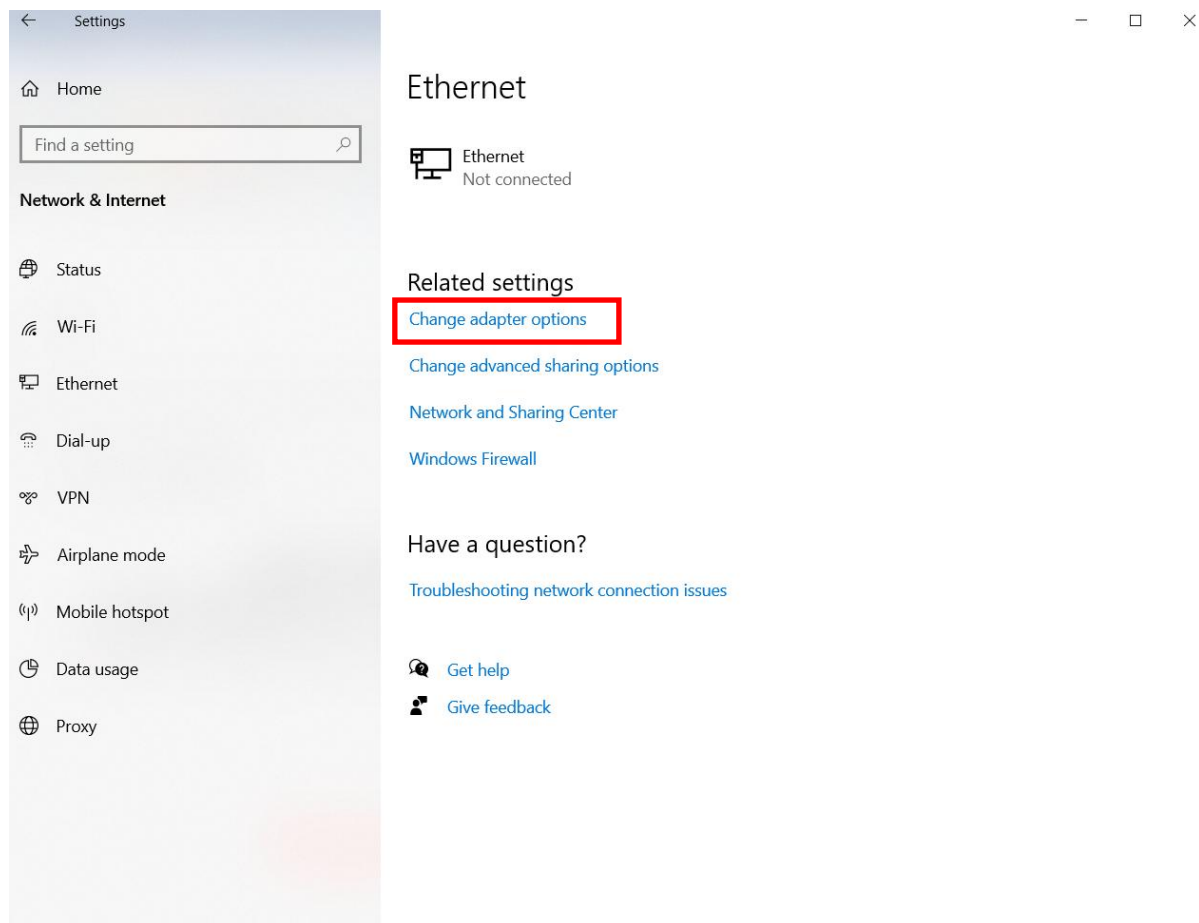


Figure 66. Ethernet settings window.

4. Open the Ethernet window.

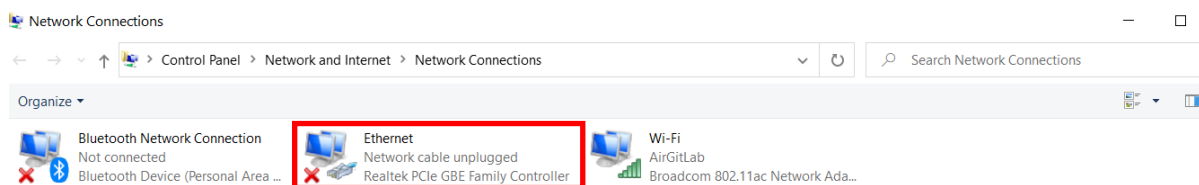


Figure 67. Network connections window.

5. Open Properties of an Ethernet Connection.

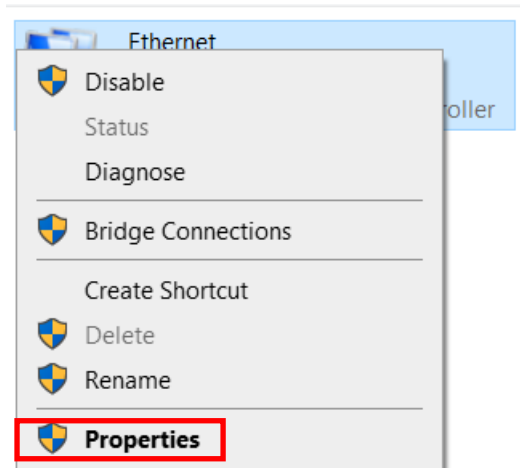


Figure 68. Ethernet connection properties.

6. Select IPv4 Internet Protocol and click on the Properties.

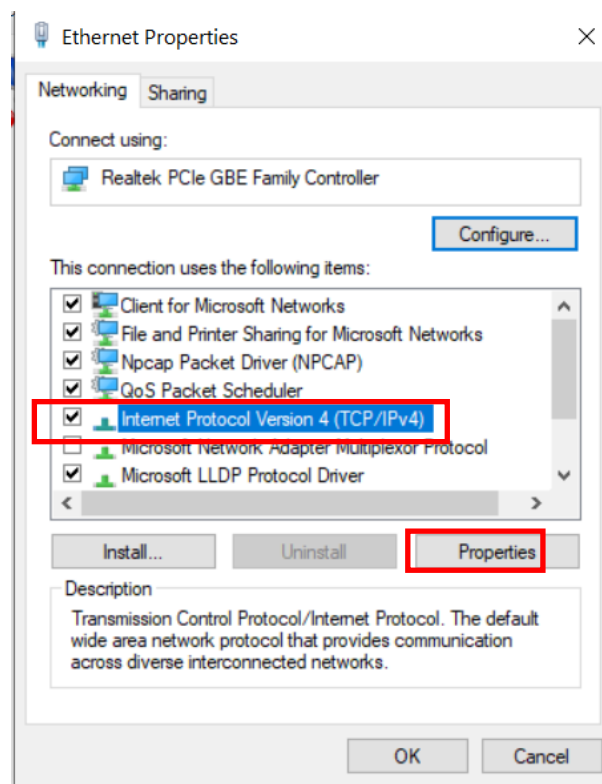


Figure 69. IPv4 Internet Protocol selection.

7. Select “Use the following IP address:”

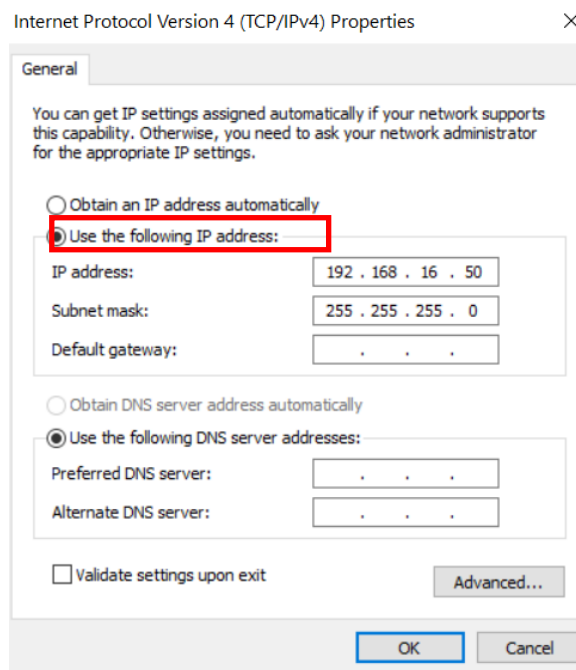


Figure 70. IP address selection.

8. Type:

IP address: 192.168.16.100;

Subnet mask: 255.255.255.0

and apply changes.

9. Open an internet browser (preferably Mozilla Firefox).

10. Type in 192.168.16.xx (IP depends on the specific instrument model).

11. If the Ethernet connection is established the Webserver application shall open.

9.2. User access level

User access level to the Webserver is the most basic access type.

If the connection is established successfully, it is possible to log in to the Webserver application. After typing in the IP address in the web browser a Login panel shall appear (**Figure 71**). To log in provide the following information (**case sensitive!**):

Account: GasEYE

Password: #pi3.14

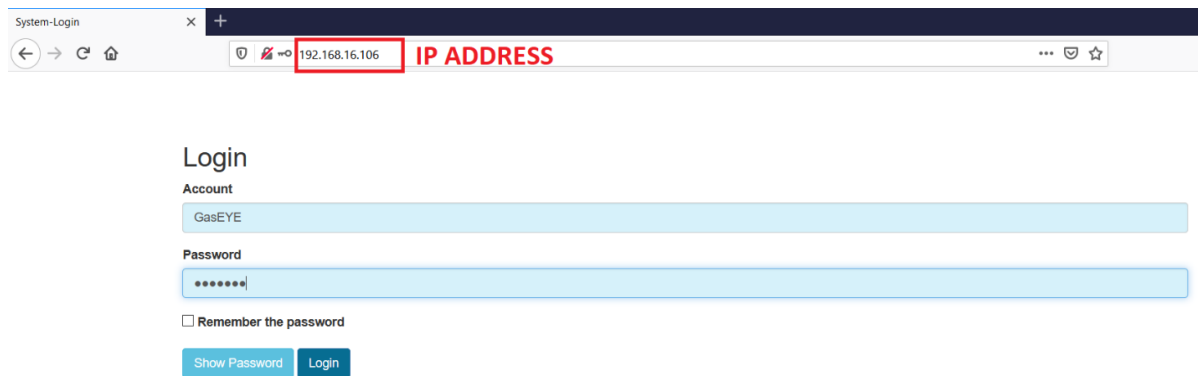


Figure 71. Webserver login page.

There are seven tabs from the left on main bar possible for User access type:

- **Self-Monitoring**
- **Measurements**
- **Parameters**
- **Settings**
- **Factory config**
- **Eventlog**
- **About**



Figure 72. User access level – main bar 1/2.

In the upper right corner of the window logout button can be found:

- **Reboot**
- **Logout (User)**



Figure 73. User access level – main bar 2/2.

9.3. Self-Monitoring

There are 4 columns: Failure, Out of Range, Maintenance, Startup Procedure:

Failure		Out of range		Maintenance		Startup Procedure	
Name	Status	Name	Status	Name	Status	Name	Status
Transmission	OK	Process temperature	OK	Laser transmission low	OK	Low level platform is not working	Checked
Process Temperature Sensor	OK	Process pressure	OK	Reference gas level	OK	Device initialization and memory test	Checked
Process Pressure Sensor	OK	Gas concentration	OK			Internal communication	Checked
Loop cable	OK	Device ambient temperature	OK			Automatic gain control calibration procedure	Checked
Receiver detected	OK	Path length	OK			Device parameters checked and set	Checked
Receiver not saturated	OK					Laser temperature stabilization (off)	Checked
Laser overheated	OK					Laser temperature stabilization (on)	Checked
Laser temperature sensor	OK					Laser transmission check	Checked
Laser ambient temperature sensor	OK					Self-calibration procedure	Checked
Laser characteristic change	OK					Concentration measurement check	Checked
Internal magistral transmission	OK					Normal operation of the device	Ready
Internal voltage	OK						
Internal current	OK						

Table 6 Self-monitoring functionalities

Failure	
Name	Description
Transmission	Transmission level OK/FAIL
Process Temperature Sensor	Process Temperature Sensor OK/FAIL
Process Pressure Sensor	Process Pressure Sensor OK/FAIL
Loop Cable	Loop Cable OK/FAIL
Receiver detected	Receiver detected OK/FAIL
Receiver not saturated	Receiver not saturated OK/FAIL
Laser overheated	Laser overheated OK/FAIL
Laser temperature sensor	Laser temperature sensor OK/FAIL
Laser ambient temperature sensor	Laser ambient temperature sensor OK/FAIL
Laser characteristic change	Laser characteristics change OK/FAIL
Internal magistral transmission	Internal magistral transmission OK/FAIL
Internal voltage	Internal voltage OK/FAIL
Internal current	Internal current OK/FAIL
Out of range	
Name	Description
Process temperature	Checks if Process temperature is in range of application
Process pressure	Checks if Process pressure is in range of application
Gas concentration	Checks if Gas concentration is in range of application

Device ambient temperature	Checks if Device ambient temperature is in range of application
Path length	Checks if Path length is in range of application
Maintenance	
Name	Description
Laser transmission low	Transmission level OK/FAIL
Reference gas level	Reference gas level OK/FAIL
Startup Procedure	
Name	Description
Low level platform is not working	Internal error occurred. Please contact Airoptic.
Device initialization and memory test	
Internal communication	
Automatic gain control calibration procedure	
Device parameters checked and set	
Laser temperature stabilization (off)	
Laser temperature stabilization (on)	
Laser transmission check	No/Low optical transmission. Please check the cleanliness of the process windows.
Self-calibration procedure	Self-calibration procedure error. Please check the device specification (device is used out of the specification and/or the process gas is required for reference purposes).
Concentration measurement check	
Normal operation of the device	Normal operation of the device.

9.4. Measurement tab

Drop-down menu will appear when clicking on the **Measurements**.

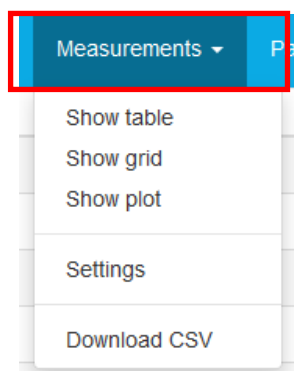


Figure 74. Webserver application - Measurement tab.

In the Measurement tab there are five functionalities that are accessible by clicking the respective field.

Show table	Shows table with the variables acquired from the instrument. User can choose which one are plotted by ticking a box next to the demanded variable description.
Show grid	Shows grid with the measurements. Their visibility is not affected by user choice in the table.
Show plot	Activates plot of the variables chosen from the table.
Settings	Opens measurement settings menu.
Download CSV	User may download measurements chosen in the table and save it in a comma-separated (*.csv) format.

Table 7. Measurement window functionalities.

9.4.1.Show Table

When Show table is active all analyzer measurements are presented by table view and the user may choose which variables are plotted (when switch to Show plot view) by ticking/unticking the **Log** box (See **Figure 75**). The user may also change the **Color** of the plotted line by clicking on the color box associated with variable.

AIROPTIC™ Self-Monitoring Measurements Parameters Settings Factory config Eventlog About				
Log	Color	Id	Name	Value
☐		0001	PROCESS.TEMPERATURE	25
☐		0002	PROCESS.PRESSURE	1173.7900390625
☐		0003	PROCESS.H2O	0
☐		0004	PROCESS.O2	0
☐		0010	CO - GAS101	0
☐		0020	CH4 - GAS102	0
☐		0030	GAS103.CONCENTRATION	0
☐		0040	GAS104.CONCENTRATION	0
☐		0050	GAS105.CONCENTRATION	0
☐		0060	GAS106.CONCENTRATION	0
☐		0070	GAS107.CONCENTRATION	0
☐		0080	GAS108.CONCENTRATION	0
☐		0110	GAS_SUM	0
☐		0100	TEMP.CALCULATED	0
☐		0101	WATER_DEWPOINT	-94.20145416259766
☐		0200	LASER11.TRANSMISSION	335.6894836425781
☐		0201	LASER12.TRANSMISSION	0
☐		0202	LASER13.TRANSMISSION	0
☐		0203	LASER14.TRANSMISSION	0
☐		0300	FIBER1.TRANSMISSION	94.30400085449219
☐		0301	FIBER2.TRANSMISSION	0
☐		0302	REMOTERX1.GAIN	20
☐		0303	REMOTERX2.GAIN	0
☐		0602	TEC0.TH_AMP	0.994719385100769
☐		0606	TEC0.AMB_TEMPERATURE	26.97719955444336
☐		0612	TEC1.TH_AMP	0
☐		0616	TEC1.AMB_TEMPERATURE	26.976318359375

Figure 75. Measurements Show table view.

Log	Color	Id	Name	Value	Description
☒		0001	PROCESS.TEMPERATURE	200	
☐		0002	PROCESS.PRESSURE	1013	
☒		0010	CO - GAS101	0	
☐		0020	CH4 - GAS102	0.05690891295671463	
☐		0030	GAS103.CONCENTRATION	0	
☐		0040	GAS104.CONCENTRATION	0	
☐		0050	GAS105.CONCENTRATION	0	

Figure 76. Excerpt from Measurement Table.

9.4.2.Show Grid

The measurements may be presented in a grid view. In this view mode measurements are group into groups and subgroups and additional left menu appears to choose subgroups to present. (Subgroups can by hide/show by clicking on the group name – black font).

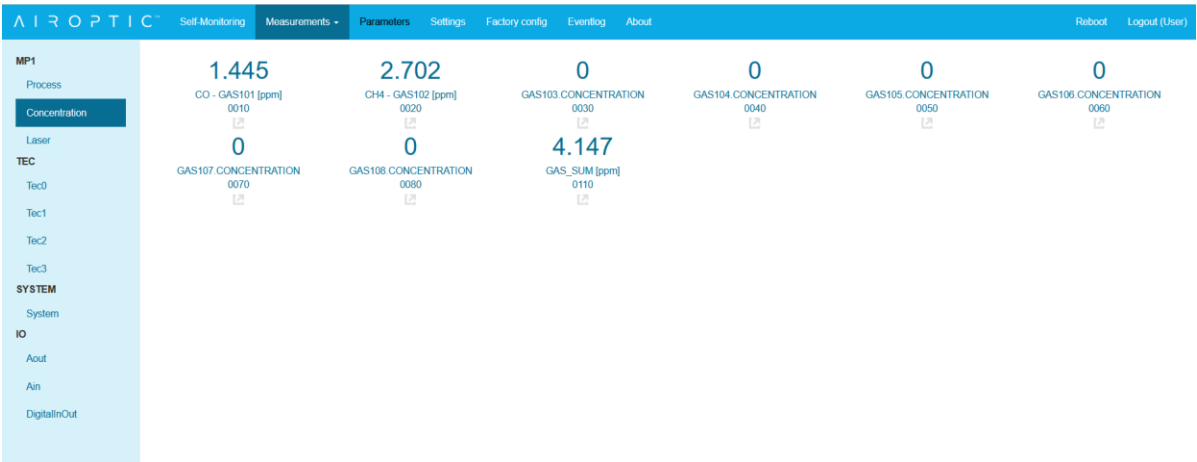


Figure 77. Measurements Show grid view.

In grid mode everyone measurement can be presented in new screen by “clicking” icon “”.

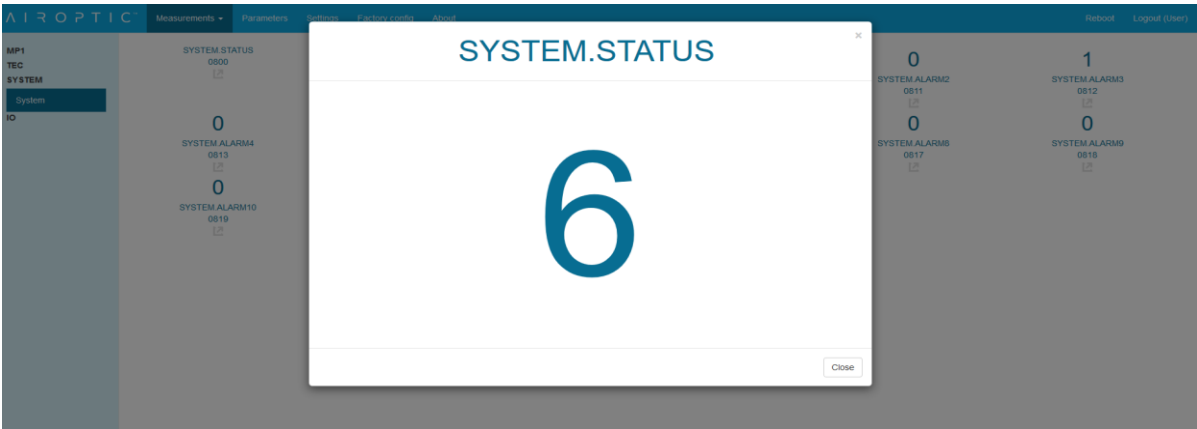


Figure 87. Present measurement value in separate screen.

In grid view some measurements can be marked by **NC** or **Err** flag. NC flag means that measurement is not connected or not used in configuration. Err flag means that error is detected on measurement.

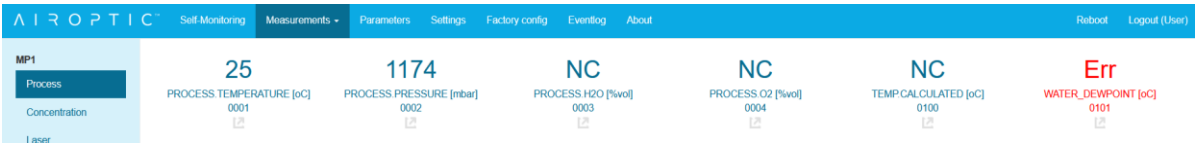


Figure 88. Presented data with additional flag detected.

9.4.3.Show Plot

With variables chosen in the table view the user may visually present the measurements in a form of a plot.

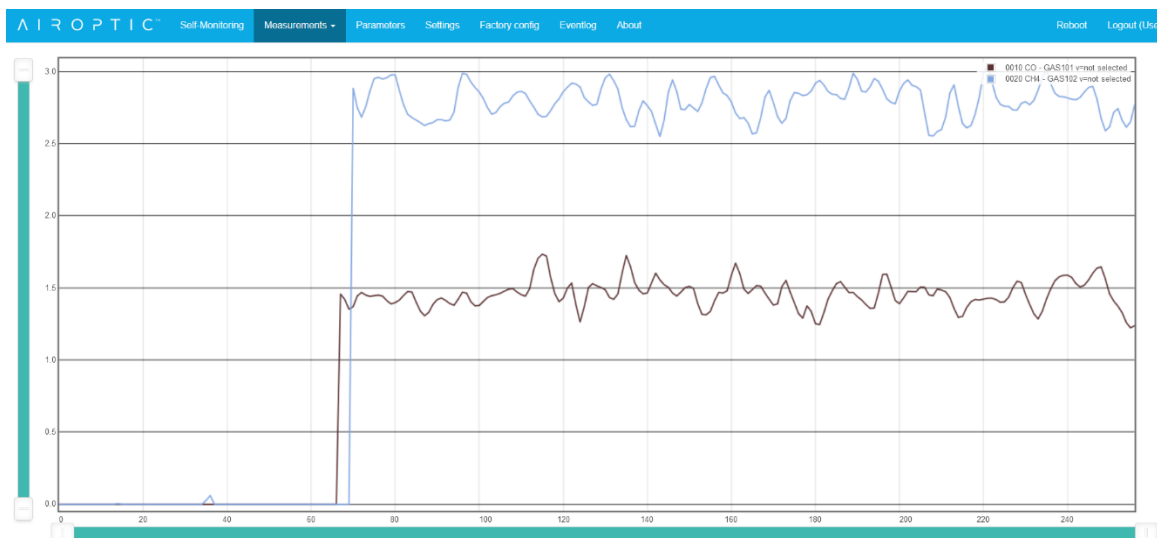


Figure 78. Plot Window.

In the **Table 8** the functionalities of the Plot Window are described.

Data refresh Stop	Toggle between start/stop of the measurement. By clicking stop the acquiring is paused and the data is preserved. Upon resuming, by clicking Start, the measurement logging continues from the last recorded data point.
Reset	Clears the memory and deletes all of the recorded data. Prior to clicking this button, it is advised to save your measurements! Data loss is irreversible!
sample rate 800 start	User can define sample time in milliseconds. This parameter dictates how often the data will be acquired from the instrument.

 
 
 
	User can define how many samples will be stored in the hardware during the session. When the sample limit is reached the oldest logged data points will be overwritten and the log will continue.
	Toggle between single y-axis/Multi y-axes. This option applies when more than one measurement is chosen from the table to be plotted.
	For Multi y-axes mode user can choose which y-axis is main for the plot drawing.
	Automatically adjusts the y-axis limits to fit the plot inside the plot window. The action is instantaneous and is not recurring.
	Manual y-axis minimum value.
	Manual y-axis maximum value.

Table 8. Plot Window functionalities.

9.5. Settings

In the Settings window, the user can choose the sample time (in milliseconds) and limit of the sample points to be plotted (log points). **It is not recommended to exceed the limit of 100,000 points.**

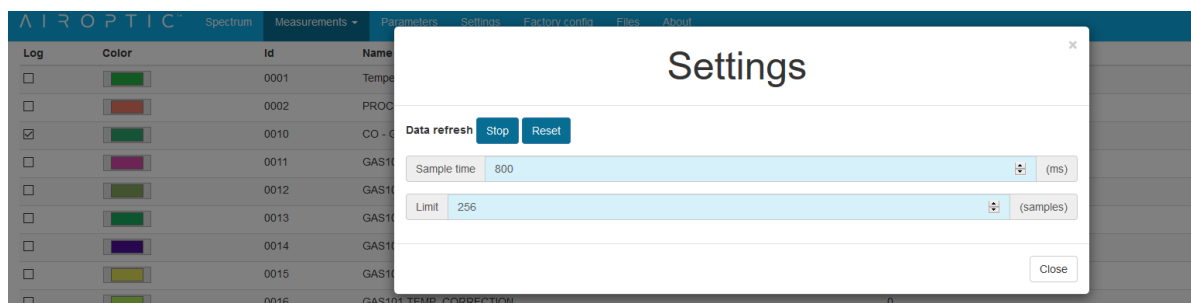


Figure 79. Modal window Settings.

9.6. Measurement Groups

There are four groups on the left side panel:

- **MP1**
- **TEC**
- **SYSTEM**
- **IO**

9.6.1.MP1 -> Process

Submodule displays basic process environment measurements.

Process measurements	
Name	Description
PROCESS.TEMPERATURE	Process temperature set by Parameters->MP1->Process
PROCESS.PRESSURE	Process temperature set by Parameters->MP1->Process
TEMP.CALCULATED	Only applicable in oxygen analyzers on special request
PROCESS.H2O	Process temperature set by Parameters->MP1->Process
PROCESS.O2	Process temperature set by Parameters->MP1->Process
WATER_DEWPOINT	Water dewpoint based on pressure provided by user

Table 9. Process measurement list.

 


Figure 80. Process measurements window.

9.6.2.MP1 -> Concentration

Submodule displays gases concentration.

Concentration measurements	
Name	Description
GAS101.CONCENTRATION	Gas concentration
GAS102.CONCENTRATION	Gas concentration
GAS103.CONCENTRATION	Gas concentration
GAS104.CONCENTRATION	Gas concentration
GAS105.CONCENTRATION	Gas concentration
GAS106.CONCENTRATION	Gas concentration
GAS107.CONCENTRATION	Gas concentration
GAS108.CONCENTRATION	Gas concentration
GAS_SUM	Sum of selected gases

Table 10. Concentration measurement list.

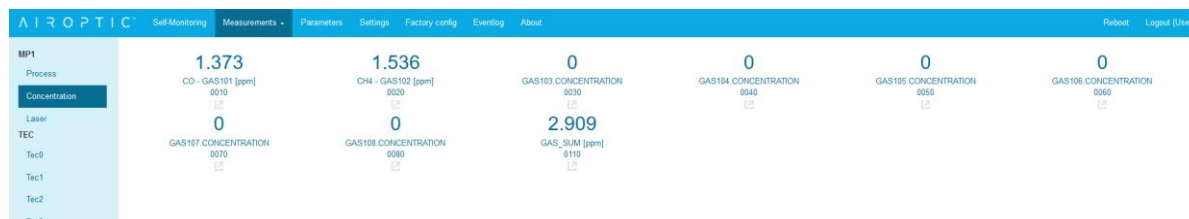


Figure 81. Concentration measurements window.

9.6.3.MP1 -> Laser

Submodule displays transmission quality.

Laser measurements	
Name	Description
LASER11.TRANSMISSION	Laser transmission quality
LASER12.TRANSMISSION	Laser transmission quality
LASER13.TRANSMISSION	Laser transmission quality
LASER14.TRANSMISSION	Laser transmission quality
FIBER1. TRANSMISSION	Loop cable transmission
FIBER2. TRANSMISSION	Loop cable transmission
REMOTERX1.GAIN	Remote receiver gain 1
REMOTERX2.GAIN	Remote receiver gain 2

Table 11. Laser measurement list.

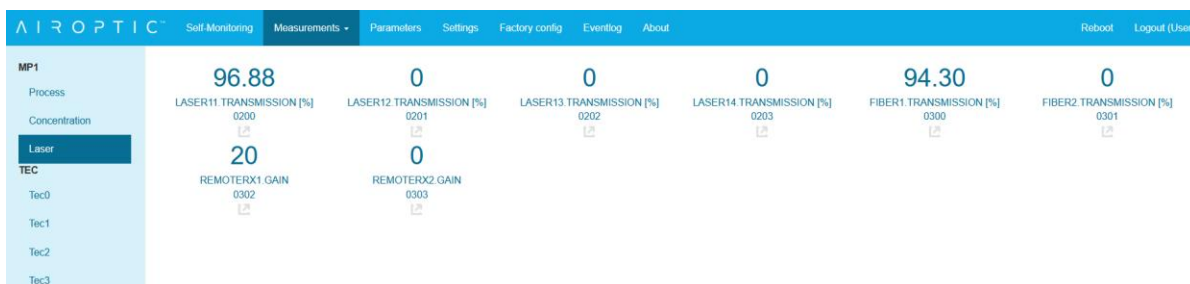


Figure 82. Laser measurements window.

9.6.4.TEC -> Tec0

Submodule displays measurement from first laser temperature control module.

Laser measurements	
Name	Name
TEC0.THL_REF_AMP	TEC0.THL_REF_AMP
TEC0.AMB_TEMPERATURE	TEC0.AMB_TEMPERATURE

Table 12. Laser measurement list – Laser1 temperature control module.

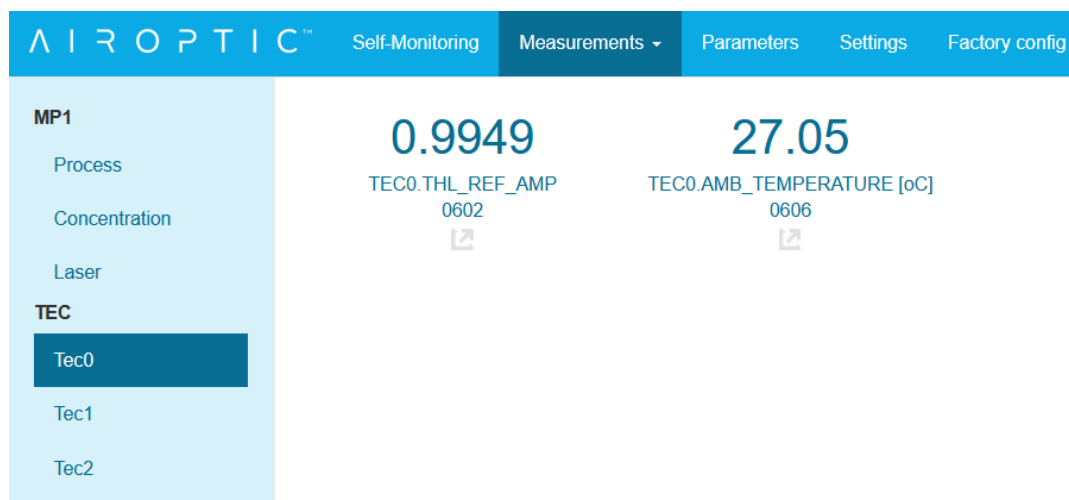


Figure 83. Laser temperature control module measurements window – Laser1.

9.6.5.TEC -> Tec1

Submodule displays measurement from second laser temperature control module.

Laser measurements	
Name	Name
TEC1.THL_REF_AMP	TEC1.THL_REF_AMP
TEC1.AMB_TEMPERATURE	TEC1.AMB_TEMPERATURE

Table 13. Laser measurement list – Laser2 temperature control module.

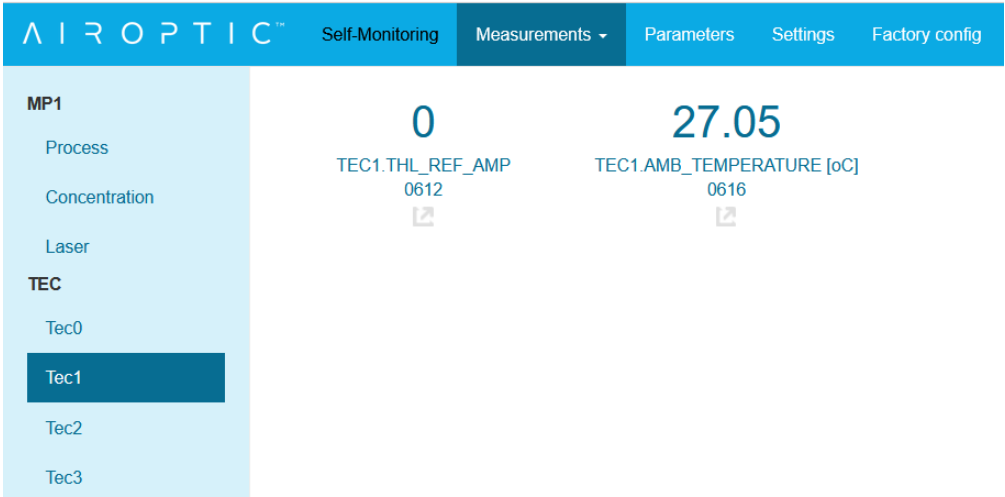


Figure 84. Laser temperature control module measurements window – Laser2.

9.6.6.TEC -> Tec2

Submodule displays measurement from third laser temperature control module.

Laser measurements	
Name	Name
TEC2.THL_REF_AMP	TEC2.THL_REF_AMP
TEC2.AMB_TEMPERATURE	TEC2.AMB_TEMPERATURE

Table 14. Laser measurement list – Laser3 temperature control module.

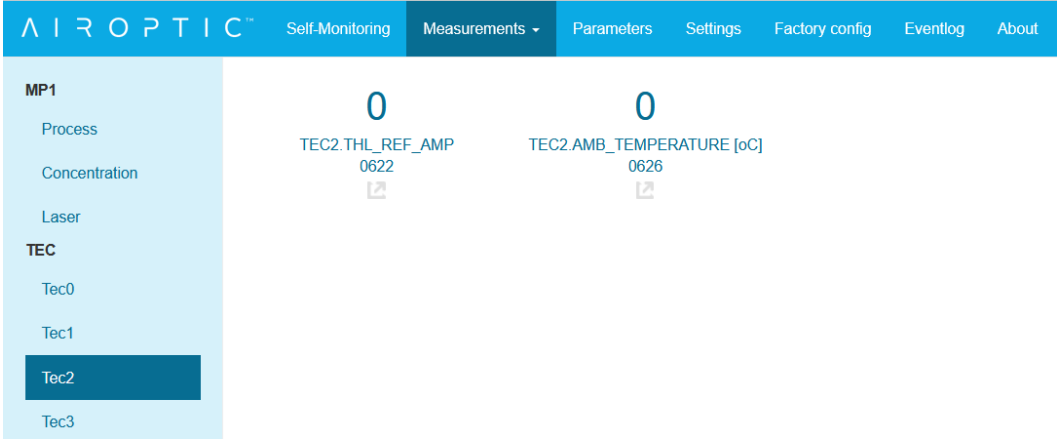


Figure 85. Laser temperature control module measurements window - Laser3.

9.6.7.TEC -> Tec3

Submodule displays measurement from fourth laser temperature control module.

Laser measurements	
Name	Name
TEC3.THL_REF_AMP	TEC3.THL_REF_AMP
TEC3.AMB_TEMPERATURE	TEC3.AMB_TEMPERATURE

Table 15. Laser measurement list – Laser4 temperature control module.

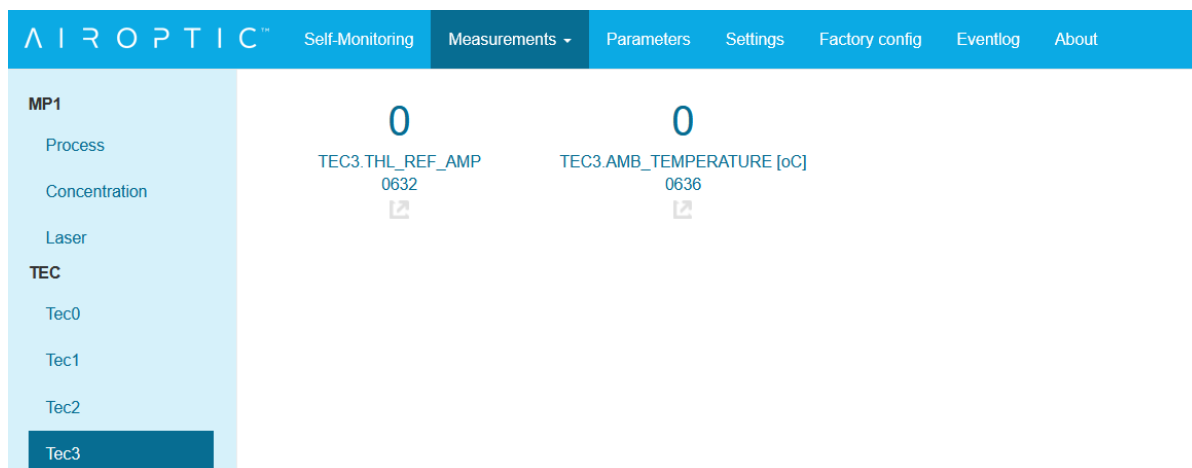


Figure 86. Laser temperature control module measurements window - Laser4.

9.6.8.System -> System

Submenu displays system health.

System measurements	
Name	Description
SYSTEM.STATUS	6 – system ready
SYSTEM.STARTUP_PROCEDURE	Values described in page 94
SYSTEM.TRANS_MP1_STATUS	1 - laser is working properly 0 – warning
SYSTEM.ALARM 1	Status value for alarm 1
SYSTEM.ALARM 2	Status value for alarm 2
SYSTEM.ALARM 3	Status value for alarm 3
SYSTEM.ALARM 4	Status value for alarm 4
SYSTEM.ALARM 5	Status value for alarm 5
SYSTEM.ALARM 6	Status value for alarm 6
SYSTEM.ALARM 7	Status value for alarm 7
SYSTEM.ALARM 8	Status value for alarm 8
SYSTEM.ALARM 9	Status value for alarm 9
SYSTEM.ALARM 10	Status value for alarm 10

Table 16. System measurements list.

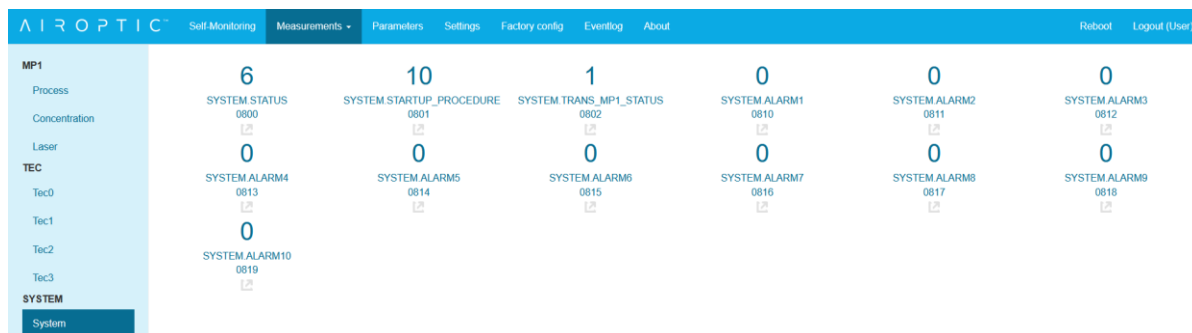


Figure 87. System measurements window.

9.6.9.IO -> Aout (Analog output measurement)

Submenu displays 4 analog output channels set values

Analog outputs measurements	
Name	Description
AOUT1	Analog output 1
AOUT2	Analog output 2
AOUT3	Analog output 3
AOUT4	Analog output 4

Table 17. Analog outputs measurements list.

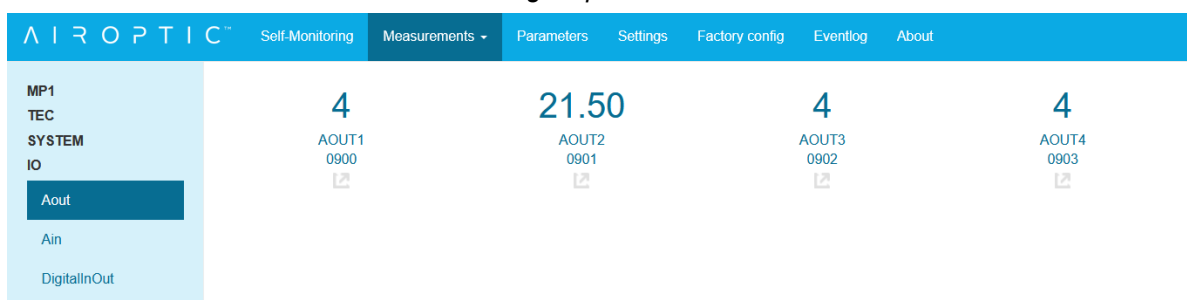


Figure 88. Analog output measurements window.

9.6.10. IO -> Ain (Analog input measurement)

Submenu displays 4 analog input channels.

Analog inputs measurements	
Name	Description
AIN1	Analog input 1
AIN1.VAL	Analog 1 measured value
AIN2	Analog input 2
AIN2.VAL	Analog 2 measured value
AIN3	Analog input 3
AIN3.VAL	Analog 3 measured value
AIN4	Analog input 4
AIN4.VAL	Analog 4 measured value
RTD	RTD measured value
AMB_PRESSURE	Ambient pressure measured value

Table 18. Analog inputs measurements list.

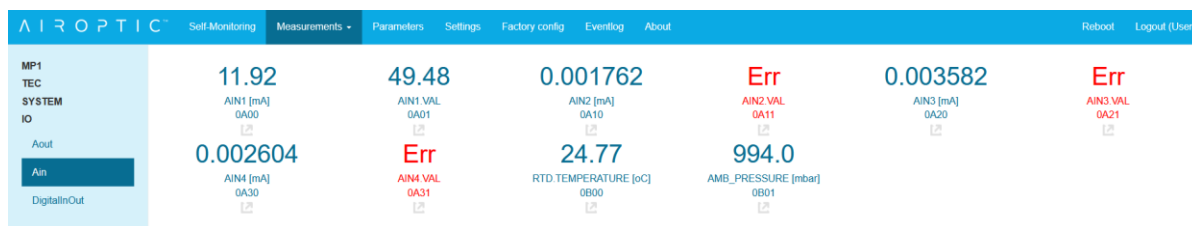


Figure 89. Analog input measurements window

9.6.11. IO -> Digital In\Out

Submenu displays 8 digital inputs and 8 digital outputs values.

Digital inputs/outputs measurements	
Name	Description
DOUT1	Digital output 1
DOUT2	Digital output 2
DOUT3	Digital output 3
DOUT4	Digital output 4
DOUT5	Digital output 5
DOUT6	Digital output 6
DOUT7	Digital output 7
DOUT8	Digital output 8
DIN1	Digital input 1
DIN2	Digital input 2
DIN3	Digital input 3
DIN4	Digital input 4
DIN5	Digital input 5
DIN6	Digital input 6
DIN7	Digital input 7
DIN8	Digital input 8

Table 19. Digital inputs/outputs measurements list.

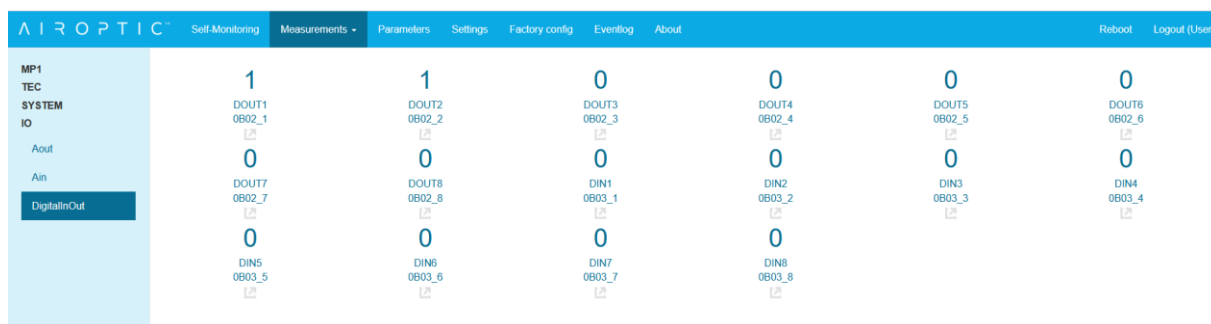


Figure 90. Digital input and output measurements window.

9.7. Parameters tab

In the User access mode, it is possible to access and edit various parameters, see Figure 91.

If external temperature or pressure signals are fed into the analog ports, they need to be configured in this tab. Analog output signals can also be extracted from the instrument and shall be configured in the Parameters tab. By default, there are signals assigned to the analog inputs/outputs.

If other configuration than the default is needed, please use the respective fields to define the required signal.

AIROPTIC™

Self-Monitoring

Measurements

Parameters

Settings

Factory config

Eventlog

About

MP1

Application

Process

Gas101

Gas102

Gas103

Gas104

Gas105

Gas106

Gas107

Gas108

GasSum

Temp

DewPoint

IO

Dout

Aout

Ain

Rtd

Amb_press

NETWORK

Net

Anybus

ModbusRTU

MANUAL VALUE	PROCESS.TEMP_IS
25	PROCESS.TEMP_USER_VALUE [oC]
MANUAL VALUE	PROCESS.PRESS_IS
ABSOLUTE	PROCESS.PRESS_SENSOR_TYPE
1173.79	PROCESS.PRESS_USER_VALUE [mbar]
NONE	PROCESS.H2O_IS
0	PROCESS.H2O_USER_VALUE
%Vol	PROCESS.H2O_UNIT
NONE	PROCESS.O2_IS
0	PROCESS.O2_USER_VALUE
0	PROCESS.O2_REFERENCE_VALUE
%Vol	PROCESS.O2_UNIT
1	MEAS.PATH_LENGTH_CH_1 [m]
1	MEAS.PATH_LENGTH_CH_2 [m]
3	MEAS.RESPONSE_TIME_T90 [s]
Off On	MEAS.CONCENTRATION_FROZEN
300	MEAS.CONCENTRATION_TIME_FROZEN


Figure 91. Process parameters window

In order to change the value or setting of chosen parameter the user shall click on the field that intends to change i.e. optical path length. By clicking on the light blue box, the edition mode is activated. The value is changed by typing in the new value.

1

MEAS.PATH_LENGTH_CH_1 [m]

 To apply changes, click on the **Send** button that will appear next to the edited field. The same method applies to a drop-down menu changes. Dark blue background indicates that the value has been changed but has not been applied yet.



If changes were made the **Send&Save** button becomes active. By clicking it, the changes are permanently stored in the analyzer firmware.

Drop-down menu will appear when clicking on the **Parameters**.

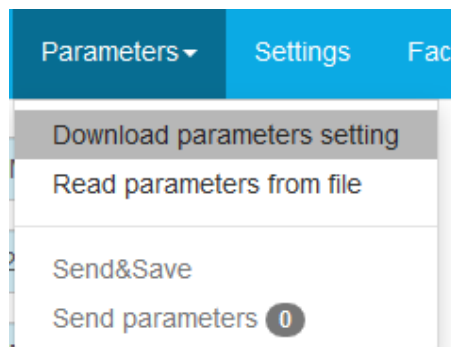


Figure 92. Webserver application - parameters Window.

Download parameters setting	Current parameter list can be downloaded to a *.txt file.
Read parameters from file	Previously saved parameter list can be read from a *.txt file.
Send & Save	Current parameter list is saved and sent to the instrument.
Send parameters	All parameters that have been changed are sent at once. Number in oval indicates the number of parameters that will be applied.

Table 20. Parameter Window functionalities.

9.7.1. Parameter groups

There are four main groups visible on the left panel:

- **MP1**
- **IO**
- **NETWORK**
- **SYSTEM**

9.7.2. MP1 -> Process (Process environment configuration)

Process parameters	
Name	Description
PROCESS.TEMP_IS	Select temperature sensor source. (Table)
PROCESS.TEMP_USER_VALUE	Temperature value in manual mode
PROCESS.PRESS_IS	Select pressure sensor source (Table)

PROCESS.PRESS_SENSOR_TYPE	Select sensor pressure type (Table)
PROCESS.PRESS_USER_VALUE	Pressure value in manual mode
PROCESS.H2O_IS	Select H2O source. (Table)
PROCESS.H2O_USER_VALUE	H2O value in manual mode
PROCESS.H2O_UNIT	Select Unit for H2O (Table)
PROCESS.O2_IS	Select O2 source. (Table)
PROCESS.O2_USER_VALUE	O2 value in manual mode
PROCESS.O2_UNIT	Select O2 unit (Table)
MEAS.PATH_LENGTH_CH_1	Length between transmitter and receiver
MEAS.PATH_LENGTH_CH_2	Length between transmitter and receiver
MEAS.RESPONSE_TIME_T90	Time response for infinite impulse filter
MEAS.CONCENTRATION_FROZEN	Enable/Disable Concentration Frozen mode
MEAS.CONCENTRATION_TIME_FROZEN	Select the length of time for which the last measurements will be frozen in case of transmission loss

Table 21. Process parameters list.

Temperature sensor source	
Name	Description
MANUAL VALUE	Value is set manually by user from Webserver interface
AIN1 AIN2 AIN3 AIN4	Temperature sensor is connected to analog input socket
AIN-RTD	Resistance temperature sensor
INDUSTRY_PROTOCOL	Temperature is sent by industry protocol
TEMP.CALCULATED	Only applicable in oxygen analyzers on special request

TCU1.P1_TEMPERATURE	Extractive devices only (not applicable in Cross Duct)
TCU1.P2_TEMPERATURE	
TCU1.P3_TEMPERATURE	
TCU1.P4_TEMPERATURE	
TCU1.P5_TEMPERATURE	
TCU1.P6_TEMPERATURE	
TCU1.P7_TEMPERATURE	
TCU1.P8_TEMPERATURE	
TCU2.P1_TEMPERATURE	
TCU2.P2_TEMPERATURE	
TCU2.P3_TEMPERATURE	
TCU2.P4_TEMPERATURE	
TCU2.P5_TEMPERATURE	
TCU2.P6_TEMPERATURE	
TCU2.P7_TEMPERATURE	
TCU2.P8_TEMPERATURE	

Table 30. Temperature sensor source list.

AIROPTIC™
Self-Monitoring
Measurements
Parameters
Settings
Factory config
Eventlog
About

MP1
Application
Process
Gas101
Gas102
Gas103
Gas104
Gas105
Gas106
Gas107
Gas108
Temp
DewPoint
IO
Dout
Aout
Ain
Rtd
Amb_press
NETWORK
Net
Anybus
ModbusRTU

MANUAL VALUE
25
MANUAL VALUE
ABSOLUTE
1173.79
NONE
0
%Vol
NONE
0
0
%Vol
1
1
3
Off On
300

PROCESS.TEMP_IS
PROCESS.TEMP_USER_VALUE [oC]
PROCESS.PRESS_IS
PROCESS.PRESS_SENSOR_TYPE
PROCESS.PRESS_USER_VALUE [mbar]
PROCESS.H2O_IS
PROCESS.H2O_USER_VALUE
PROCESS.H2O_UNIT
PROCESS.O2_IS
PROCESS.O2_USER_VALUE
PROCESS.O2_REFERENCE_VALUE
PROCESS.O2_UNIT
MEAS.PATH_LENGTH_CH_1 [m]
MEAS.PATH_LENGTH_CH_2 [m]
MEAS.RESPONSE_TIME_T90 [s]
MEAS.CONCENTRATION_FROZEN
MEAS.CONCENTRATION_TIME_FROZEN

Figure 93. Process parameters window

9.7.3.MP1 -> Gas101

Gas parameters	
Name	Description
GAS101.SPAN_CALIBRATION	Multiplier of the measured concentration GAS101. 1 – factory value of multiplier
GAS101.OFFSET	Offset from measured concentration GAS101
GAS101.H2O_NORMALIZATION_ENABLE	On/Off H2O NORMALIZATION for GAS101
GAS101.O2_NORMALIZATION_ENABLE	On/Off O2 NORMALIZATION for GAS101

Table 22. GAS101 parameters list.


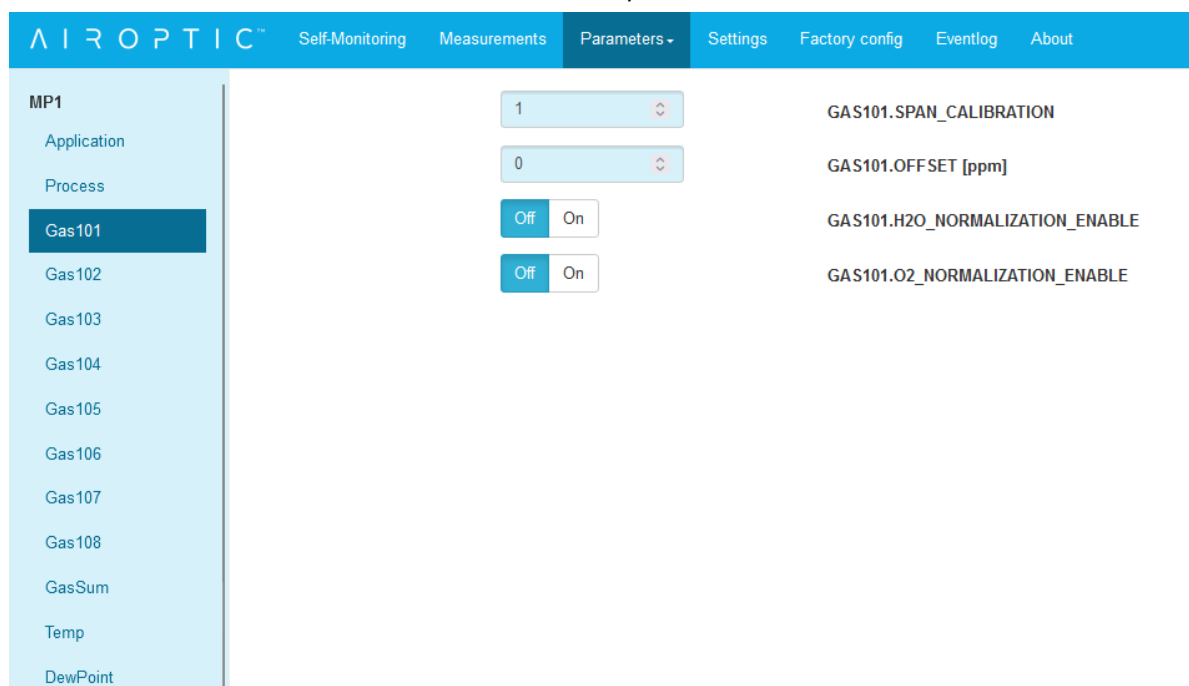


Figure 94. GAS101 parameters window

9.7.4.MP1 -> Gas102

Gas parameters	
Name	Description
GAS102.SPAN_CALIBRATION	Multiplier of the measured concentration GAS102. 1 – factory value of multiplier
GAS102.OFFSET	Offset from measured concentration GAS102 value
GAS102.H2O_NORMALIZATION_ENABLE	On/Off H2O NORMALIZATION for GAS102
GAS102.O2_NORMALIZATION_ENABLE	On/Off O2 NORMALIZATION for GAS102

Table 23. GAS102 parameters list.

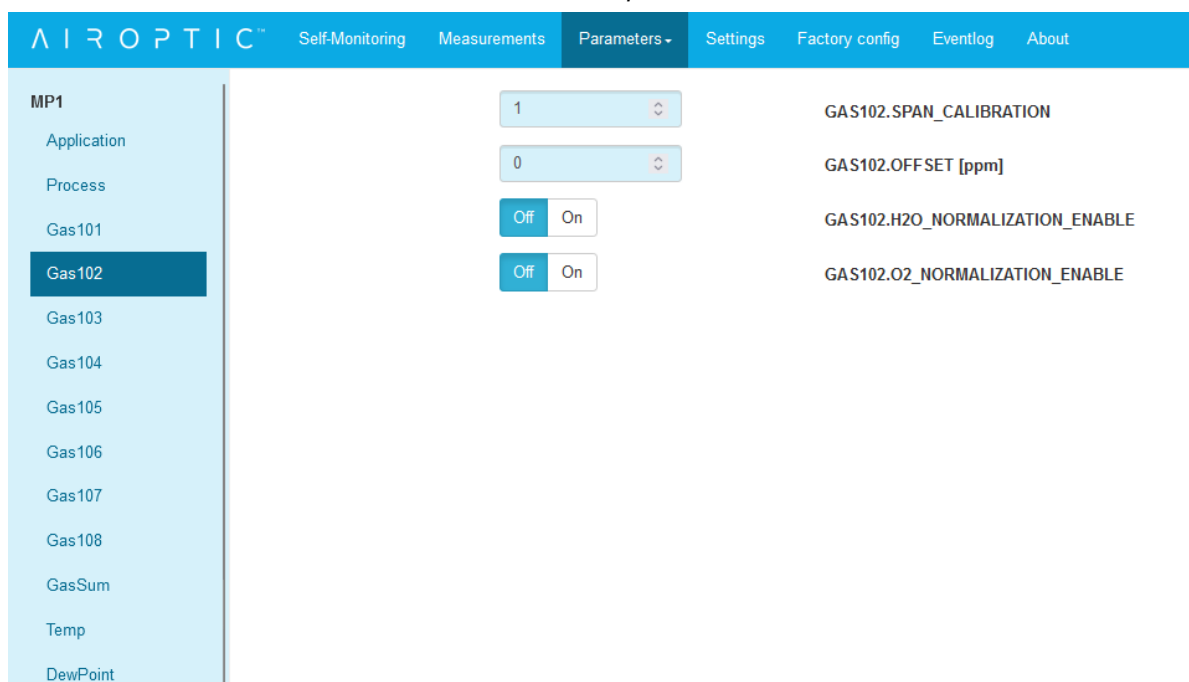


Parameter Name	Value / Status
GAS102.SPAN_CALIBRATION	1
GAS102.OFFSET [ppm]	0
GAS102.H2O_NORMALIZATION_ENABLE	Off
GAS102.O2_NORMALIZATION_ENABLE	Off

Figure 95. GAS102 parameters window.

9.7.5.MP1 -> Gas103

Gas parameters	
Name	Description
GAS103.SPAN_CALIBRATION	Multiplier of the measured concentration GAS103. 1 – factory value of multiplier
GAS103.OFFSET	Offset from measured concentration GAS103 value
GAS103.H2O_NORMALIZATION_ENABLE	On/Off H2O NORMALIZATION for GAS103
GAS103.O2_NORMALIZATION_ENABLE	On/Off O2 NORMALIZATION for GAS103

Table 24. GAS103 parameters list.

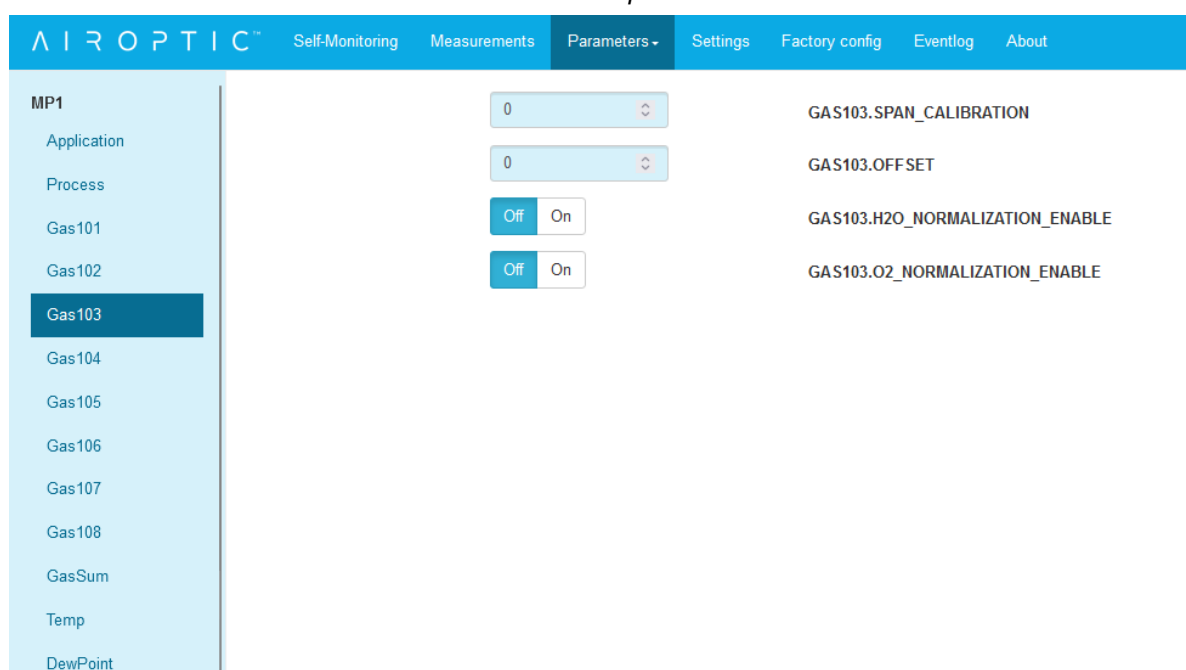

The screenshot shows the 'Parameters' window for 'Gas103' in the AIROPTIC web application. The interface includes a top navigation bar with the AIROPTIC logo and links for Self-Monitoring, Measurements, Parameters (selected), Settings, Factory config, Eventlog, and About. A left sidebar lists MP1 sub-items: Application, Process, Gas101, Gas102, Gas103 (selected), Gas104, Gas105, Gas106, Gas107, Gas108, GasSum, Temp, and DewPoint. The main area displays four parameters for GAS103: SPAN_CALIBRATION (value 0), OFFSET (value 0), H2O_NORMALIZATION_ENABLE (toggle set to Off), and O2_NORMALIZATION_ENABLE (toggle set to Off).

Figure 96. GAS103 parameters window

9.7.6.MP1 -> Gas104

Gas parameters	
Name	Description
GAS104.SPAN_CALIBRATION	Multiplier of the measured concentration GAS104. 1 – factory value of multiplier
GAS104.OFFSET	Offset from measured concentration GAS104 value
GAS104.H2O_NORMALIZATION_ENABLE	On/Off H2O NORMALIZATION for GAS104
GAS104.O2_NORMALIZATION_ENABLE	On/Off O2 NORMALIZATION for GAS104

Table 25. GAS104 parameters list.

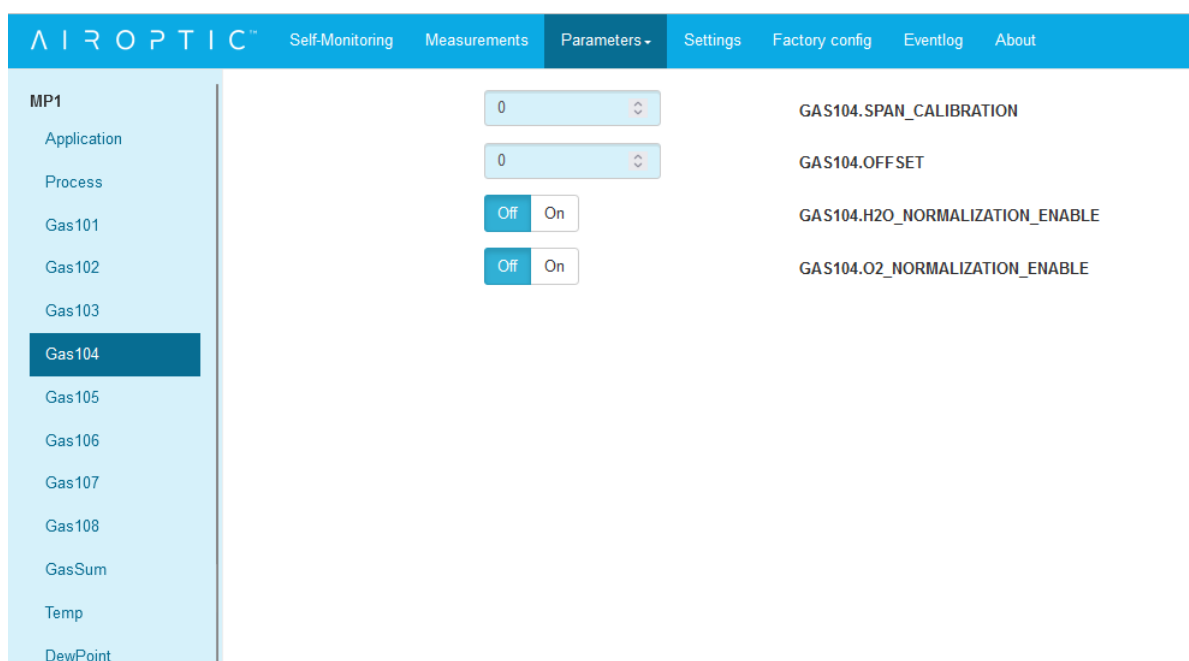


Figure 97. GAS104 parameters window

9.7.7.MP1 -> GAS105

Gas parameters	
Name	Description
GAS105.SPAN_CALIBRATION	Multiplier of the measured concentration GAS105. 1 – factory value of multiplier
GAS105.OFFSET	Offset from measured concentration GAS105 value
GAS105.H2O_NORMALIZATION_ENABLE	On/Off H2O NORMALIZATION for GAS105
GAS105.O2_NORMALIZATION_ENABLE	On/Off O2 NORMALIZATION for GAS105

Table 26. GAS105 parameters list.


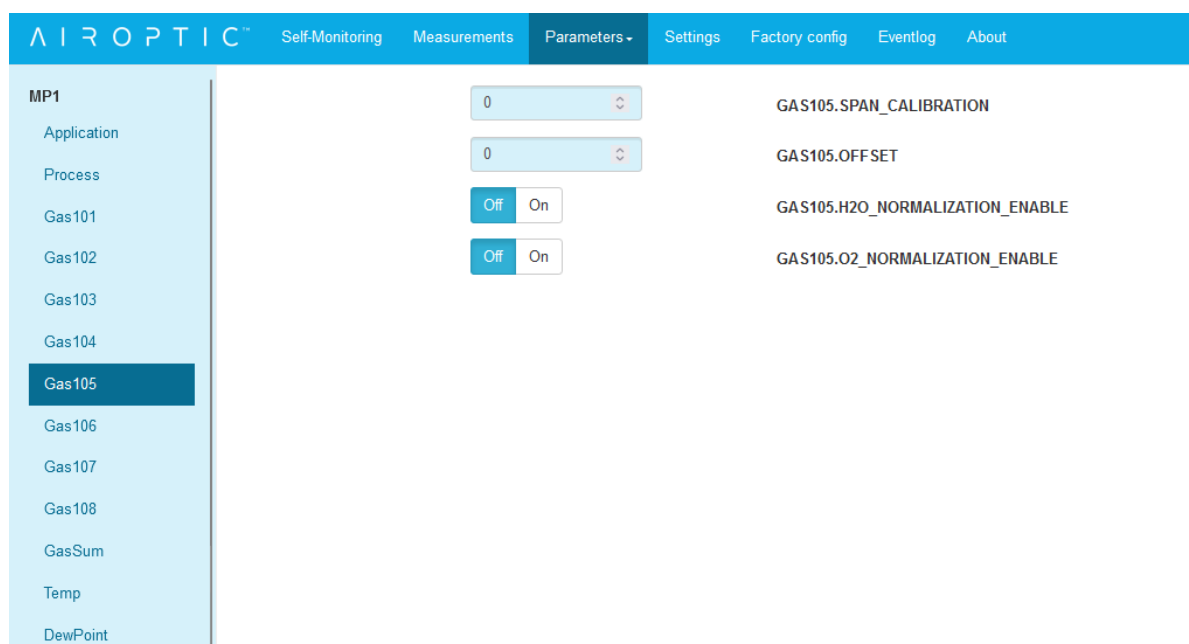


Figure 98. GAS105 parameters window.

9.7.8.MP1 -> Gas106

Gas parameters	
Name	Description
GAS106.SPAN_CALIBRATION	Multiplier of the measured concentration GAS106. 1 – factory value of multiplier
GAS106.OFFSET	Offset from measured concentration GAS106 value
GAS106.H2O_NORMALIZATION_ENABLE	On/Off H2O NORMALIZATION for GAS106
GAS106.O2_NORMALIZATION_ENABLE	On/Off O2 NORMALIZATION for GAS106

Table 27. GAS106 parameters list.

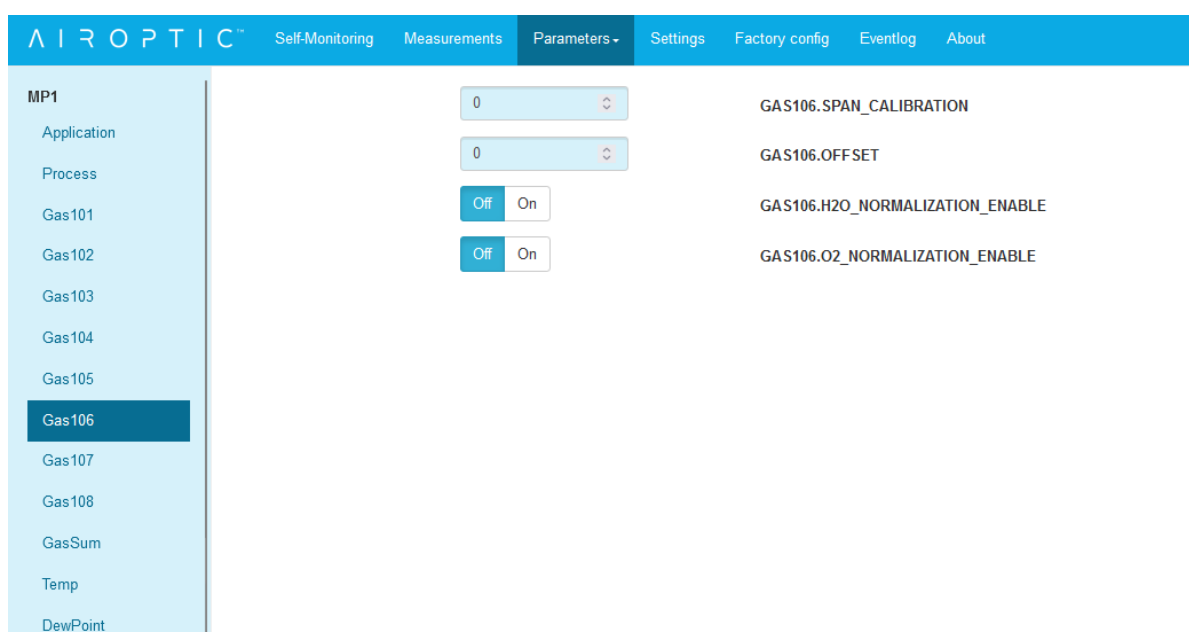

The screenshot shows the 'Parameters' window for 'Gas106' in the AIROPTIC web application. The interface features a top navigation bar with the AIROPTIC logo and links for Self-Monitoring, Measurements, Parameters (active), Settings, Factory config, Eventlog, and About. A left sidebar lists measurement points (MP1) and gas types (Gas101 to Gas108, GasSum, Temp, DewPoint), with 'Gas106' currently selected. The main content area displays four parameters for GAS106:


- GAS106.SPAN_CALIBRATION**: A numeric input field showing the value '0'.
- GAS106.OFFSET**: A numeric input field showing the value '0'.
- GAS106.H2O_NORMALIZATION_ENABLE**: A toggle switch currently set to 'Off'.
- GAS106.O2_NORMALIZATION_ENABLE**: A toggle switch currently set to 'Off'.

Figure 99. GAS106 parameters window

9.7.9.MP1 -> Gas107

Gas parameters	
Name	Description
GAS107.SPAN_CALIBRATION	Multiplier of the measured concentration GAS107. 1 – factory value of multiplier
GAS107.OFFSET	Offset from measured concentration GAS107 value
GAS107.H2O_NORMALIZATION_ENABLE	On/Off H2O NORMALIZATION for GAS107
GAS107.O2_NORMALIZATION_ENABLE	On/Off O2 NORMALIZATION for GAS107

Table 28. GAS107 parameters list.

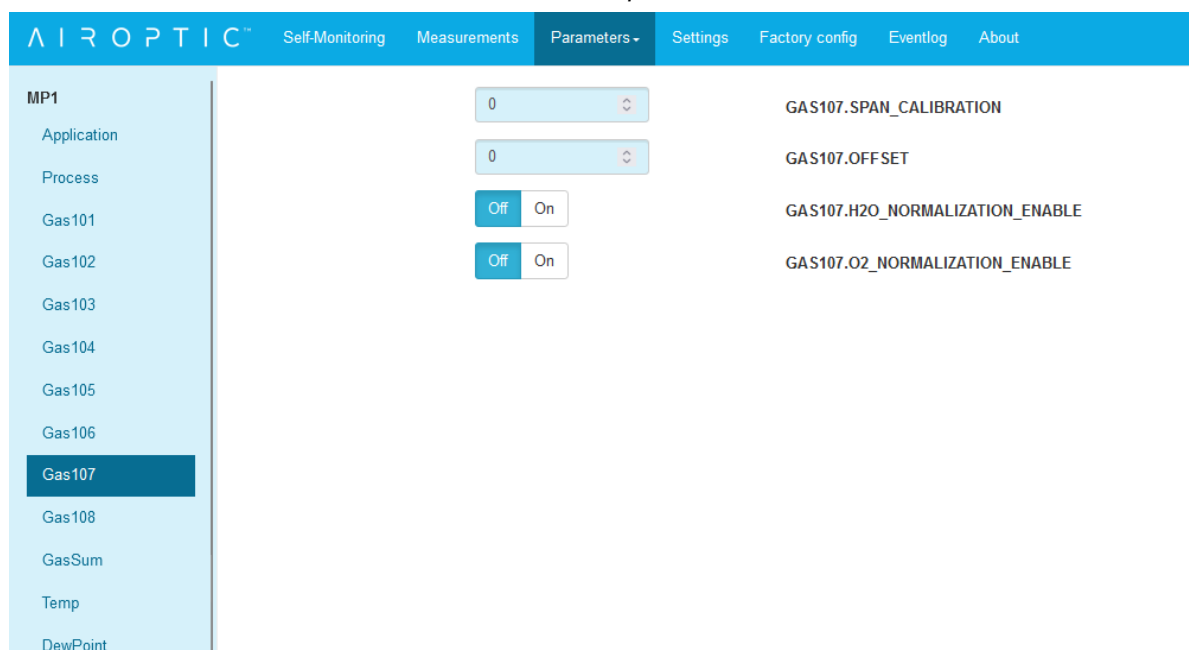


Parameter Name	Value / Status
GAS107.SPAN_CALIBRATION	0
GAS107.OFFSET	0
GAS107.H2O_NORMALIZATION_ENABLE	Off
GAS107.O2_NORMALIZATION_ENABLE	Off

Figure 100. GAS107 parameters window.

9.7.10. MP1 -> Gas108

Gas parameters	
Name	Description
GAS108.SPAN_CALIBRATION	Multiplier of the measured concentration GAS108. 1 – factory value of multiplier
GAS108.OFFSET	Offset from measured concentration GAS108 value
GAS108.H2O_NORMALIZATION_ENABLE	On/Off H2O NORMALIZATION for GAS108
GAS108.O2_NORMALIZATION_ENABLE	On/Off O2 NORMALIZATION for GAS108

Table 29. GAS108 parameters list.

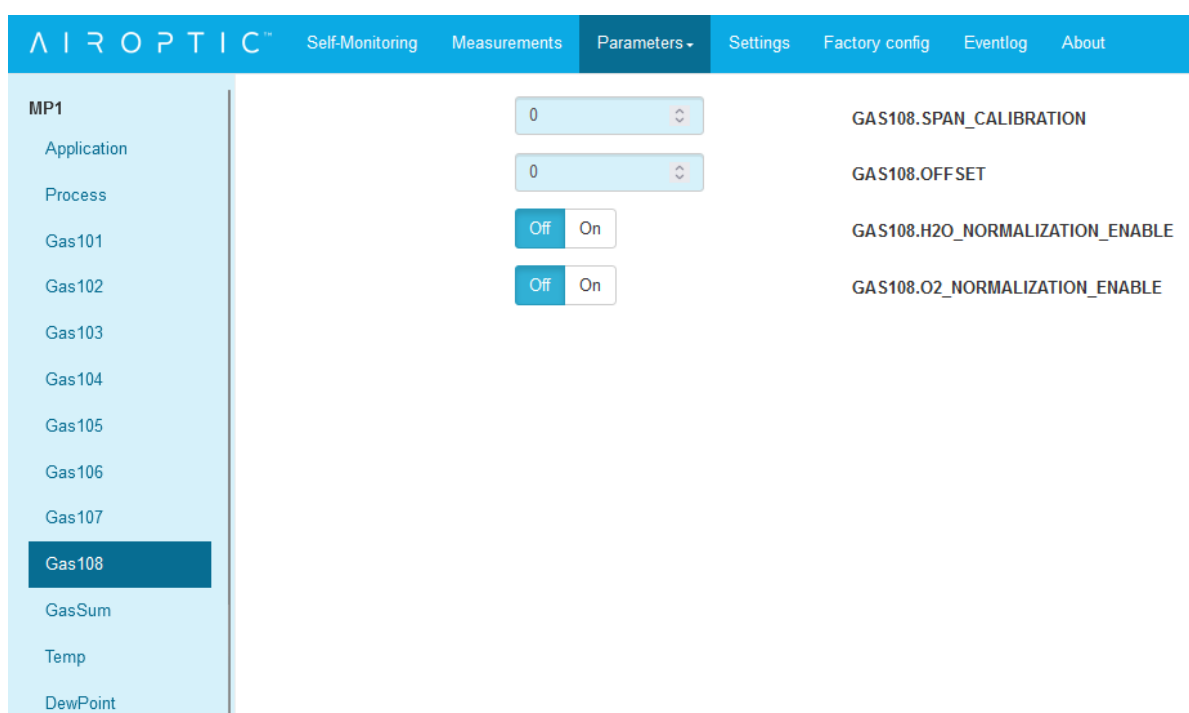

The screenshot shows the 'Parameters' window for 'Gas108' in the AIROPTIC web application. The interface includes a top navigation bar and a left sidebar. The main content area displays four parameters with their respective controls:

- GAS108.SPAN_CALIBRATION**: A numeric input field showing the value '0'.
- GAS108.OFFSET**: A numeric input field showing the value '0'.
- GAS108.H2O_NORMALIZATION_ENABLE**: A toggle switch currently set to 'Off'.
- GAS108.O2_NORMALIZATION_ENABLE**: A toggle switch currently set to 'Off'.

Figure 101. GAS108 parameters window.

9.7.11. MP1 -> Gas_Sum

Gas_Sum	
Name	Description
<i>GAS_SUM.GAS101_ENABLE</i>	On/Off GAS_SUM.GAS101
<i>GAS_SUM.GAS101_ENABLE</i>	On/Off GAS_SUM.GAS102
<i>GAS_SUM.GAS101_ENABLE</i>	On/Off GAS_SUM.GAS103
<i>GAS_SUM.GAS101_ENABLE</i>	On/Off GAS_SUM.GAS104
<i>GAS_SUM.GAS101_ENABLE</i>	On/Off GAS_SUM.GAS105
<i>GAS_SUM.GAS101_ENABLE</i>	On/Off GAS_SUM.GAS106
<i>GAS_SUM.GAS101_ENABLE</i>	On/Off GAS_SUM.GAS107
<i>GAS_SUM.GAS101_ENABLE</i>	On/Off GAS_SUM.GAS108

Figure 102. GAS Sum parameters window.

9.7.12. MP1 -> Temp

Temperature parameters	
Name	Description
TEMP.SPAN_CALIBRATION	Multiplier of the measured temperature. 1 – factory value of multiplier
TEMP.OFFSET	Offset from measured temperature

Table 30. Temperature parameters list.

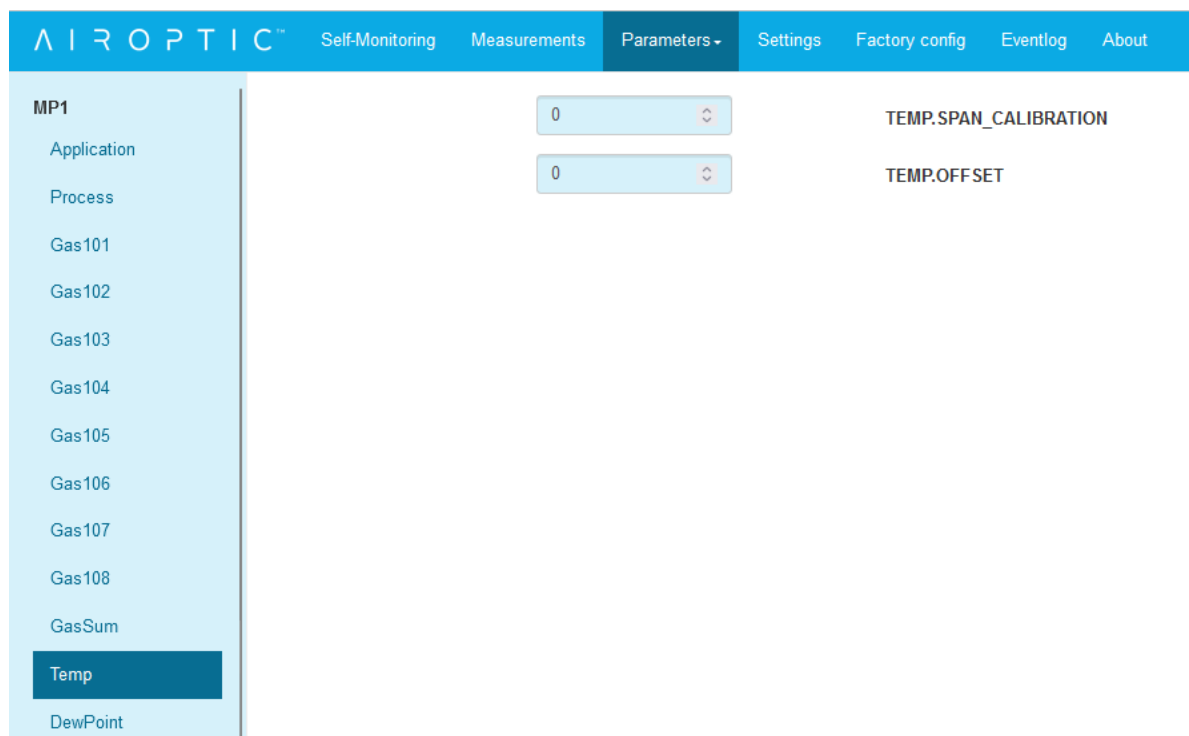


Figure 103. Temperature parameters window.

9.7.13. MP1 -> Dewpoint

Dewpoint	
Name	Description
DEWPOINT.PRESSURE	Process pressure value to provide in mbars.

Figure 114. Dew point window

9.7.14. IO -> Dout (Digital output operating mode configuration)

Digital outputs parameters	
Name	Description
DOUT.DO1	Configuration of first digital output (Available operating mode see Table)
DOUT.DO2	Configuration of second digital output (Available operating mode see Table)
DOUT.DO3	Configuration of third digital output (Available operating mode see Table)
DOUT.DO4	Configuration of forth digital output (Available operating mode see Table)
DOUT.DO5	Configuration of fifth digital output (Available operating mode see Table)
DOUT.DO6	Configuration of sixth digital output (Available operating mode see Table)
DOUT.DO7	Configuration of seventh digital output (Available operating mode see Table)
DOUT.DO8	Configuration of eighth digital output (Available operating mode see Table)

Table 31. Digital outputs list.

Select digital output operating mode	
Name	Description
ON	Set the digital output to high.
OFF	Set the digital output to low.
SYSTEM STATUS	Set the digital output to high when system status is 6. Signals the correct operation of the system.
TRANSMISSION STATUS	Set the digital output to high when transmission status is 1. Signals correct laser transmission.

SYSTEM_ALARM1		
SYSTEM_ALARM2		
SYSTEM_ALARM3		
SYSTEM_ALARM4		
SYSTEM_ALARM5		
SYSTEM_ALARM6		
SYSTEM_ALARM7		
SYSTEM_ALARM8		
SYSTEM_ALARM9		
SYSTEM_ALARM10		
ALARM_PUMP1		
ALARM_PUMP2		
ALARM_PUMP3		
ALARM_PUMP4		
RED_LASER_ON		

Set the digital output to opposite when condition from specific alarm occurs

Extractive devices only (not applicable in Cross Duct)
Set the digital output to high when there is a pump error

Open path devices only

Table 32. Digital output operating mode list.

Measurements
Parameters ▾
Settings
Factory config
About

MP1
IO
Dout
Aout
Ain
Rtd
Amb_press
NETWORK
SYSTEM

SYSTEM_ALARM1 ▾

OFF ▾

ON ▾

OFF ▾

OFF ▾

OFF ▾

OFF ▾

OFF ▾

DOUT.DO1
DOUT.DO2
DOUT.DO3
DOUT.DO4
DOUT.DO5
DOUT.DO6
DOUT.DO7
DOUT.DO8

Figure 104. Dout parameters window.

9.7.15. IO - > Aout (Analog output configuration)

Analog value is scaled to a defined range and set to the specific output.

Formula used to calculate output value:

$$A_{out} = 4 + \frac{MANUAL_VALUE - SCALE_MIN}{SCALE_MAX - SCALE_MIN} * 16$$

Analog outputs parameters	
Name	Description
<i>AOUT.FORCE_MANUAL_MODE_ENABLE</i>	Switch all analog output channels to manual mode ignoring SELECT_SIGNAL value
<i>AOUT.SCALE_ENABLE</i>	Enable/disable calculation of scaling value from range SCALE_MIN, SCALE_MAX (formula above)
<i>AOUT.CALIBRATED</i>	Enable/disable calibration factors
<i>AOUT.MIN_OUT_RANGE</i>	Signaling out of available range on analog output (more information can be found on Figure 51)
<i>AOUT1.SELECT_SIGNAL</i>	Measurement converts to analog output value.
<i>AOUT1.MANUAL_VALUE</i>	Analog value set by user (available when SELECT_SIGNAL is selected or when FORCE_MANUAL_MODE_ENABLE is set)
<i>AOUT1.SCALE_MIN</i>	Set scale minimum on first output (equivalent 4mA on output)
<i>AOUT1.SCALE_MAX</i>	Set scale maximum on first output (equivalent 20mA on output)
<i>AOUT1.A</i>	Calibration factor A on first output (y=Ax+B)
<i>AOUT1.B</i>	Calibration factor B on first output (y=Ax+B)
<i>AOUT2.SELECT_SIGNAL</i>	Measurement converts to analog output value.


<i>AOUT2.MANUAL_VALUE</i>	Analog value set by user (available when SELECT_SIGNAL is selected or when FORCE_MANUAL_MODE_ENABLE is set)
<i>AOUT2.SCALE_MIN</i>	Set scale minimum on second output (equivalent 4mA on output)
<i>AOUT2.SCALE_MAX</i>	Set scale maximum on second output (equivalent 20mA on output)
<i>AOUT2.A</i>	Calibration factor A on second output ($y=Ax+B$)
<i>AOUT2.B</i>	Calibration factor B on second output ($y=Ax+B$)
<i>AOUT3.SELECT_SIGNAL</i>	Measurement converts to analog output value.
<i>AOUT3.MANUAL_VALUE</i>	Analog value set by user (available when SELECT_SIGNAL is selected or when FORCE_MANUAL_MODE_ENABLE is set)
<i>AOUT3.SCALE_MIN</i>	Set scale minimum on third output (equivalent 4mA on output)
<i>AOUT3.SCALE_MAX</i>	Set scale maximum on third output (equivalent 20mA on output)
<i>AOUT3.A</i>	Calibration factor A on third output ($y=Ax+B$)
<i>AOUT3.B</i>	Calibration factor B on third output ($y=Ax+B$)
<i>AOUT4.SELECT_SIGNAL</i>	Measurement converts to analog output value.
<i>AOUT4.MANUAL_VALUE</i>	Analog value set by user (available when SELECT_SIGNAL is selected or when FORCE_MANUAL_MODE_ENABLE is set)
<i>AOUT4.SCALE_MIN</i>	Set scale minimum on fourth output (equivalent 4mA on output)

AOUT4.SCALE_MAX	Set scale maximum on fourth output (equivalent 20mA on output)
AOUT4.A	Calibration factor A on fourth output ($y=Ax+B$)
AOUT4.B	Calibration factor B on fourth output ($y=Ax+B$)

Table 33. Analog outputs list.

Analog output select signals	
Name	Description
MANUAL MODE	Value is set by user
GAS101.CONCENTRATION GAS102.CONCENTRATION GAS103.CONCENTRATION GAS104.CONCENTRATION GAS105.CONCENTRATION GAS106.CONCENTRATION GAS107.CONCENTRATION GAS108.CONCENTRATION	Gas concentration (Measurement id: 0010) Gas concentration (Measurement id: 0020) Gas concentration (Measurement id: 0030) Gas concentration (Measurement id: 0040) Gas concentration (Measurement id: 0050) Gas concentration (Measurement id: 0060) Gas concentration (Measurement id: 0070) Gas concentration (Measurement id: 0080)
LASER11.TRANSMISSION LASER12.TRANSMISSION LASER13.TRANSMISSION LASER14.TRANSMISSION	Laser transmission (Measurement id: 0200) Laser transmission (Measurement id: 0201) Laser transmission (Measurement id: 0202) Laser transmission (Measurement id: 0203)
TEMP.CALCULATED	Temperature calculated – only applicable in oxygen analyzers on special request (Measurement id 0100)
PROCESS.TEMP	Process temperature (Measurement id: 0001)
PROCESS.PRESSURE	Process pressure (Measurement id: 0002)

Table 34. Analog output select signals list.

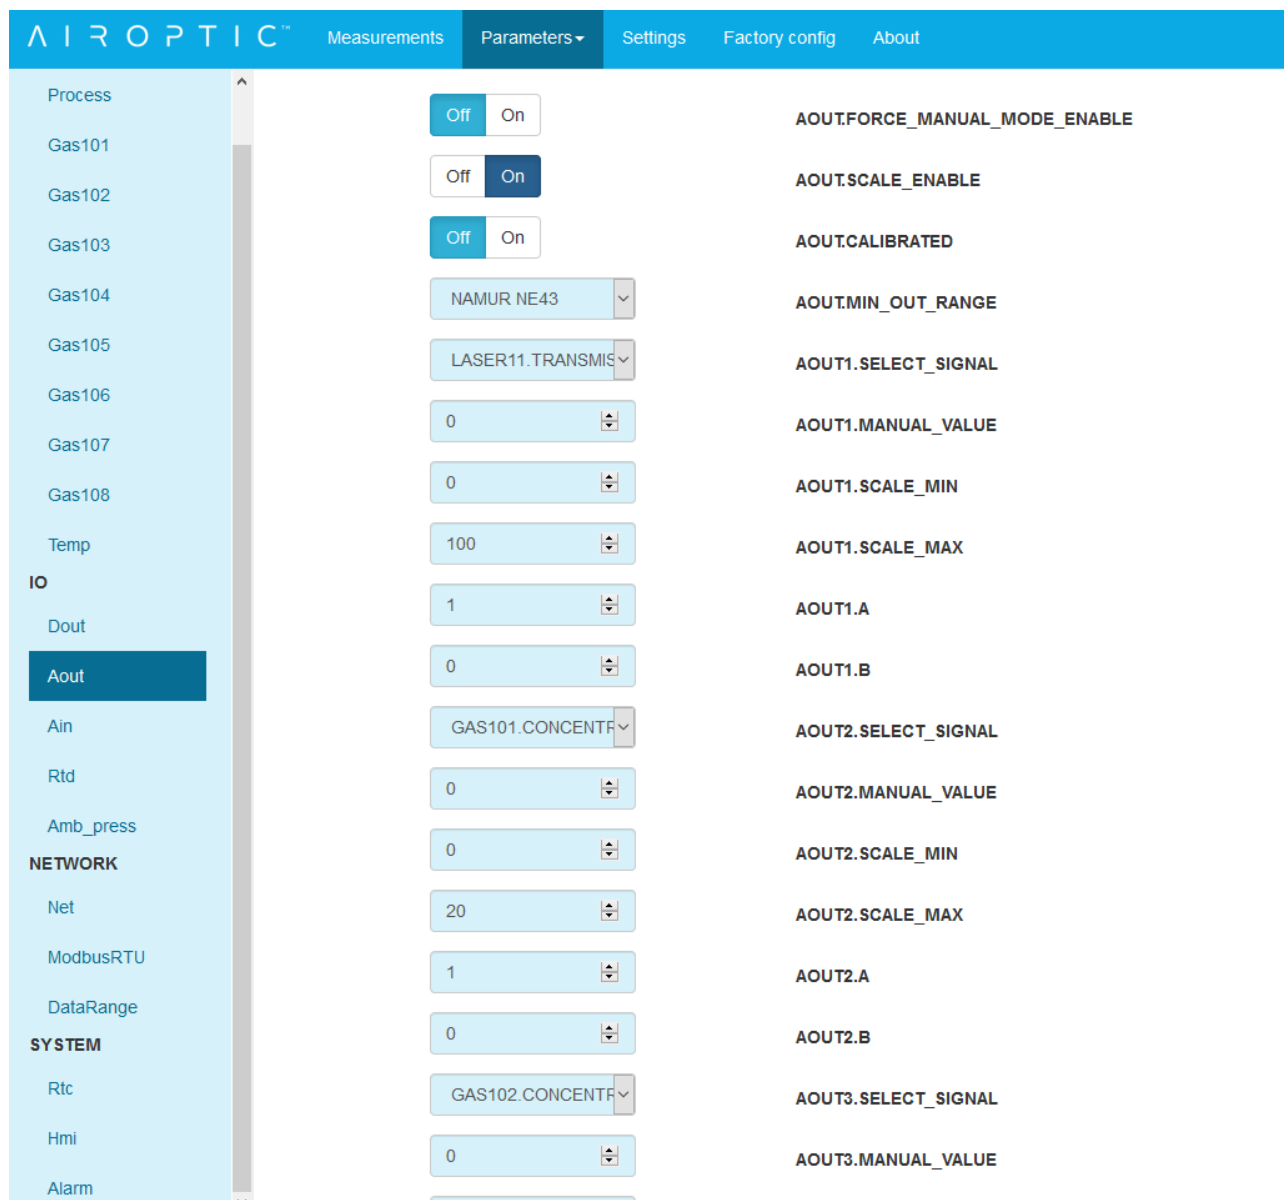

Parameter Name	Control Element	Value / Label
AOUT.FORCE_MANUAL_MODE_ENABLE	Toggle	Off / On
AOUT.SCALE_ENABLE	Toggle	Off / On
AOUT.CALIBRATED	Toggle	Off / On
AOUT.MIN_OUT_RANGE	Dropdown	NAMUR NE43
AOUT1.SELECT_SIGNAL	Dropdown	LASER11.TRANSMIS
AOUT1.MANUAL_VALUE	Numeric Input	0
AOUT1.SCALE_MIN	Numeric Input	0
AOUT1.SCALE_MAX	Numeric Input	100
AOUT1.A	Numeric Input	1
AOUT1.B	Numeric Input	0
AOUT2.SELECT_SIGNAL	Dropdown	GAS101.CONCENTR
AOUT2.MANUAL_VALUE	Numeric Input	0
AOUT2.SCALE_MIN	Numeric Input	0
AOUT2.SCALE_MAX	Numeric Input	20
AOUT2.A	Numeric Input	1
AOUT2.B	Numeric Input	0
AOUT3.SELECT_SIGNAL	Dropdown	GAS102.CONCENTR
AOUT3.MANUAL_VALUE	Numeric Input	0

Figure 105. Aout parameters window.

9.7.16. IO -> Ain (Analog input configuration)

Analog inputs parameters	
Name	Description
<i>AIN.SCALE_ENABLE</i>	Enable/disable calculation of scaling value from range SCALE_MIN, SCALE_MAX
<i>AIN.CALIBRATED</i>	Enable/disable calibration factors

<i>AIN.IIR</i>	Time response for infinite impulse filter
<i>AIN1.SCALE_MIN</i>	Set scale minimum on first input (equivalent 4mA on input)
<i>AIN1.SCALE_MAX</i>	Set scale maximum on first input (equivalent 20mA on input)
<i>AIN1.A</i>	Calibration factor A on first input ($y=Ax+B$)
<i>AIN1.B</i>	Calibration factor B on first input ($y=Ax+B$)
<i>AIN2.SCALE_MIN</i>	Set scale minimum on second input (equivalent 4mA on input)
<i>AIN2.SCALE_MAX</i>	Set scale maximum on second input (equivalent 20mA on input)
<i>AIN2.A</i>	Calibration factor A on second input ($y=Ax+B$)
<i>AIN2.B</i>	Calibration factor B on second input ($y=Ax+B$)
<i>AIN3.SCALE_MIN</i>	Set scale minimum on third input (equivalent 4mA on input)
<i>AIN3.SCALE_MAX</i>	Set scale maximum on third input (equivalent 20mA on input)
<i>AIN3.A</i>	Calibration factor A on third input ($y=Ax+B$)
<i>AIN3.B</i>	Calibration factor B on third input ($y=Ax+B$)
<i>AIN4.SCALE_MIN</i>	Set scale minimum on third input (equivalent 4mA on input)
<i>AIN4.SCALE_MAX</i>	Set scale maximum on third input (equivalent 20mA on input)
<i>AIN4.A</i>	Calibration factor A on fourth input ($y=Ax+B$)

AIN4.B

Calibration factor B on fourth input
($y = Ax + B$)

Table 35. Analog inputs parameters list.

AIROPTIC™

Measurements

Parameters▼

Settings

Factory config

About

MP1

IO

Dout

Aout

Ain

Rtd

Amb_press

NETWORK

SYSTEM

OffOn

OffOn

1

0

700

0

0

0

2500

0

0

0

100

0

0

0

100

0

0

AIN.SCALE_ENABLE

AIN.CALIBRATED

AIN.IIR

AIN1.SCALE_MIN

AIN1.SCALE_MAX

AIN1.A

AIN1.B

AIN2.SCALE_MIN

AIN2.SCALE_MAX

AIN2.A

AIN2.B

AIN3.SCALE_MIN

AIN3.SCALE_MAX

AIN3.A

AIN3.B

AIN4.SCALE_MIN

AIN4.SCALE_MAX

AIN4.A

AIN4.B

Figure 106. Ain parameters window.

9.7.17. IO -> Rtd (Resistance temperature sensor configuration)

Resistance temperature sensor parameters	
Name	Description
RTD.IIR	Time response for infinite impulse filter

Table 36. Resistance temperature sensor parameters list.

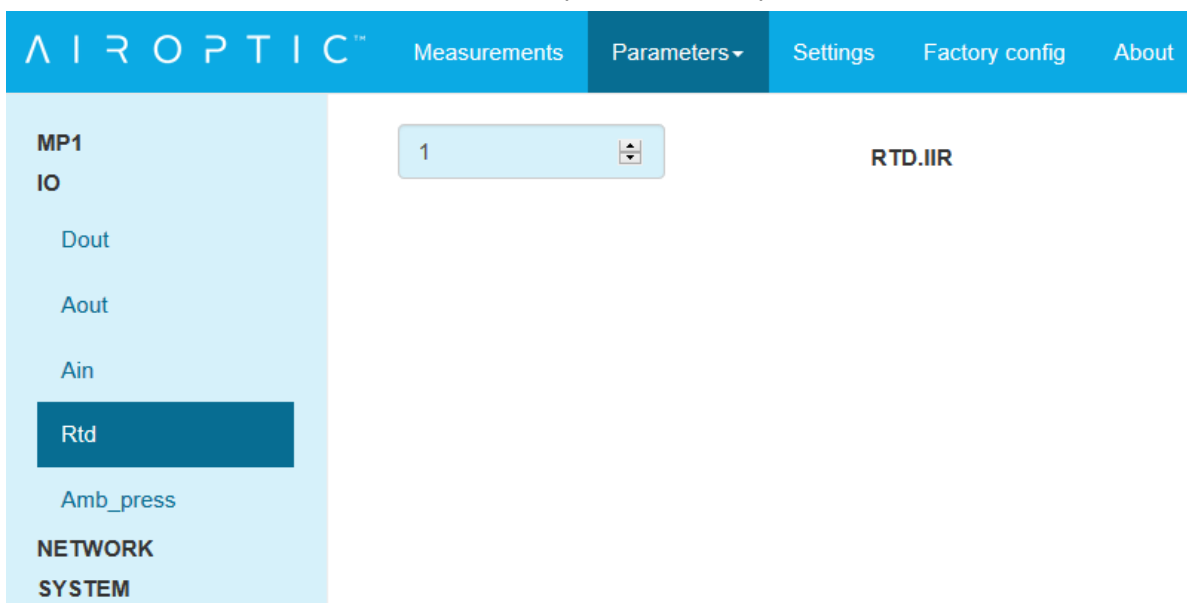


Figure 107. Resistance temperature detector window.

9.7.18. IO -> Amb_press (Ambient pressure sensor configuration)

Ambient pressure sensor parameters	
Name	Description
AMB_PRESS.IIR	Time response for infinite impulse filter

Table 37. Ambient pressure sensor parameters list.


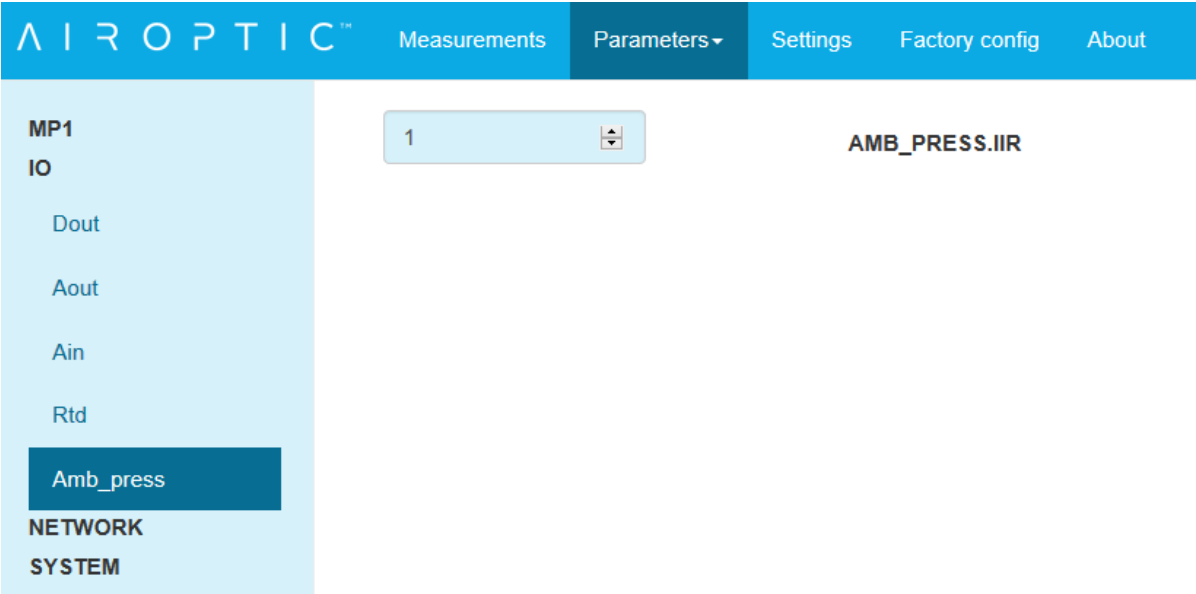


Figure 108. Ambient pressure sensor window.

9.7.19. NETWORK -> Net (Service ethernet port configuration)

Service ethernet port parameters	
Name	Description
NET.SYSTEM_IP_ADDRESS	Service address IP of device
NET.SYSTEM_IP_MASK	Network IP mask
NET.GATEWAY_IP_ADDR	Address of gateway
NET.STREAM_ENABLE	Enable UDP stream to log data by PC GasEYE logger application
NET.STREAM_IP_ADDR	IP address of UDP stream (PC GasEYE logger address)
NET.STREAM_UDP_PORT	UDP stream port (PC GasEYE logger)
NET.STREAM_INTERVAL	Stream frames interval
NET.BROADCAST_STATUS	GasEYE identification broadcast frame
NET.STREAM_BROADCAST_UDP_PORT	Identification broadcast UDP port

Table 38. Service ethernet port parameters list.

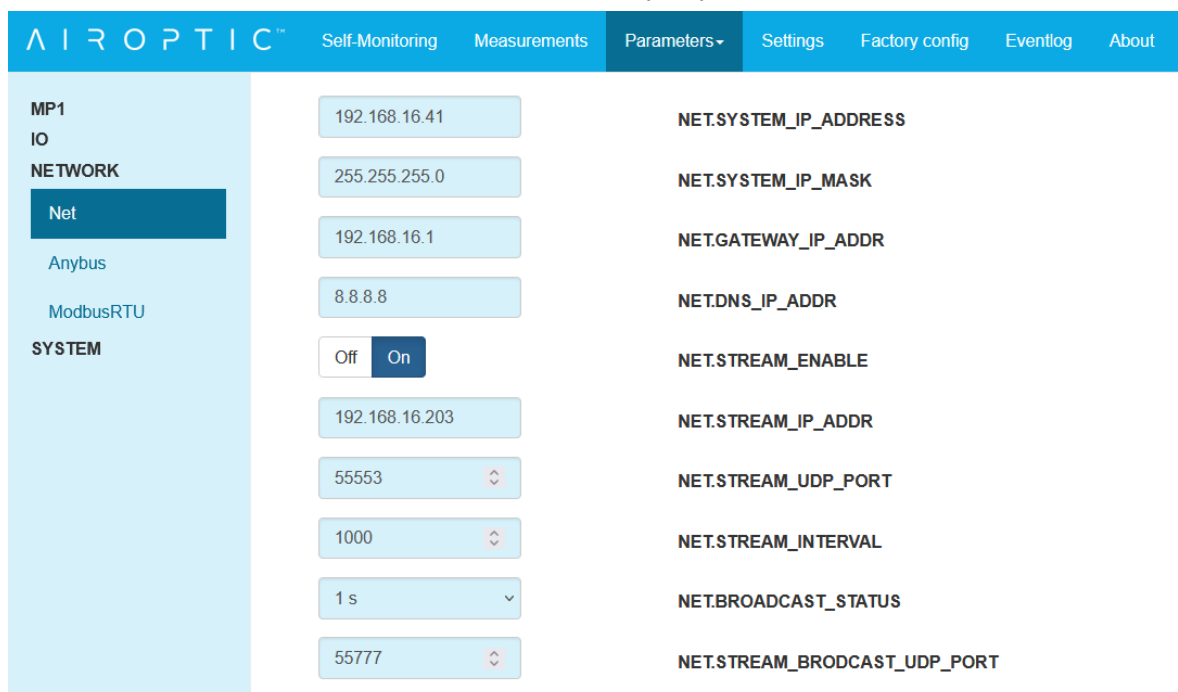


Parameter Name	Value
NET.SYSTEM_IP_ADDRESS	192.168.16.41
NET.SYSTEM_IP_MASK	255.255.255.0
NET.GATEWAY_IP_ADDR	192.168.16.1
NET.DNS_IP_ADDR	8.8.8.8
NET.STREAM_ENABLE	Off ☒ On
NET.STREAM_IP_ADDR	192.168.16.203
NET.STREAM_UDP_PORT	55553
NET.STREAM_INTERVAL	1000
NET.BROADCAST_STATUS	1 s
NET.STREAM_BROADCAST_UDP_PORT	55777

Figure 109. Service ethernet port configuration window.

9.7.20. NETWORK -> Modbus RTU (Modbus slave transmission configuration)

Modbus RTU parameters	
Name	Description
<i>MBUS.BAUD_RATE</i>	Baud rate 9600/19200
<i>MBUS.STOP_BITS</i>	Stop bits STOP_BIT_1/ STOP_BIT_2
<i>MBUS.PARITY</i>	NO_PARITY_8_BIT/EVEN_PARITY_8_BIT/ ODD_PARITY_8_BIT/NO_PARITY_9_BIT
<i>MBUS.ADDR</i>	Modbus device address
<i>MBUS.BORDER</i>	Byte order
<i>MBUS.SWAP</i>	Swap register
<i>MBUS.MAP</i>	Show device Modbus register map

Table 39. Service ethernet port parameters list.

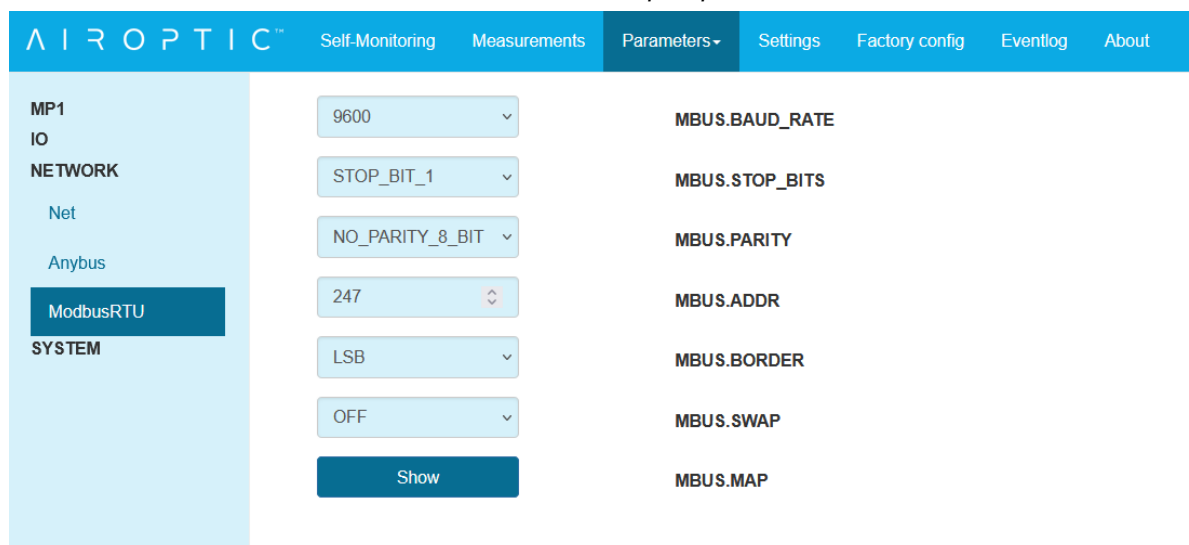

The screenshot shows the AIROPTIC web interface for Modbus RTU configuration. The sidebar on the left has a blue header with the AIROPTIC logo and navigation links: Self-Monitoring, Measurements, Parameters (selected), Settings, Factory config, Eventlog, and About. Below these are system categories: MP1, IO, NETWORK (selected), Net, Anybus, ModbusRTU (highlighted in a dark blue box), and SYSTEM. The main content area displays the Modbus RTU parameters as a list of configuration items, each with a dropdown menu and a corresponding parameter name on the right:


- 9600 (dropdown) → MBUS.BAUD_RATE
- STOP_BIT_1 (dropdown) → MBUS.STOP_BITS
- NO_PARITY_8_BIT (dropdown) → MBUS.PARITY
- 247 (dropdown with up/down arrows) → MBUS.ADDR
- LSB (dropdown) → MBUS.BORDER
- OFF (dropdown) → MBUS.SWAP
- Show (button) → MBUS.MAP

Figure 110. Modbus RTU configuration window.

9.7.21. NETWORK -> Anybus module

Anybus	
Name	Description
ANB.IP_ADDRESS	Anybus IP address
ANB.IP_MASK	Anybus IP mask
ANB.GATEWAY_IP_ADDR	Anybus Gateway IP Adress
ANB.DHCP	ON/OFF Dynamic Host Configuration Protocol
ANB.MODBUS_MAP	Anybus Map
ANB.STAT_CFG	Anybus Module Status and Configuration
ANB.RESET	Reset Anybus Module

Table 40. Anybus module parameter list.

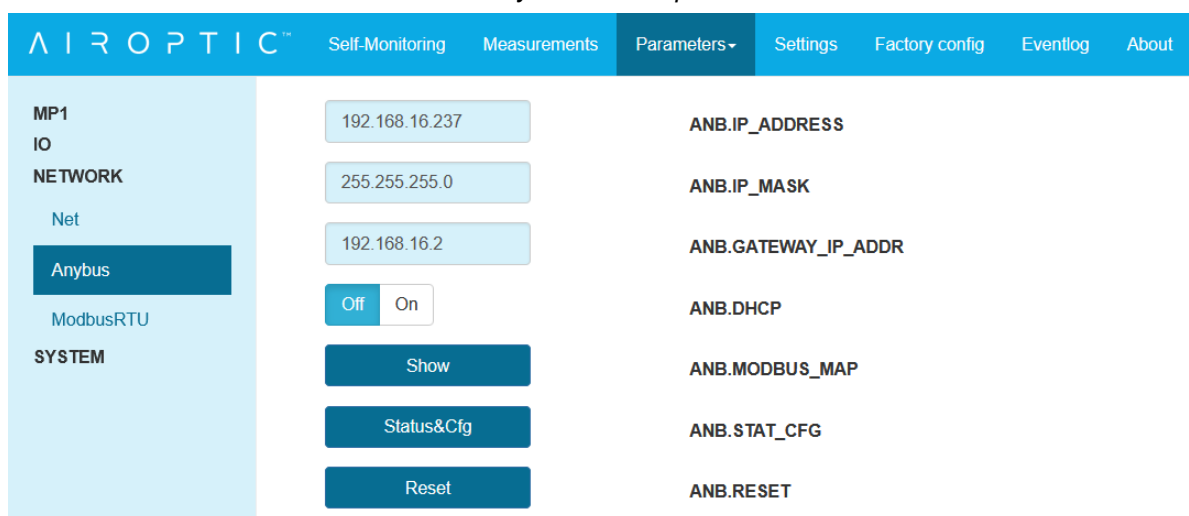

Parameter	Value	Parameter
ANB.IP_ADDRESS	192.168.16.237	ANB.IP_ADDRESS
ANB.IP_MASK	255.255.255.0	ANB.IP_MASK
ANB.GATEWAY_IP_ADDR	192.168.16.2	ANB.GATEWAY_IP_ADDR
ANB.DHCP	Off	ANB.DHCP
ANB.MODBUS_MAP	Show	ANB.MODBUS_MAP
ANB.STAT_CFG	Status&Cfg	ANB.STAT_CFG
ANB.RESET	Reset	ANB.RESET

Figure 111. Anybus configuration window.

9.7.22. System -> Rtc (Real time clock configuration)

Real time clock parameters	
Name	Description
RTC.YEAR	Actual year
RTC.MONTH	Actual month
RTC.DAY	Actual day
RTC.HOUR	Hour of the day
RTC.MINUTE	Minute of the day
RTC.SECOND	Second of the day
RTC.GET_PC_TIME	Copy date and time from PC
RTC.SET	Set new date and time to analyzer

Table 41. Real time clock parameters list.

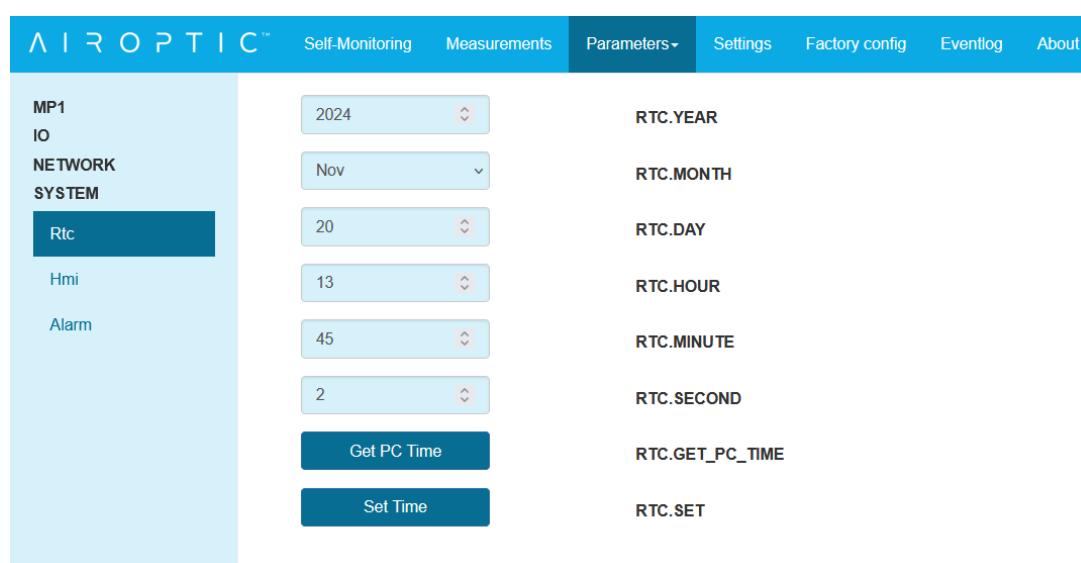


Figure 112. Rtc parameters window.

9.7.23. SYSTEM -> Hmi (Human-Machine interface configuration)

HMI parameters	
Name	Description
HMI.PASSWORD	Set pin (4-digits) to protect device against unauthorized change parameters by HMI

Table 42. HMI parameters list.

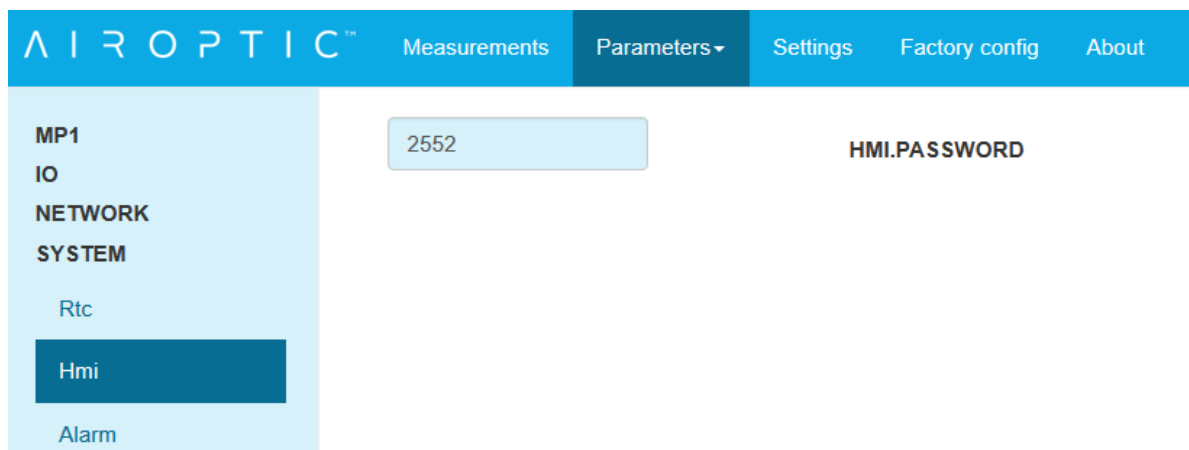


Figure 113. Hmi parameter window.

9.7.24. SYSTEM -> Alarm

Alarm configuration window allow user to configure up to 10 self-defined alarms.

Alarm parameters	
Name	Description
ALARM1.ENABLE	On – alarm on Off – alarm off
ALARM1.AUTORESET_ENABLE	The alarm will automatically reset when condition disappear
ALARM1.RESET	On – reset alarm manually
ALARM1.NORMAL_STATE	Low or high normal state selectable
ALARM1.SIGNAL	Selection of the signal that will be checked
ALARM1.OPERATOR	Determining condition (>;<;>=;<=)
ALARM1.THRESHOLD	Value for condition
ALARM1.HYSTERESIS	Moves the auto reset boundary by the given value
ALARM2.ENABLE	On – alarm on Off – alarm off
ALARM2.AUTORESET_ENABLE	The alarm will automatically reset when condition disappear
ALARM2.RESET	On – reset alarm manually
ALARM2.NORMAL_STATE	Low or high normal state selectable
ALARM2.SIGNAL	Selection of the signal that will be checked
ALARM2.OPERATOR	Determining condition (>;<;>=;<=)
ALARM2.THRESHOLD	Value for condition
ALARM2.HYSTERESIS	Moves the auto reset boundary by the given value
ALARM3.ENABLE	On – alarm on Off – alarm off

ALARM3.AUTORESET_ENABLE	The alarm will automatically reset when condition disappear
ALARM3.RESET	On – reset alarm manually
ALARM3.NORMAL_STATE	Low or high normal state selectable
ALARM3.SIGNAL	Selection of the signal that will be checked
ALARM3.OPERATOR	Determining condition (>;<;>=<=)
ALARM3.THRESHOLD	Value for condition
ALARM3.HYSTERESIS	Moves the auto reset boundary by the given value
ALARM4.ENABLE	On – alarm on Off – alarm off
ALARM4.AUTORESET_ENABLE	The alarm will automatically reset when condition disappear
ALARM4.RESET	On – reset alarm manually
ALARM4.NORMAL_STATE	Low or high normal state selectable
ALARM4.SIGNAL	Selection of the signal that will be checked
ALARM4.OPERATOR	Determining condition (>;<;>=<=)
ALARM4.THRESHOLD	Value for condition
ALARM4.HYSTERESIS	Moves the auto reset boundary by the given value
ALARM5.ENABLE	On – alarm on Off – alarm off
ALARM5.AUTORESET_ENABLE	The alarm will automatically reset when condition disappear
ALARM5.RESET	On – reset alarm manually
ALARM5.NORMAL_STATE	Low or high normal state selectable
ALARM5.SIGNAL	Selection of the signal that will be checked
ALARM5.OPERATOR	Determining condition (>;<;>=<=)
ALARM5.THRESHOLD	Value for condition
ALARM5.HYSTERESIS	Moves the auto reset boundary by the given value
ALARM6.ENABLE	On – alarm on Off – alarm off
ALARM6.AUTORESET_ENABLE	The alarm will automatically reset when condition disappear
ALARM6.RESET	On – reset alarm manually
ALARM6.NORMAL_STATE	Low or high normal state selectable
ALARM6.SIGNAL	Selection of the signal that will be checked
ALARM6.OPERATOR	Determining condition (>;<;>=<=)
ALARM6.THRESHOLD	Value for condition
ALARM6.HYSTERESIS	Moves the auto reset boundary by the given value
ALARM7.ENABLE	On – alarm on Off – alarm off

ALARM7.AUTORESET_ENABLE	The alarm will automatically reset when condition disappear
ALARM7.RESET	On – reset alarm manually
ALARM7.NORMAL_STATE	Low or high normal state selectable
ALARM7.SIGNAL	Selection of the signal that will be checked
ALARM7.OPERATOR	Determining condition (>;<;>=<=)
ALARM7.THRESHOLD	Value for condition
ALARM7.HYSTERESIS	Moves the auto reset boundary by the given value
ALARM8.ENABLE	On – alarm on Off – alarm off
ALARM8.AUTORESET_ENABLE	The alarm will automatically reset when condition disappear
ALARM8.RESET	On – reset alarm manually
ALARM8.NORMAL_STATE	Low or high normal state selectable
ALARM8.SIGNAL	Selection of the signal that will be checked
ALARM8.OPERATOR	Determining condition (>;<;>=<=)
ALARM8.THRESHOLD	Value for condition
ALARM8.HYSTERESIS	Moves the auto reset boundary by the given value
ALARM9.ENABLE	On – alarm on Off – alarm off
ALARM9.AUTORESET_ENABLE	The alarm will automatically reset when condition disappear
ALARM9.RESET	On – reset alarm manually
ALARM9.NORMAL_STATE	Low or high normal state selectable
ALARM9.SIGNAL	Selection of the signal that will be checked
ALARM9.OPERATOR	Determining condition (>;<;>=<=)
ALARM9.THRESHOLD	Value for condition
ALARM9.HYSTERESIS	Moves the auto reset boundary by the given value
ALARM10.ENABLE	On – alarm on Off – alarm off
ALARM10.AUTORESET_ENABLE	The alarm will automatically reset when condition disappear
ALARM10.RESET	On – reset alarm manually
ALARM10.NORMAL_STATE	Low or high normal state selectable
ALARM10.SIGNAL	Selection of the signal that will be checked
ALARM10.OPERATOR	Determining condition (>;<;>=<=)
ALARM10.THRESHOLD	Value for condition
ALARM10.HYSTERESIS	Moves the auto reset boundary by the given value

Table 43. Alarm parameters list.

Alarm signals list	
Name	Description
GAS101.CONCENTRATION	Gas concentration (Measurement id: 0010)
GAS102.CONCENTRATION	Gas concentration (Measurement id: 0020)
GAS103.CONCENTRATION	Gas concentration (Measurement id: 0030)
GAS104.CONCENTRATION	Gas concentration (Measurement id: 0040)
GAS105.CONCENTRATION	Gas concentration (Measurement id: 0050)
GAS106.CONCENTRATION	Gas concentration (Measurement id: 0060)
GAS107.CONCENTRATION	Gas concentration (Measurement id: 0070)
GAS108.CONCENTRATION	Gas concentration (Measurement id: 0080)
TEMP.CALCULATED	Temperature calculated – only applicable in oxygen analyzers on special request (Measurement id 0100)
LASER11.TRANSMISSION	Laser transmission (Measurement id: 0200)
LASER12.TRANSMISSION	Laser transmission (Measurement id: 0201)
LASER13.TRANSMISSION	Laser transmission (Measurement id: 0202)
LASER14.TRANSMISSION	Laser transmission (Measurement id: 0203)
FIBER1.TRANSMISSION	Transmission with RX module
FIBER2.TRANSMISSION	Transmission with RX module
PROCESS.TEMP	Process temperature (Measurement id: 0001)
PROCESS.PRESSURE	Process pressure (Measurement id: 0002)

Table 44. Alarm signals list.

Category	Parameter	Value
SYSTEM	Alarm	
	ALARM1.ENABLE	Off
	ALARM1.AUTORESET_ENABLE	Off
	ALARM1.RESET	Off
	ALARM1.NORMAL_STATE	LOW
	ALARM1.SIGNAL	GAS101.CONCENTR
	ALARM1.OPERATOR	>
	ALARM1.THRESHOLD	0
	ALARM1.HYSTERESIS	0
	ALARM2.ENABLE	Off
	ALARM2.AUTORESET_ENABLE	Off
	ALARM2.RESET	Off
	ALARM2.NORMAL_STATE	LOW
	ALARM2.SIGNAL	GAS101.CONCENTR
	ALARM2.OPERATOR	>
	ALARM2.THRESHOLD	0
ALARM2.HYSTERESIS	0	
ALARM3.ENABLE	Off	

Figure 114. Alarm parameters window.

9.8. Settings tab

Drop-down menu will appear when clicking on the **Settings**.

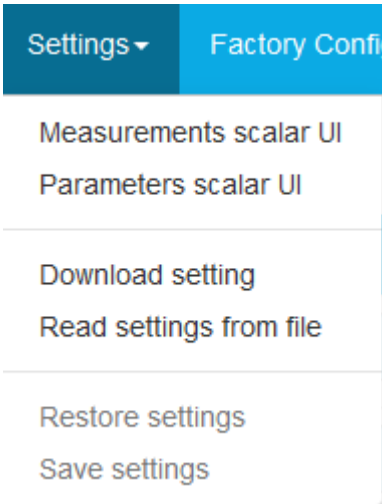


Figure 115. Webserver application - settings window.

Measurement scalar UI	View measurement aliases and units.
Parameters scalar UI	View parameters aliases and units.
Download settings	Download to PC txt file with measurement and parameters aliases and unit type.
Read settings from file	Read txt file with measurements and parameters aliases and unit type.
Restore settings	Restore settings from non volatile memory
Save settings	Send data to device and put dem in non volatile memory

Table 45. Settings window functionalities.

AIROPTIC™ Measurements Parameters Settings▼ Factory Config About			
Measurements scalar User Interface			
id	WS Alias	WS Unit	Description
0001	PROCESS.TEMPERATURE	oC	
0002	PROCESS.PRESSURE	mbar	
0010	CO - GAS101	ppm	
0020	CH4 - GAS102	ppm	
0030	GAS103.CONCENTRATION		
0040	GAS104.CONCENTRATION		
0050	GAS105.CONCENTRATION		
0060	GAS106.CONCENTRATION		
0070	GAS107.CONCENTRATION		
0080	GAS108.CONCENTRATION		
0100	TEMP.CALCULATED	oC	
0200	LASER11.TRANSMISSION	%	

Figure 116. Settings window.

In order to change the unit of chosen parameter or measurement the user shall click on the field that intends to change i.e. optical path length, by selecting one of available unit type.

8010	MEAS.PATH_LENGTH_CH_1	ft
8011	MEAS.PATH_LENGTH_CH_2	m
8012	MEAS.RESPONSE_TIME_T90	cm
8106	GAS101.SPAN_CALIBRATION	mm
8107	GAS101.OFFSET	ft
		in
		yard
		ppm

Figure 117. Settings window - making changes.

To apply changes, click on the **Send** button that will appear next to the edited field.

8010	MEAS.PATH_LENGTH_CH_1	ft	Send	Cancel
------	-----------------------	----	------	--------

Figure 118. Settings window – applying changes.

9.9. Factor Config tab


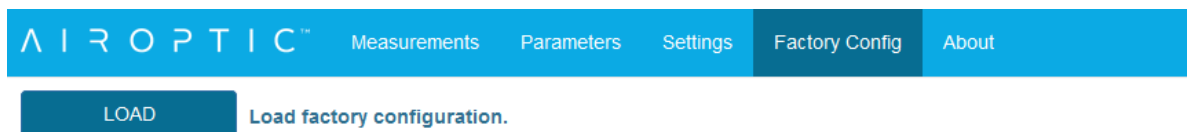


Figure 119. Settings window – applying changes.

Attention: Use LOAD button only if you are sure with you want to do. This option returns device to factory settings. All user settings will be lost.

9.10. About tab

This page presents device firmware version.

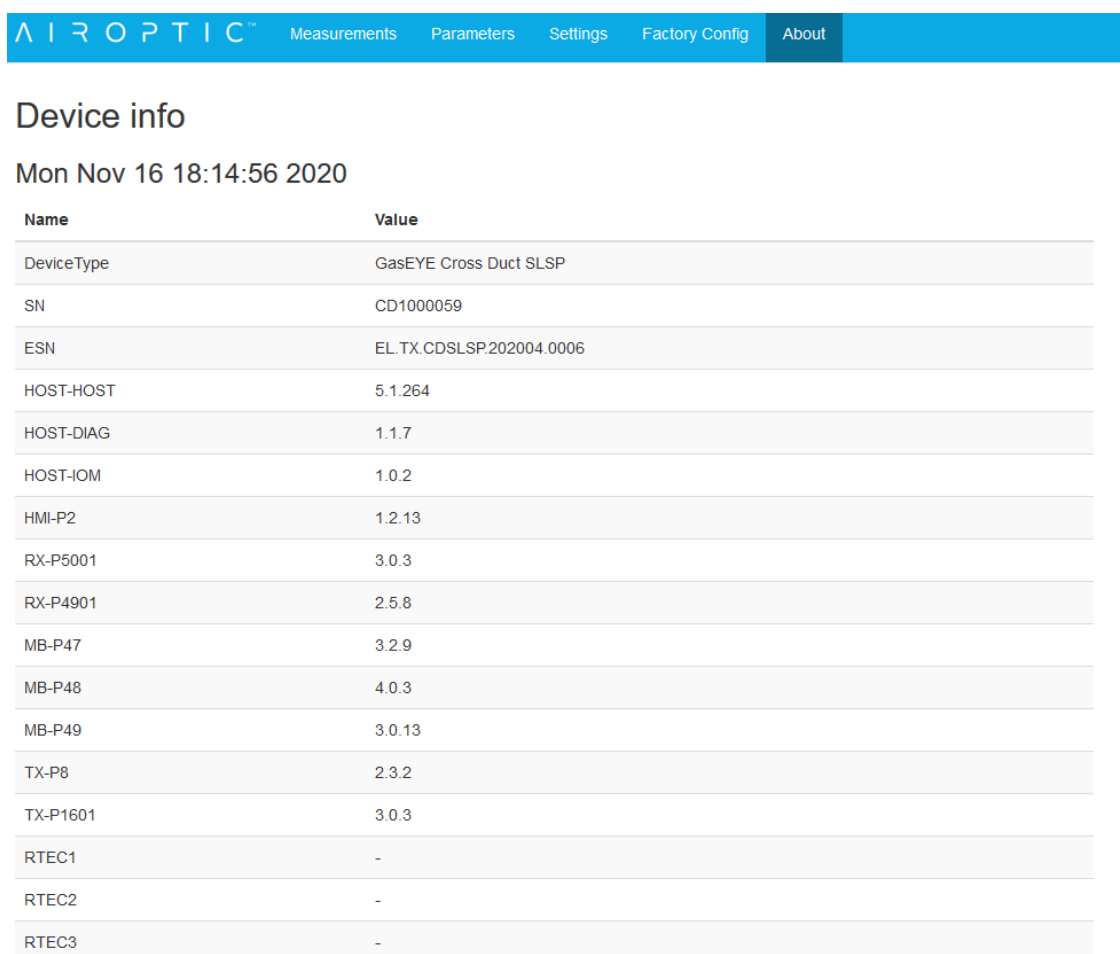

Name	Value
DeviceType	GasEYE Cross Duct SLSP
SN	CD1000059
ESN	EL.TX.CDSLSP202004.0006
HOST-HOST	5.1.264
HOST-DIAG	1.1.7
HOST-IOM	1.0.2
HMI-P2	1.2.13
RX-P5001	3.0.3
RX-P4901	2.5.8
MB-P47	3.2.9
MB-P48	4.0.3
MB-P49	3.0.13
TX-P8	2.3.2
TX-P1601	3.0.3
RTEC1	-
RTEC2	-
RTEC3	-

Figure 120. Device information page.

9.11. Contact information



Address

Airoptic Sp. z o.o.
ul. Rubiez 46B
61-612 Poznan, Poland



Phone

+48 61 6272 128



Email

General contact
info@airoptic.pl

Sales
sales@airoptic.pl

Support
support@airoptic.pl



Website

www.airoptic.pl

Appendix 1. Average life of the main components of the analyzer.

1. Laser

Mean time to failure (MTTF): 50 000 hours.

2. Detector

Mean time to failure (MTTF): 50 000 hours.

Appendix 2. Parameters list.

Below the full list of parameters available through the Webserver is presented. For each parameter there is a brief description of its functionality.

ID	Name	Description
8000	PROCESS.TEMP_IS	Process temperature input signal selection
8001	PROCESS.TEMP_MANUAL_VALUE	Process temperature manual value in [°C]
8003	PROCESS.PRESS_IS	Process pressure input signal selection
8004	PROCESS.PRESS_SENSOR_TYPE	Pressure sensor type selection (absolute/ gauge)
8005	PROCESS.PRESS_MANUAL_VALUE	Process pressure manual value in [mbar]
8010	MEAS.PATH_LENGTH_CH 1	Measuring path length channel 1 in [m]
8011	MEAS.PATH_LENGTH_CH 2	Measuring path length channel 2 in [m]
8012	MEAS.RESPONSE_TIME_T90	Response time (T90) in [s]
8106	GAS101.SPAN_CALIBRATION	Span calibration factor
8107	GAS101.OFFSET	Span offset value
8126	GAS102.SPAN_CALIBRATION	Span calibration factor
8127	GAS102.OFFSET	Span offset value
8146	GAS103.SPAN_CALIBRATION	Span calibration factor
8147	GAS103.OFFSET	Span offset value
8166	GAS104.SPAN_CALIBRATION	Span calibration factor
8167	GAS104.OFFSET	Span offset value
8186	GAS105.SPAN_CALIBRATION	Span calibration factor
8187	GAS105.OFFSET	Span offset value
81A6	GAS106.SPAN_CALIBRATION	Span calibration factor
81A7	GAS106.OFFSET	Span offset value
81C6	GAS107.SPAN_CALIBRATION	Span calibration factor
81C7	GAS107.OFFSET	Span offset value
81E6	GAS108.SPAN_CALIBRATION	Span calibration factor
81E7	GAS108.OFFSET	Span offset value
8209	TEMP.SPAN_CALIBRATION	Span calibration factor
820A	TEMP.OFFSET	Span offset value
9300	DOUT.DO1	Signal selection for digital output
9301	DOUT.DO2	Signal selection for digital output
9302	DOUT.DO3	Signal selection for digital output
9303	DOUT.DO4	Signal selection for digital output
9500	AOUT.FORCE_MANUAL_MODE_ENABLE	Force manual mode for all analog outputs
9501	AOUT.SCALE_ENABLE	Enable scaling range for all analog outputs
9510	AOUT1.SELECT_SIGNAL	Measurement signal selection for the output
9511	AOUT1.MANUAL_VALUE	Manual mode value in scaling range
9512	AOUT1.SCALE_MIN	Scaling range value corresponds to 4 mA
9513	AOUT1.SCALE_MAX	Scaling range value corresponds to 20 mA
9520	AOUT2.SELECT_SIGNAL	Measurement signal selection for the output
9521	AOUT2.MANUAL_VALUE	Manual mode value in scaling range
9522	AOUT2.SCALE_MIN	Scaling range value corresponds to 4 mA
9523	AOUT2.SCALE_MAX	Scaling range value corresponds to 20 mA
9530	AOUT3.SELECT_SIGNAL	Measurement signal selection for the output
9531	AOUT3.MANUAL_VALUE	Manual mode value in scaling range
9532	AOUT3.SCALE_MIN	Scaling range value corresponds to 4 mA
9533	AOUT3.SCALE_MAX	Scaling range value corresponds to 20 mA
9540	AOUT4.SELECT_SIGNAL	Measurement signal selection for the output
9541	AOUT4.MANUAL_VALUE	Manual mode value in scaling range
9542	AOUT4.SCALE_MIN	Scaling range value corresponds to 4 mA
9543	AOUT4.SCALE_MAX	Scaling range value corresponds to 20 mA
9600	AIN.SCALE_ENABLE	Enable scaling range for all analog inputs
9610	AIN1.SCALE_MIN	Scaling range value corresponds to 4 mA
9611	AIN1.SCALE_MAX	Scaling range value corresponds to 20 mA
9620	AIN2.SCALE_MIN	Scaling range value corresponds to 4 mA
9621	AIN2.SCALE_MAX	Scaling range value corresponds to 20 mA
9630	AIN3.SCALE_MIN	Scaling range value corresponds to 4 mA
9631	AIN3.SCALE_MAX	Scaling range value corresponds to 20 mA

9640	AIN4.SCALE_MIN	Scaling range value corresponds to 4 mA
9641	AIN4.SCALE_MAX	Scaling range value corresponds to 20 mA
9901	NET.SYSTEM_IP_ADDRESS	System IP address (x.x.x.x, default: 192.168.16.13)
9902	NET.SYSTEM_IP_MASK	System IP mask (x.x.x.x, default: 255.255.255.0)
9903	NET.GATEWAY_IP_ADDR	Gateway IP address (x.x.x.x, default: 192.168.16.1)
9904	NET.DNS_IP_ADDR	DNS IP address (x.x.x.x, default: 8.8.8.8)
9905	NET.STREAM_ENABLE	Enable UDP streaming
9906	NET.STREAM_IP_ADDR	UDP IP address for streaming (for broadcast select x.x.x.255)
9907	NET.STREAM_UDP_PORT	UDP port number
9908	NET.STREAM_INTERVAL	Sampling time for the UDP streaming in [ms]
A100	ANB.IP_ADDRESS	Add-on module IP address (x.x.x.x)
A101	ANB.IP_MASK	Add-on module IP mask (x.x.x.x)
A102	ANB.GATEWAY_IP_ADDR	Add-on module gateway IP address (x.x.x.x)
A103	ANB.DHCP	Add-on module DHCP enable/disable
BTN	ANB.SHOW	Add-on module register map presentation
A200	RTC.SECOND	Second
A201	RTC.MINUTE	Minute
A202	RTC.HOUR	Hour
A203	RTC.DAY	Day
A204	RTC.MONTH	Month selection
A205	RTC.YEAR	Year
9A01	HMI.PASSWORD	Password for HMI
9C00	ALARM1.ENABLE	Alarm enable/disable
9C01	ALARM1.AUTORESET_ENABLE	Alarm autoreset enable/disable
9C02	ALARM1.RESET	Alarm manual reset
9C03	ALARM1.NORMAL_STATE	Alarm normal state value
9C04	ALARM1.SIGNAL	Alarm signal selection
9C05	ALARM1.OPERATOR	Alarm mathematical operator
9C06	ALARM1.THRESHOLD	Alarm threshold value
9C07	ALARM1.HYSTERESIS	Alarm hysteresis value
9C10	ALARM2.ENABLE	Alarm enable/disable
9C11	ALARM2.AUTORESET_ENABLE	Alarm autoreset enable/disable
9C12	ALARM2.RESET	Alarm manual reset
9C13	ALARM2.NORMAL_STATE	Alarm normal state value
9C14	ALARM2.SIGNAL	Alarm signal selection
9C15	ALARM2.OPERATOR	Alarm mathematical operator
9C16	ALARM2.THRESHOLD	Alarm threshold value
9C17	ALARM2.HYSTERESIS	Alarm hysteresis value
9C20	ALARM3.ENABLE	Alarm enable/disable
9C21	ALARM3.AUTORESET_ENABLE	Alarm autoreset enable/disable
9C22	ALARM3.RESET	Alarm manual reset
9C23	ALARM3.NORMAL_STATE	Alarm normal state value
9C24	ALARM3.SIGNAL	Alarm signal selection
9C25	ALARM3.OPERATOR	Alarm mathematical operator
9C26	ALARM3.THRESHOLD	Alarm threshold value
9C27	ALARM3.HYSTERESIS	Alarm hysteresis value
9C30	ALARM4.ENABLE	Alarm enable/disable
9C31	ALARM4.AUTORESET_ENABLE	Alarm autoreset enable/disable
9C32	ALARM4.RESET	Alarm manual reset
9C33	ALARM4.NORMAL_STATE	Alarm normal state value
9C34	ALARM4.SIGNAL	Alarm signal selection
9C35	ALARM4.OPERATOR	Alarm mathematical operator
9C36	ALARM4.THRESHOLD	Alarm threshold value
9C37	ALARM4.HYSTERESIS	Alarm hysteresis value
9C40	ALARM5.ENABLE	Alarm enable/disable
9C41	ALARM5.AUTORESET_ENABLE	Alarm autoreset enable/disable
9C42	ALARM5.RESET	Alarm manual reset
9C43	ALARM5.NORMAL_STATE	Alarm normal state value
9C44	ALARM5.SIGNAL	Alarm signal selection
9C45	ALARM5.OPERATOR	Alarm mathematical operator
9C46	ALARM5.THRESHOLD	Alarm threshold value
9C47	ALARM5.HYSTERESIS	Alarm hysteresis value
9C50	ALARM6.ENABLE	Alarm enable/disable

9C51	ALARM6.AUTORESET_ENABLE	Alarm autoreset enable/disable
9C52	ALARM6.RESET	Alarm manual reset
9C53	ALARM6.NORMAL_STATE	Alarm normal state value
9C54	ALARM6.SIGNAL	Alarm signal selection
9C55	ALARM6.OPERATOR	Alarm mathematical operator
9C56	ALARM6.THRESHOLD	Alarm threshold value
9C57	ALARM6.HYSTERESIS	Alarm hysteresis value
9C60	ALARM7.ENABLE	Alarm enable/disable
9C61	ALARM7.AUTORESET_ENABLE	Alarm autoreset enable/disable
9C62	ALARM7.RESET	Alarm manual reset
9C63	ALARM7.NORMAL_STATE	Alarm normal state value
9C64	ALARM7.SIGNAL	Alarm signal selection
9C65	ALARM7.OPERATOR	Alarm mathematical operator
9C66	ALARM7.THRESHOLD	Alarm threshold value
9C67	ALARM7.HYSTERESIS	Alarm hysteresis value
9C70	ALARM8.ENABLE	Alarm enable/disable
9C71	ALARM8.AUTORESET_ENABLE	Alarm autoreset enable/disable
9C72	ALARM8.RESET	Alarm manual reset
9C73	ALARM8.NORMAL_STATE	Alarm normal state value
9C74	ALARM8.SIGNAL	Alarm signal selection
9C75	ALARM8.OPERATOR	Alarm mathematical operator
9C76	ALARM8.THRESHOLD	Alarm threshold value
9C77	ALARM8.HYSTERESIS	Alarm hysteresis value
9C80	ALARM9.ENABLE	Alarm enable/disable
9C81	ALARM9.AUTORESET_ENABLE	Alarm autoreset enable/disable
9C82	ALARM9.RESET	Alarm manual reset
9C83	ALARM9.NORMAL_STATE	Alarm normal state value
9C84	ALARM9.SIGNAL	Alarm signal selection
9C85	ALARM9.OPERATOR	Alarm mathematical operator
9C86	ALARM9.THRESHOLD	Alarm threshold value
9C87	ALARM9.HYSTERESIS	Alarm hysteresis value
9C90	ALARM10.ENABLE	Alarm enable/disable
9C91	ALARM10.AUTORESET_ENABLE	Alarm autoreset enable/disable
9C92	ALARM10.RESET	Alarm manual reset
9C93	ALARM10.NORMAL_STATE	Alarm normal state value
9C94	ALARM10.SIGNAL	Alarm signal selection
9C95	ALARM10.OPERATOR	Alarm mathematical operator
9C96	ALARM10.THRESHOLD	Alarm threshold value
9C97	ALARM10.HYSTERESIS	Alarm hysteresis value